

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Best Choice Products](#) /
- › [Best Choice Products Kids Electric Musical Guitar Play Set Instruction Manual](#)

## Best Choice Products SKY7142

# Best Choice Products Kids Electric Musical Guitar Play Set Instruction Manual

Model: SKY7142

## INTRODUCTION

This manual provides essential information for the safe and proper use of your Best Choice Products Kids Electric Musical Guitar Play Set. Please read all instructions carefully before assembly and operation. The play set is designed to encourage creativity and musical exploration in children, featuring a guitar, amplifier, and microphone with a stand. It includes demo songs, a whammy bar, and an AUX input for connecting external music devices.

## SAFETY INFORMATION

### WARNING:

- Not for children under 3 years old. Small parts may pose a choking hazard.
- Adult supervision is recommended during play.
- Ensure all battery compartments are securely closed.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the toy is not used for an extended period.

## WHAT'S IN THE BOX

- Electric Toy Guitar
- Amplifier
- Microphone with Stand
- AUX Cable
- Guitar Strap
- 2 Sticker Sheets
- Assembly Guide (this manual)



*Image: All components of the Kids Electric Musical Guitar Play Set, including the black guitar, amplifier, microphone with stand, and sticker sheets.*

## SETUP

- 1. Install Batteries:** The guitar requires 3 AA batteries and the amplifier requires 3 AA batteries (total 6 AA batteries, not included). Locate the battery compartments on the back of the guitar and amplifier. Use a screwdriver to open, insert batteries with correct polarity, and securely close the compartments.



*Image: Rear view of the toy guitar, highlighting the battery compartment and strap attachment points.*

2. **Assemble Microphone Stand:** Connect the microphone stand sections together. The stand is adjustable in height. Insert the microphone into the holder on the stand.



*Image: The microphone attached to its adjustable stand, ready for use.*

3. **Connect Microphone to Amplifier:** Plug the microphone cable into the designated microphone input jack on the amplifier.
4. **Connect Guitar to Amplifier:** Use the provided cable to connect the guitar's output jack to the amplifier's guitar input jack.



*Image: A detailed view of the toy guitar's body, showing the strings, whammy bar, and control knobs.*

5. **Attach Guitar Strap:** Secure the guitar strap to the attachment points on the guitar for comfortable play.

## OPERATING INSTRUCTIONS

### Guitar Functions:

- **Power On/Off:** Use the power switch on the guitar to turn it on or off.
- **Demo Songs:** Press the "Demo" button to cycle through 6 pre-recorded demo songs.
- **Whammy Bar:** Use the whammy bar to add sound effects to your guitar play.
- **Strumming:** Strum the pretend strings to activate guitar sounds.
- **Note Buttons:** Press the various buttons on the guitar neck to play different notes and melodies.
- **Lights:** The guitar features flashing lights that activate during play, enhancing the experience.







*Image: A full view of the black electric toy guitar, showcasing its design and features.*

### **Microphone and Amplifier Functions:**

- **Microphone Use:** Speak or sing into the microphone. Your voice will be amplified through the connected amplifier.
- **Volume Control:** Adjust the volume knob on the amplifier to control the output level of both the guitar and microphone.
- **AUX Input:** Connect an external media device (e.g., smartphone, MP3 player) to the AUX input on the amplifier using the provided AUX cable. This allows you to play your own music through the amplifier and sing along.





*Image: A close-up of the toy amplifier, showing its control knobs, input jacks, and speaker grille.*

## Official Product Videos:

Your browser does not support the video tag.

*Video: A brief demonstration of the Red Guitar for Kids, showcasing its features and playability. This video is provided by the seller, Drmukie.*

## MAINTENANCE

- **Cleaning:** Wipe the surfaces of the guitar, amplifier, and microphone with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the play set in a cool, dry place away from direct sunlight and moisture when not in use.
- **Battery Care:** Remove batteries if the product will not be used for an extended period to prevent leakage and damage.

## TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
No sound from guitar/microphone.	<ul style="list-style-type: none"> <li>◦ Check if the power switch on the guitar and amplifier is ON.</li> <li>◦ Ensure batteries are correctly installed and not depleted. Replace if necessary.</li> <li>◦ Verify all cables (guitar to amp, mic to amp) are securely connected.</li> <li>◦ Adjust the volume knob on the amplifier.</li> </ul>
Distorted sound.	<ul style="list-style-type: none"> <li>◦ Lower the volume on the amplifier.</li> <li>◦ Check for loose connections.</li> <li>◦ Replace batteries if they are low.</li> </ul>
Lights not working.	<ul style="list-style-type: none"> <li>◦ Ensure the guitar is powered on.</li> <li>◦ Check or replace batteries.</li> </ul>

## SPECIFICATIONS

- **Product Dimensions:** 9.5" (L) x 1" (W) x 27.25" (H)
- **Item Weight:** 2.7 pounds
- **Model Number:** SKY7142
- **Manufacturer Recommended Age:** 3 years and up
- **Batteries Required:** 6 AA batteries (3 for guitar, 3 for amp)



*\*Pink Color Shown*

*Image: A child happily playing with the pink version of the electric guitar and microphone set, demonstrating its size and interactive nature.*

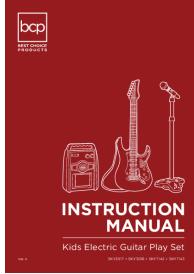
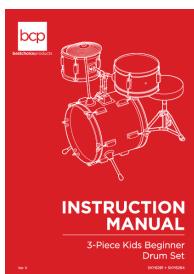
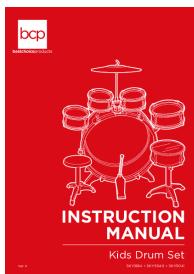
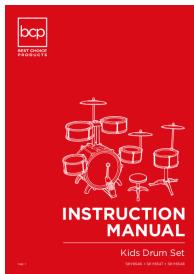
## **WARRANTY AND SUPPORT**

For warranty information or customer support, please contact Best Choice Products directly. Refer to the product packaging or their official website for the most current contact details.

**Manufacturer:** Best Choice Products

© 2025 Best Choice Products. All rights reserved.

## **Related Documents - SKY7142**

	<p><a href="#"><b>Best Choice Products Kids Electric Guitar Play Set Instruction Manual</b></a>  Official instruction manual for the Best Choice Products Kids Electric Guitar Play Set (SKY3017, SKY3018, SKY7142, SKY7143). Learn how to set up, operate, and maintain your toy guitar, amplifier, and microphone.</p>
	<p><a href="#"><b>Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set - SKY6910, 6911, 6912</b></a>  Overview of parts and components for the Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set, models SKY6910, SKY6911, and SKY6912. This document outlines the various numbered parts and lettered components that make up the toy kitchen.</p>
	<p><a href="#"><b>Best Choice Products 3-Piece Kids Beginner Drum Set Instruction Manual</b></a>  Comprehensive instruction manual for assembling and using the Best Choice Products 3-Piece Kids Beginner Drum Set (models SKY6261, SKY6264). Includes parts list, assembly steps, and warranty information.</p>
	<p><a href="#"><b>Best Choice Products Kids Drum Set Instruction Manual SKY1884</b></a>  Instruction manual for the Best Choice Products Kids Drum Set (Model SKY1884, SKY5040, SKY5041), including parts list, assembly instructions, and warranty information.</p>
	<p><a href="#"><b>Best Choice Products Kids Drum Set Instruction Manual</b></a>  Instruction manual for the Best Choice Products Kids Drum Set (Models SKY6546, SKY6547, SKY6548), detailing parts identification, assembly steps for classic and upright configurations, battery warnings, care instructions, and warranty information.</p>
	<p><a href="#"><b>Best Choice Products Farmhouse Kitchen Set Instruction Manual</b></a>  Instruction manual for the Best Choice Products Farmhouse Kitchen Set (Models SKY6344 + SKY6345), detailing assembly, parts, and safety information.</p>

