



W002466667

Ebern Designs Carpi 47 Inch Round Dining Table User Manual

Model: W002466667

1. INTRODUCTION

Thank you for choosing the Ebern Designs Carpi 47 Inch Round Dining Table. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new dining table. Please read this manual thoroughly before beginning assembly and keep it for future reference.



Image 1.1: The Ebern Designs Carpi 47 Inch Round Dining Table, showcasing its round brown top and black crisscrossed metal base, suitable for seating up to four people.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury and damage to the product:

- Always assemble the table on a soft, clean surface to prevent scratches.
- Ensure all screws and bolts are securely tightened before use. Periodically check and re-tighten fasteners.
- Do not stand or sit on the table.
- Do not exceed the recommended weight capacity of the table.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Use only the provided hardware and tools for assembly.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are

missing or damaged, please contact customer support.

- Round Tabletop (Engineered Wood)
- Table Base Frame (Powder-Coated Steel)
- Assembly Hardware (Screws, Washers, Allen Key)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface (e.g., a carpet or blanket) to prevent scratching the tabletop or floor.
2. **Assemble Base Frame:** Identify the components of the table base. Connect the crisscrossed metal frame pieces using the provided screws and the Allen key. Ensure all connections are snug but do not overtighten initially.
3. **Attach Tabletop to Base:** Carefully place the tabletop upside down on your protected surface. Align the assembled base frame with the pre-drilled holes on the underside of the tabletop.
4. **Secure Tabletop:** Insert the remaining screws through the base frame into the tabletop. Tighten all screws evenly until secure. Do not overtighten to avoid damaging the wood.
5. **Final Tightening:** Once all screws are in place, go back and firmly tighten all fasteners on both the base and where the base connects to the tabletop.
6. **Upright the Table:** With the help of another person, carefully turn the assembled table upright. Place it in its desired location.



Image 4.1: An angled view of the assembled dining table, showing the sturdy connection between the round tabletop and the

crisscrossed metal base.

5. SETUP

After assembly, place your dining table on a level surface. Ensure there is adequate space around the table for chairs and comfortable movement. Avoid placing the table in direct sunlight or near heat sources to prevent material degradation.

6. OPERATING THE TABLE

This dining table is designed for indoor use to accommodate dining activities. It can comfortably seat up to four people. Avoid placing excessively hot items directly on the tabletop without a protective coaster or mat. Distribute weight evenly across the surface.

7. MAINTENANCE

Proper care will extend the life and appearance of your dining table:

- **Cleaning:** Wipe the tabletop and base with a soft, damp cloth. For spills, clean immediately to prevent staining. Avoid harsh chemicals or abrasive cleaners.
- **Protection:** Use placemats and coasters to protect the tabletop from scratches, heat, and moisture.
- **Fasteners:** Periodically check all screws and bolts and re-tighten them as needed to maintain stability.
- **Environment:** Maintain a stable room temperature and humidity to prevent warping or cracking of the engineered wood.



Image 7.1: A detailed view of the tabletop edge, highlighting the layered construction of the engineered wood material.

8. TROUBLESHOOTING

If you encounter any issues with your dining table, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Table wobbles	Uneven floor or loose fasteners	Ensure table is on a level surface. Check and tighten all assembly screws.
Scratches on tabletop	Sharp objects or abrasive cleaning	Use placemats/coasters. Clean with soft cloth. Minor scratches may be buffed with furniture polish.
Parts missing during assembly	Packaging oversight	Review package contents list. Contact customer support for replacement parts.

9. SPECIFICATIONS

Key specifications for the Ebern Designs Carpi 47 Inch Round Dining Table:

- **Brand:** Generic (Manufacturer: Ebern Designs)

- **Model Number:** W002466667
- **Colour:** Brown (Tabletop), Black (Base)
- **Material:** Engineered Wood (Tabletop), Powder-Coated Steel (Base)
- **Shape:** Round
- **Table Design:** Dining Table
- **Special Features:** Heavy Duty, Fully KD (Knock-Down) for simple assembly
- **Dimensions (Approximate):** 47-48 inches (Diameter), 30 inches (Height)
- **Seating Capacity:** Up to 4 people



Image 9.1: Dimensional drawing of the dining table, indicating a diameter of approximately 48 inches and a height of 30 inches.

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the warranty card included with your purchase or contact the retailer. If you require assistance with assembly, missing parts, or have any questions not covered in this manual, please contact Ebern Designs customer support through your point of purchase or their official website.