

## KRIB BLING XQB

# KRIB BLING 17.7 lbs Portable Automatic Washing Machine (Model XQB) Instruction Manual

Brand: KRIB BLING | Model: XQB

## 1. INTRODUCTION

Thank you for choosing the KRIB BLING 17.7 lbs Portable Automatic Washing Machine. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before use and retain it for future reference.

This compact, full-automatic washing machine is designed for convenience in various living spaces, including apartments, dorms, RVs, and for camping. It features a 17.7 lbs capacity, 10 washing programs, and 8 water level selections to meet diverse laundry needs.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the washing machine is placed on a stable, level surface to prevent vibration and noise during operation.
- Do not overload the machine beyond its 17.7 lbs capacity. Refer to the capacity guidelines for different fabric types.
- Keep children and pets away from the appliance during operation. Utilize the child lock feature for added safety.
- Ensure all water inlet and drain hoses are securely connected to prevent leaks.
- Unplug the appliance from the power outlet and turn off the water supply when not in use or during maintenance.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel for any repairs.

## 3. WHAT'S IN THE BOX

Your KRIB BLING Portable Automatic Washing Machine package includes:

- 1 x KRIB BLING Automatic Washing Machine
- 1 x Instruction Manual
- 1 x Water Inlet Hose
- 1 x Drain Hose
- 1 x Washing Impeller

- 1 x Adaptor

## 4. SETUP AND INSTALLATION

Follow these steps to set up your washing machine:

1. **Unpacking:** Carefully remove the washing machine and all accessories from the packaging.
2. **Positioning:** Place the machine on a firm, level surface. Ensure there is adequate space around the unit for ventilation and hose connections.
3. **Connecting the Water Inlet Hose:** Attach one end of the inlet hose to the water inlet on the back of the washing machine. Connect the other end to a suitable water faucet. Ensure all connections are tight to prevent leaks.
4. **Connecting the Drain Hose:** Securely attach the drain hose to the drain outlet on the machine. Position the other end of the drain hose into a sink, bathtub, or designated drain area. The built-in drain pump allows for flexible drainage angles.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: The portable washing machine with its water inlet hose connected to a standard kitchen faucet, ready for operation.



Image: A detailed view highlighting the inlet pipe and water inlet on the washing machine, indicating where connections should be made.

Video: This video demonstrates the basic setup and usage of the KRIB BLING washing machine, including water connections and starting a wash cycle.

Video: This video provides instructions on how to repair or properly connect the inlet hose, ensuring a secure and leak-free water supply.

## 5. OPERATING INSTRUCTIONS

Your washing machine features a multi-functional control panel with an LED display for easy operation.



4

Powder levels

10

Commonly  
used programs

24

24-hour delay  
cleaning function

Image: A close-up view of the control panel, showing the LED display, program selection buttons, water level options, and child lock indicator.

### 5.1. Control Panel Overview

- **LED Display:** Shows remaining time, delay start hours, and current program stage.
- **Program Selection:** Choose from 10 washing programs.

- **Water Level Selection:** Select from 8 water levels (Minimum 1/2 to High 7/8).
- **Delay Start:** Set a delayed start time for your wash cycle.
- **Child Lock:** Prevents accidental changes to settings during operation.

## 5.2. Washing Programs

The machine offers 10 distinct programs:

1. Standard
2. Soft
3. Quick Wash
4. Heavy Duty
5. Soak Wash
6. Wash Only
7. Spin Only
8. Tub Clean
9. Tub Air Dry
10. Water Recycle

To select a program, press the 'Program' button until your desired program number is displayed on the LED screen.

## 5.3. Water Level Selection

After selecting a program, you can adjust the water level by pressing the 'Water Level' button. Choose from 8 available levels to match your laundry load size.

## 5.4. Child Lock Function

To activate the child lock, press and hold the 'Water Level' and 'Program' buttons simultaneously for 3 seconds. The 'CL' indicator will appear on the LED display. To deactivate, repeat the process.

## 5.5. Starting a Wash Cycle

1. Load your clothes into the inner tub.
2. Add appropriate detergent.
3. Press the 'Power on/off' button.
4. Select your desired washing program and water level.
5. Press the 'Start/Pause' button to begin the cycle.

## 6. KEY FEATURES

---

- **Full Automatic Operation:** This 2-in-1 compact washer handles washing and spinning automatically after program and water level selection, freeing up your time.
- **Integrated Drain Pump:** Equipped with a powerful drain pump for convenient water drainage from various angles.
- **Portable and Space-Saving Design:** Its compact size makes it an ideal laundry solution for small living spaces such as RVs, camping setups, dorm rooms, and apartments.
- **Automatic Imbalance Adjustment:** The machine features an imbalance adjustment system to minimize

shaking and vibration during wash and spin cycles, ensuring stability and reducing noise.

- **Generous Capacity:** The inner tub can accommodate up to 17.7 lbs of laundry, suitable for households of 3-4 members.
- **Durable Stainless Steel Tub:** The inner tub is constructed from stainless steel with a diamond honeycomb design to protect clothing from damage during washing.







Image: The main product view of the KRIB BLING portable washer, highlighting its 17.7 lbs capacity and compact dimensions.

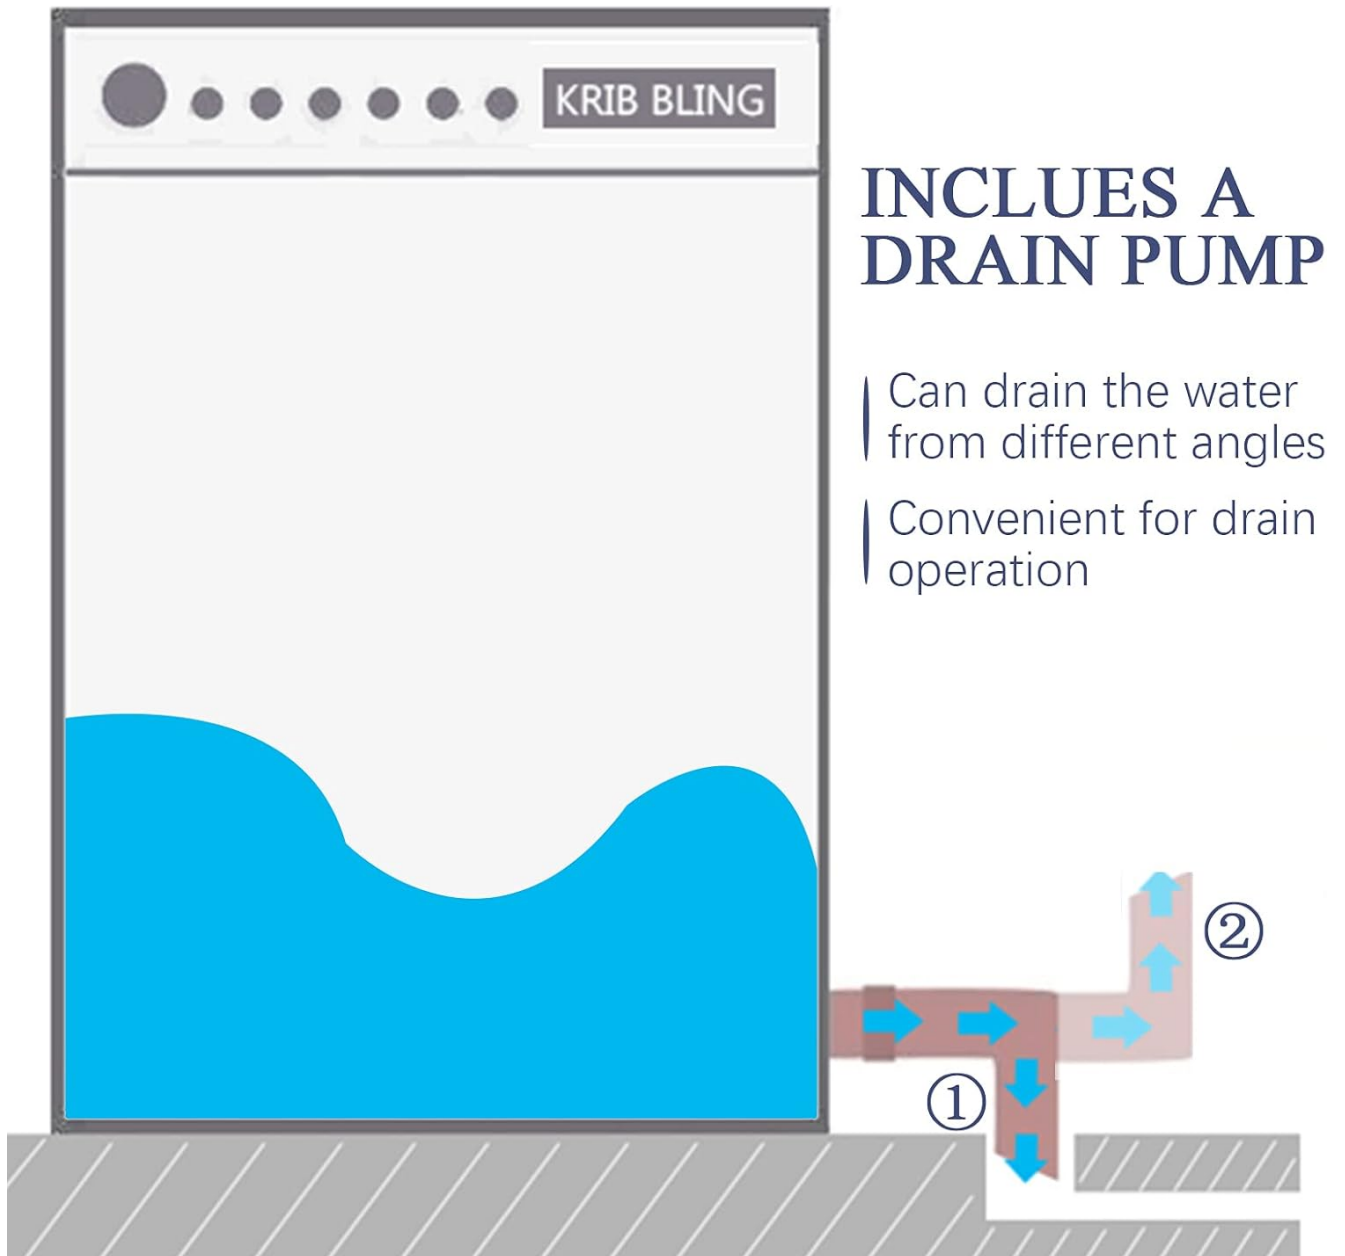 


Image: A diagram demonstrating the functionality of the integrated drain pump, allowing water to be expelled efficiently.

# IDEAL FOR VARIOUS OCCASIONS!



Apartment



Dorm



RV camping

 


Bathroom



Image: The portable washing machine is depicted in different compact settings, illustrating its suitability for apartments, dorms, and RV camping.

## SOLVE YOUR LAUNDRY TROUBLES

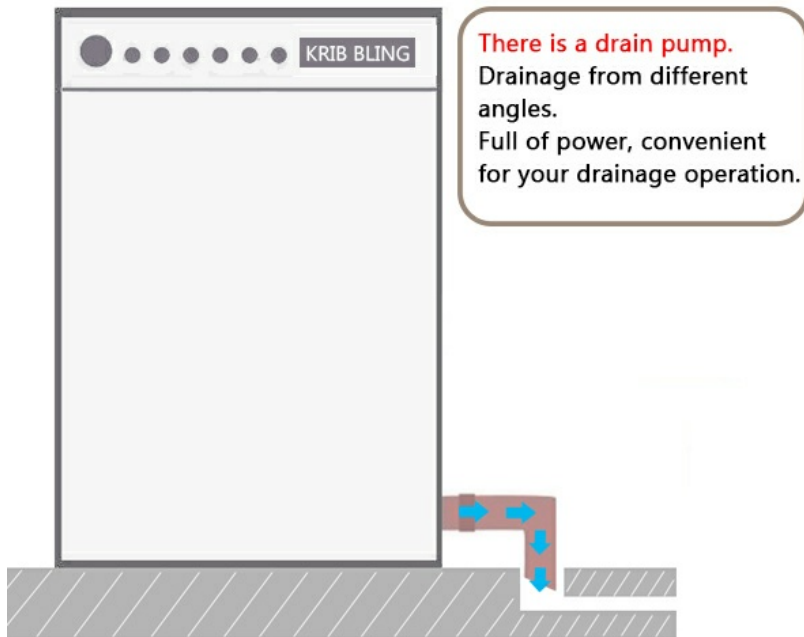

## PACKAGE CONTENTS

- 1 x Washing machine
- 1 x Instruction Manual
- 1 x Water inlet hose
- 1 x Water outlet hose
- 1 x Bottom cover

Image: An illustration demonstrating the automatic imbalance adjustment feature, which helps maintain stability and reduce noise during operation.



Image: A cutaway view of the powerful motor, emphasizing its high speed, all-copper wiring, stability, and durability for effective cleaning.





Image: A close-up of the stainless steel inner tub, showcasing its diamond honeycomb design and mini drainage holes for gentle yet effective washing.

## 7. MAINTENANCE AND CARE

---

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.
- **Cleaning the Inner Tub:** Use the 'Tub Clean' program regularly to maintain hygiene and prevent odor buildup.
- **Filter Cleaning:** Periodically check and clean the built-in lint filter to ensure optimal performance.
- **Drain Hose:** Ensure the drain hose is free from kinks or blockages.
- **Storage:** If storing the machine for an extended period, drain all water, clean the tub, and unplug the power cord.

## 8. TROUBLESHOOTING

---

If you encounter any issues with your washing machine, refer to the following common problems and solutions:

- **Machine Not Starting:** Ensure the power cord is securely plugged in and the water supply is turned on. Check if the lid is properly closed.
- **Water Leakage:** Verify that all hose connections (inlet and drain) are tight and secure. Check for any damage to the hoses.
- **Excessive Vibration/Noise:** Ensure the machine is on a level surface. Reduce the laundry load if it is overloaded. The automatic imbalance adjustment system should help mitigate this.
- **Poor Drainage:** Check the drain hose for kinks or blockages. Ensure the drain pump is functioning correctly.
- **Clothes Not Clean:** Ensure you are using the correct amount of detergent and selecting an appropriate wash program and water level for the load size and fabric type.

For persistent issues not covered here, please refer to the warranty and support section.

## 9. SPECIFICATIONS

---

 
 
Feature	Detail
Brand Name	KRIB BLING
Model Info	XQB
Item Weight	46 pounds
Product Dimensions	20 x 20 x 34 inches
Capacity	17.7 Pounds
Noise Level	59 Decibels
Installation Type	Freestanding
Color	Gold
Control Console	Push Button
Standard Cycles	10
Access Location	Top Load
Special Feature	Adjustable Leveling Legs





## 10. WARRANTY AND SUPPORT

This KRIB BLING washing machine comes with a 1-year manufacturer's warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

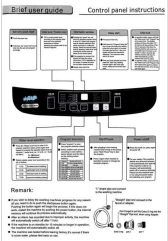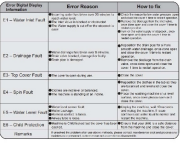For technical support, warranty claims, or any questions regarding your product, please refer to the contact information provided in your purchase documentation or on the official KRIB BLING website.

### Related Documents - XQB

	<p><a href="#">Washing Machine User Guide and Danco Aerator Installation Instructions</a></p> <p>Comprehensive user guide for a Krib Bling washing machine, including control panel instructions, error code troubleshooting, and installation guidance for Danco water-saving aerators. Features information on water conservation and California Proposition 65 warnings.</p>
	<p><a href="#">KRIB BLING Portable Washer Troubleshooting Guide</a></p> <p>Comprehensive troubleshooting guide for KRIB BLING 17.7 lbs portable washing machines, covering common error codes like Water Inlet Fault, Drainage Fault, Spin Fault, and Child Protection.</p>

	<p><a href="#">Krib Bling Automatic Washing Machine Instruction Manual</a></p> <p>Instruction manual for the Krib Bling Automatic Washing Machine, models XQB60-201B and XQB70-618B. Includes safety warnings, installation guides, usage instructions, troubleshooting, and parts information.</p>
	<p><a href="#">KRIB BLING Automatic Washing Machine Instruction Manual</a></p> <p>Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, safety, and troubleshooting. Includes model numbers XQB201B-GOLD9 and XQB201B-GREY9.</p>
	<p><a href="#">KRIB BLING Automatic Washing Machine Instruction Manual (XQB60-201B, XQB70-618B)</a></p> <p>This instruction manual provides detailed information on the installation, operation, safety, and troubleshooting of the KRIB BLING Automatic Washing Machine, models XQB60-201B and XQB70-618B.</p>
	<p><a href="#">KRIB BLING Automatic Washing Machine Instruction Manual</a></p> <p>Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, troubleshooting, and safety precautions for models XQB60-201B and XQB70-618B.</p>