

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ECONTROLLY](#) /

› [ECONTROLLY Replacement Remote Control User Manual for Sharp Soundbar HT-SB115, HT-SB110, HT-SBW110](#)

ECONTROLLY Replacement Remote Control

ECONTROLLY Replacement Remote Control User Manual

For Sharp Soundbar Models: HT-SB115, HT-SB110, HT-SBW110

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY replacement infrared remote control, designed for use with specific Sharp Soundbar models. This remote control is pre-programmed and does not require additional setup for compatible devices. Please read this manual thoroughly before use.

2. COMPATIBLE MODELS

This replacement remote control is compatible with the following Sharp Soundbar models:

- Sharp HT-SB115
- Sharp HT-SB110
- Sharp HT-SBW110
- Sharp 92LRC105001372 (Soundbar part number)

3. PACKAGE CONTENTS

The package includes:

- 1 x ECONTROLLY Replacement Remote Control

Note: Batteries and additional instructions are not included in the package.

4. SETUP

4.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.

2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Angled view of the ECONTROLLY replacement remote control, showing its overall design and button layout. The battery compartment is on the reverse side.

4.2 Initial Use

Once batteries are installed, the remote control is ready for use. No programming is required. Point the remote directly at your Sharp Soundbar and press the desired function button.

5. OPERATING INSTRUCTIONS

The remote control features various buttons for controlling your Sharp Soundbar. Refer to the image below for button identification and their functions.





Image: Front view of the ECONTROLLY replacement remote control, clearly showing all buttons and their labels for easy identification.

5.1 Button Functions

- **Power ():** Turns the soundbar on or off.
- **Optical:** Selects the Optical input source.
- **Mute:** Mutes or unmutes the soundbar audio.
- **AUX:** Selects the Auxiliary input source.
- **BT (Bluetooth):** Selects the Bluetooth input source and initiates pairing mode.
- **HDMI ARC:** Selects the HDMI ARC input source.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **/ :** Skips to the previous or next track (when using Bluetooth or compatible media).
- **/ PAIR:** Plays or pauses media playback. Long press to initiate Bluetooth pairing.
- **NEWS:** Activates News sound mode.
- **MOVIE:** Activates Movie sound mode.
- **MUSIC:** Activates Music sound mode.

6. MAINTENANCE

To ensure optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, moisture, and extreme temperatures.

7. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.

- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the soundbar's infrared receiver.
- Make sure you are within the effective operating range and pointing the remote directly at the soundbar.

- **Soundbar not responding to specific buttons:**

- Verify that the soundbar is powered on and in the correct input mode.
- Some functions may require the soundbar to be in a specific state (e.g., Bluetooth pairing).

8. SPECIFICATIONS

Brand	ECONTROLLY
Product Type	Replacement Remote Control
Compatibility	Sharp Soundbar HT-SB115, HT-SB110, HT-SBW110
Technology	Infrared (IR)
Special Feature	Pre-programmed, no setup required
Power Source	2 x AAA Batteries (not included)
Color	Black
Dimensions (L x W x H)	3.94 x 1.57 x 0.59 inches (approximately)
Weight	1.76 ounces (without batteries)

9. SUPPORT AND WARRANTY

9.1 Customer Support

If you have any questions or require further assistance with your ECONTROLLY replacement remote control, please contact the seller or manufacturer directly through the platform where the purchase was made.

9.2 Warranty Information

Specific warranty details for this product are not provided in the available product information. Please refer to your purchase documentation or contact the seller for warranty-related inquiries.