

ECONTROLLY R7114S (Compatible with Blackweb BWA18SB001 Soundbar)

Instruction Manual

ECONTROLLY R7114S Replacement Remote Control
Compatible with Blackweb 37" 2.1 Channel Soundbar Model BWA18SB001

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY R7114S Replacement Remote Control. This remote is specifically designed to be compatible with the Blackweb 37" 2.1 Channel Soundbar, model BWA18SB001. It is an infrared remote control and does not require programming for use with the specified soundbar model.

Important Note: This is not a universal remote control. Please verify your soundbar model is BWA18SB001 before attempting to use this remote.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY R7114S Replacement Remote Control

Note: AAA batteries are required for operation and are not included in the package.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 1 AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

3.2 Initial Use

Once batteries are installed, the remote control is ready for use with the compatible Blackweb BWA18SB001 Soundbar. No programming or pairing is required as it operates via infrared (IR) signals.

4. OPERATING INSTRUCTIONS

The ECONTROLLY R7114S remote control provides direct access to various functions of your Blackweb BWA18SB001 Soundbar. Point the remote directly at the soundbar's IR receiver for optimal performance.

4.1 Remote Control Layout and Functions





Image: Front view of the ECONTROLLY R7114S remote control, showing all buttons and their labels. The remote is black with clearly marked buttons for power, input selection, volume, and sound modes.

Table 1: Button Functions

Button	Function
Power ()	Turns the soundbar on or off.
Mute ()	Mutes or unmutes the soundbar audio.
AUX	Selects the Auxiliary input source.
OPTICAL	Selects the Optical input source.
Bluetooth ()	Selects the Bluetooth input source.
LINE IN	Selects the Line In input source.
COAXIAL	Selects the Coaxial input source.
USB ()	Selects the USB input source.
Previous ()	Skips to the previous track (in supported modes like Bluetooth/USB).
Play/Pause ()	Plays or pauses audio (in supported modes like Bluetooth/USB).
Next ()	Skips to the next track (in supported modes like Bluetooth/USB).
STANDARD	Activates Standard sound mode.
TALK	Activates Talk sound mode (enhances dialogue).
MOVIE	Activates Movie sound mode (optimized for films).
MUSIC	Activates Music sound mode (optimized for music).
Volume Down (-)	Decreases the soundbar volume.
Volume Up (+)	Increases the soundbar volume.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive

materials.

- **Battery Replacement:** Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

6. TROUBLESHOOTING

Table 2: Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and soundbar. Remote not compatible with soundbar.	Replace batteries, ensuring correct polarity. Remove any obstructions. Confirm soundbar model is BWA18SB001.
Remote works intermittently.	Low battery power. Weak IR signal due to distance or angle.	Replace batteries. Ensure direct line of sight to soundbar's IR receiver. Move closer to the soundbar.
Specific buttons not working.	Button stuck or damaged.	Gently press the button multiple times. If issue persists, contact support.

7. SPECIFICATIONS

- **Model:** R7114S
- **Compatibility:** Blackweb 37" 2.1 Channel Soundbar Model BWA18SB001
- **Technology:** Infrared (IR)
- **Power Source:** 1 x AAA Battery (not included)
- **Dimensions:** 3.94 x 1.57 x 0.59 inches (approximate)
- **Weight:** 1.76 ounces (approximate, without battery)
- **Color:** Black

8. WARRANTY AND SUPPORT

8.1 Warranty Information

ECONTROLLY products typically come with a limited warranty. Please refer to the product packaging or the seller's information at the time of purchase for specific warranty terms and conditions. Keep your purchase receipt as proof of purchase.

8.2 Customer Support

For any questions, concerns, or technical assistance regarding your ECONTROLLY R7114S Replacement Remote Control, please contact the seller directly through the platform where the purchase was made. They can provide further support and guidance.

"If any questions, please feel free to contact us." - ECONTROLLY

