

ECONTROLLY N2QAYB001206

Instruction Manual for ECONTROLLY N2QAYB001206 Replacement Remote Control

Compatible with Panasonic Blu-ray Disc Player DP-UB820-K and DP-UB820

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ECONTROLLY N2QAYB001206 replacement infrared remote control. This remote is designed to be compatible with Panasonic Blu-ray Disc Player models DP-UB820-K and DP-UB820.

The remote control operates using infrared signals and does not require programming for initial use. Please read this manual thoroughly to ensure proper functionality and longevity of your device.

SETUP

Battery Installation

The remote control requires two (2) AA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the N2QAYB001206 remote control, highlighting the battery compartment area.

OPERATING INSTRUCTIONS

This remote control is designed for intuitive use with compatible Panasonic Blu-ray Disc Players. Point the remote directly at the Blu-ray player's infrared receiver for optimal performance.

Button Functions Overview





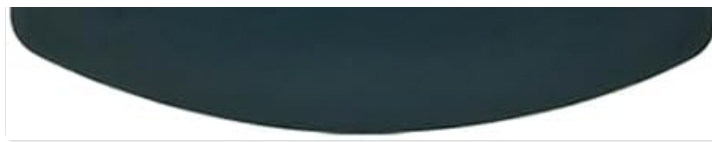


Image: Front view of the N2QAYB001206 remote control, displaying all buttons and their labels.

- **Power Button (●):** Turns the Blu-ray player on or off. Located at the top left.
- **TV Power Button (●):** Controls the power of a connected TV. Located at the top right.
- **Input/AV:** Selects the input source on the connected TV.
- **Volume (+/-):** Adjusts the volume of the connected TV.
- **Numeric Keypad (0-9):** Used for direct track selection or inputting numbers.
- **Playback Controls (Play, Pause, Stop, Skip, Search):** Standard controls for media playback. These are typically blue buttons.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections. Centered around the "OK" button.
- **Home:** Returns to the main menu of the Blu-ray player.
- **Top Menu:** Accesses the top menu of a disc.
- **Pop-Up Menu:** Accesses the pop-up menu of a disc.
- **Option:** Displays options relevant to the current screen or content.
- **Return:** Goes back to the previous screen or menu.
- **Netflix:** Direct access button for the Netflix streaming service.
- **HDR Setting:** Adjusts High Dynamic Range settings.
- **Color Buttons (R, G, Y, B):** Red, Green, Yellow, Blue buttons for specific functions within menus or applications.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AA ALKALINE batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight, high temperatures, and excessive humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AA ALKALINE batteries.

- Check for any obstructions between the remote control and the Blu-ray player's infrared receiver.
- Ensure you are pointing the remote directly at the Blu-ray player.
- **Specific Buttons Not Working:**
 - This remote is an infrared replacement. Ensure the function you are trying to use is supported by the Panasonic Blu-ray player model (DP-UB820-K, DP-UB820).
 - Clean the remote control surface, especially around the non-working buttons, to ensure no debris is preventing button presses.
- **Interference:**
 - Strong light sources, such as direct sunlight or fluorescent lighting, can interfere with infrared signals. Try operating the remote in a different lighting condition.

SPECIFICATIONS

- **Model:** N2QAYB001206
- **Compatibility:** Panasonic Blu-ray Disc Player models DP-UB820-K, DP-UB820
- **Power Source:** 2 x AA ALKALINE Batteries (not included)
- **Dimensions:** 3.94 x 1.57 x 0.59 inches (approximately)
- **Weight:** 1.76 ounces (without batteries)
- **Technology:** Infrared (IR)

WARRANTY AND SUPPORT

For any questions regarding the ECONTROLLY N2QAYB001206 replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Information regarding specific warranty terms, if applicable, will be provided by the seller at the time of purchase.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question