

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY NA727UD Remote Control User Manual for Philips DVD/VCR Players

ECONTROLLY NA727UD

ECONTROLLY NA727UD Remote Control User Manual

For Philips DVD/VCR Player Models

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY NA727UD replacement infrared remote control. This remote is designed to be compatible with various Philips DVD/VCR Player models, offering a direct replacement for your original remote.

Compatible Philips DVD/VCR Player models include: **DVP3345V**, **DVP3345V/F7**, **DVP3345V/F7B**, **DVP3345V/F7E**, **DVP3345V/17B**, and **DVP3345V/17**.

2. SAFETY INFORMATION

- Keep the remote control away from moisture, heat, and direct sunlight.
- Do not drop or subject the remote control to strong impacts.
- Do not attempt to disassemble or modify the remote control.
- **Battery Safety:** Use only AAA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or could cause damage.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

3. PRODUCT OVERVIEW

The ECONTROLLY NA727UD remote control features a standard layout for easy operation of your Philips DVD/VCR player. Below is an image illustrating the remote's design and key button areas.



Image: Top-down view of the ECONTROLLY NA727UD remote control, displaying its full button layout.

Key button areas include:

- **Power Button (Red):** Located at the top, used to turn the device on or off.
- **Number Pad (0-9, +10, Clear):** For direct input of track numbers, chapter numbers, or VCR programming.
- **Playback Controls (Play, Pause, Stop, REW, FFW, Tracking, Back):** Standard controls for DVD and VCR playback.
- **Mode Selection (VCR, DVD):** Buttons to switch between VCR and DVD operating modes.
- **Navigation and OK:** Central directional buttons (up, down, left, right) with an 'OK' button for menu navigation and selection.
- **Menu/Setup/Input/Title/Disc:** Buttons for accessing device menus, settings, input sources, and disc-specific functions.
- **Special Functions (Display, Subtitle, Zoom, Audio, Angle, Search, Repeat, A-B, REC, Speed, Mode, Timer Set):** Buttons for advanced playback and recording features.

4. SETUP

4.1 Battery Installation

The ECONTROLLY NA727UD remote control requires two (2) AAA ALKALINE batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for use. No programming is required.

5. OPERATING INSTRUCTIONS

This remote control operates via infrared (IR) signals. Ensure there is a clear line of sight between the remote control and the IR receiver on your Philips DVD/VCR player.

5.1 Basic Operation

- **Power:** Press the **POWER** button to turn your DVD/VCR player on or off.
- **Mode Selection:** Press the **DVD** or **VCR** button to select the desired operating mode for your player.
- **Playback:** Use the **PLAY**, **PAUSE**, **STOP**, **REW** (Rewind), and **FFW** (Fast Forward) buttons for media control.
- **Navigation:** Use the directional arrow buttons (up, down, left, right) to navigate through menus and options. Press **OK** to confirm a selection.
- **Number Input:** Use the number pad (0-9) to directly select tracks, chapters, or for VCR programming.

5.2 Advanced Functions

Refer to your Philips DVD/VCR player's original manual for specific details on how to use advanced functions such as **SETUP**, **MENU**, **INPUT**, **DISPLAY**, **SUBTITLE**, **ZOOM**, **AUDIO**, **ANGLE**, **SEARCH**, **REPEAT**, **A-B**, **REC**, **SPEED**, **MODE**, and **TIMER SET**, as their functionality may vary by player model.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

6.2 Battery Replacement

Replace batteries when the remote control's range decreases or if it stops responding. Always replace both batteries at the same time with new AAA ALKALINE batteries. Do not mix old and new batteries or different types of batteries.

6.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage.

7. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA ALKALINE batteries.
- Ensure there are no obstructions between the remote control and the DVD/VCR player's IR sensor.
- Confirm that the remote is pointed directly at the player.

- **Short operating range:**

- Replace batteries with new ones.
- Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.

8. SPECIFICATIONS

Model Number	NA727UD
Brand	ECONTROLLY
Compatible Devices	Philips DVD/VCR Players (DVP3345V series)
Special Feature	Pre Programmed (No setup required)
Color	Black
Batteries Required	2 x AAA ALKALINE (not included)
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.76 ounces
Max Number of Supported Devices	1

9. WARRANTY AND SUPPORT

For any questions regarding the ECONTROLLY NA727UD remote control, please contact the manufacturer or your retailer for assistance. Specific warranty details may vary by purchase location and retailer policies.