

- Manuals.plus /
- > [ECONTROLLY](#) /
 - > ECONTROLLY Replacement Remote Control User Manual for Sens TV DVD Combo S1901DVD, S2201DVD and Fusion TV DVD Combo FUS-42DVD

ECONTROLLY S1901DVD, S2201DVD, FUS-42DVD

ECONTROLLY Replacement Remote Control User Manual

Compatible with Sens TV DVD Combo S1901DVD, S2201DVD and Fusion TV DVD Combo FUS-42DVD

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY replacement infrared remote control. This remote is designed to be compatible with specific Sens TV DVD Combo models (S1901DVD, S2201DVD) and Fusion TV DVD Combo models (FUS-42DVD). It operates using infrared technology and requires no programming for immediate use with the specified devices.

PRODUCT OVERVIEW

The ECONTROLLY replacement remote control is a direct substitute for the original remote controls of the compatible TV DVD Combo units. It features a standard layout with dedicated buttons for TV, DVD, and common media functions.



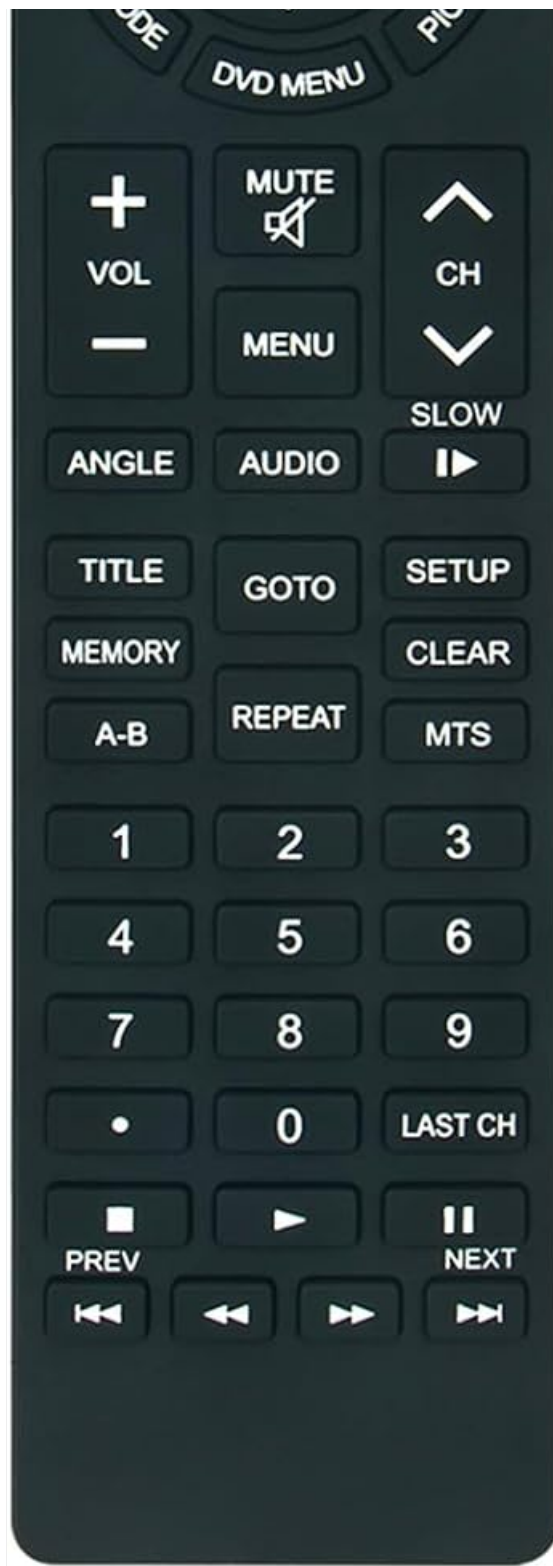


Figure 1: Front view of the ECONTROLLY replacement remote control, displaying all buttons and their labels.

SETUP

Battery Installation

The remote control requires two AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the

markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

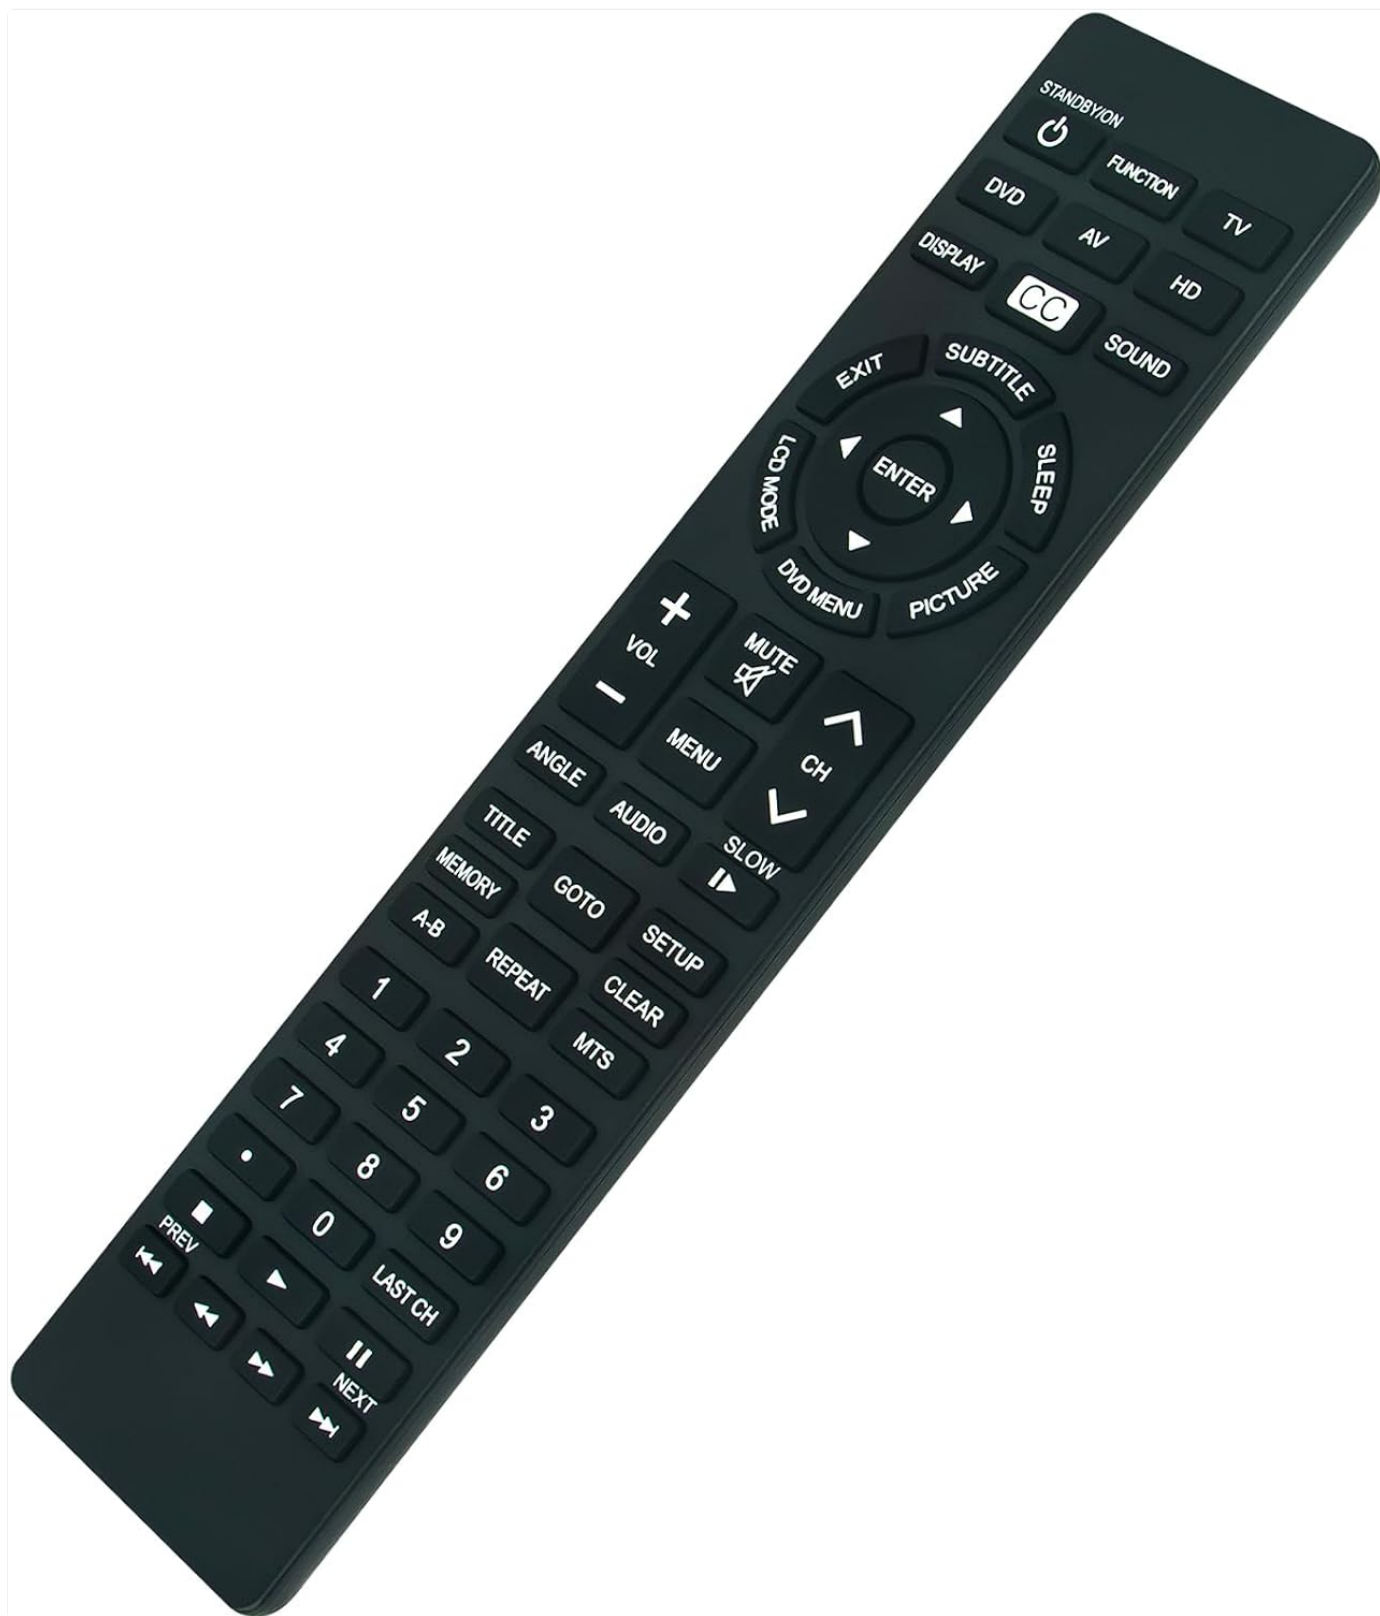


Figure 2: Side view of the remote control, illustrating the general area for battery compartment access.

After battery installation, the remote control is ready for use with your compatible Sens or Fusion TV DVD Combo unit without any additional programming.

OPERATING INSTRUCTIONS

Button Functions

The remote control features a variety of buttons to manage your TV and DVD functions. Below is a general guide to common button functions:

Button	Function
STANDBY/ON	Powers the device on or off.
FUNCTION	Switches between different functions or modes.
TV / DVD	Selects TV or DVD mode.
AV / HD	Selects audio/video input source or high-definition input.
DISPLAY	Shows on-screen display information.
CC	Activates/deactivates Closed Captions.
SOUND	Accesses sound settings.
SUBTITLE	Selects or changes subtitle tracks for DVD playback.
EXIT	Exits current menu or function.
ENTER	Confirms selection in menus.
Directional Arrows (Up, Down, Left, Right)	Navigates through menus and options.
SLEEP	Sets a sleep timer for the TV.
LCD MODE	Adjusts LCD display modes.
PICTURE	Accesses picture settings.
DVD MENU	Accesses the main menu of a DVD.
VOL+ / VOL-	Increases or decreases volume.
MUTE	Mutes or unmutes audio.
CH+ / CH-	Changes TV channels up or down.
MENU	Accesses the main system menu.
SLOW	Controls slow motion playback for DVD.
ANGLE	Changes camera angle during DVD playback (if available).
AUDIO	Selects audio tracks or languages for DVD playback.
SETUP	Accesses system setup menu.
TITLE	Accesses DVD title menu.
GOTO	Allows direct navigation to a specific chapter or time on DVD.
CLEAR	Clears input or selection.
MEMORY	Stores or recalls settings.
REPEAT	Repeats current track/chapter or entire disc.
MTS	Selects Multi-channel Television Sound options.

Button	Function
Number Buttons (0-9)	Direct channel selection or input for menus.
LAST CH	Returns to the previously viewed channel.
PREV / NEXT	Navigates to previous or next track/chapter.
Rewind / Fast Forward	Rewinds or fast forwards media playback.
Play / Pause	Starts, pauses, or resumes media playback.
Stop	Stops media playback.

Note: Some functions may vary depending on the specific model of your Sens or Fusion TV DVD Combo unit. Refer to your device's original manual for detailed function descriptions.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases. Always replace both batteries at the same time with new AAA ALKALINE batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA ALKALINE batteries.
 - Ensure there are no obstructions between the remote control and the TV DVD Combo unit's infrared receiver.
 - Make sure you are within the effective range and pointing the remote directly at the device.
- **Certain buttons are not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing contact.
 - Verify that the function you are trying to use is supported by your specific TV DVD Combo model.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure a clear line of sight to the device's infrared receiver.

If the problem persists after trying these solutions, please refer to the Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	ECONTROLLY
Compatibility	Sens TV DVD Combo S1901DVD, S2201DVD; Fusion TV DVD Combo FUS-42DVD
Technology	Infrared (IR)
Power Source	2 x AAA ALKALINE batteries (not included)
Dimensions (L x W x H)	Approximately 3.94 x 1.57 x 0.59 inches (10 x 4 x 1.5 cm)
Item Weight	Approximately 1.76 ounces (50 grams) without batteries
Special Feature	Pre-programmed, no setup required

SUPPORT

For any questions, concerns, or further assistance regarding your ECONTROLLY replacement remote control, please contact the seller or manufacturer through the platform where the purchase was made. Provide your order details and a clear description of the issue for efficient support.

Note: Specific warranty information may be provided by the seller at the time of purchase. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNNZQ72Q>

More documents and user manuals: <https://manuals.plus/>