

ASHATA RC1205

ASHATA RC1205 Universal Remote Control User Manual

Model: RC1205

INTRODUCTION

The ASHATA RC1205 is a universal replacement remote control designed for use with LED and LCD televisions, specifically compatible with Hitachi TV models. This compact and easy-to-grip remote offers dedicated menu navigation keys and direct channel access, covering most functions of an original remote control without requiring complex programming.





Image: Front view of the ASHATA RC1205 Universal Remote Control, showcasing its button layout.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image: Rear view of the ASHATA RC1205 remote control, showing the open battery compartment for AAA batteries.

2. Initial Use

The ASHATA RC1205 remote control requires no programming or complex setup. Once batteries are correctly installed, it is ready for immediate use with compatible LED and LCD televisions, particularly Hitachi models.

OPERATING INSTRUCTIONS

Point the remote control directly at your television's infrared receiver. The effective operating distance is typically more than 10 meters (32.81 feet).

- **Power Button (●):** Turns the television on or off.
- **Number Keys (0-9):** Directly select channels.
- **Volume Up/Down (V+/V-):** Adjusts the audio volume.
- **Channel Up/Down (P+/P-):** Changes the television channel.
- **Mute Button ():** Mutes or unmutes the television audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **INFO Button:** Displays information about the current program or input.
- **TV/AV Button:** Switches between TV and AV input modes.

- **MENU Button (M):** Accesses the television's main menu.
- **EXIT Button:** Exits the current menu or function.
- **GUIDE Button:** Opens the electronic program guide (if available on your TV).
- **WIDE/PC Button:** Adjusts screen aspect ratio or switches to PC input.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the television model and current menu.



Image: Close-up of the ASHATA RC1205 remote control's upper section, highlighting the power button, colored function keys, and directional navigation pad.

MAINTENANCE

Battery Replacement

If the remote control's performance degrades or it stops responding, replace both AAA batteries with new ones. Always replace both batteries at the same time and ensure correct polarity.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can

damage the surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective operating range (approx. 10 meters).
- **Limited range or intermittent response:**
 - Replace batteries.
 - Ensure the remote's infrared emitter is clean and unobstructed.
 - Minimize strong light sources (e.g., direct sunlight, bright fluorescent lights) that might interfere with the infrared signal.
- **Certain buttons do not work:**
 - While the RC1205 covers most functions, some advanced or specific features of your original TV remote might not be supported.
 - Ensure the TV is powered on and not in a menu where the button would be inactive.

SPECIFICATIONS

Model	RC1205
Brand	ASHATA
Compatibility	Universal replacement for LED LCD TVs, specifically compatible with Hitachi TV models.
Battery Type	2 x AAA Batteries (not included)
Power Type	DC 3V
Remote Control Distance	More than 10 Meters (32.81 Feet)
Case Material	ABS
Color	Black
Product Dimensions	19 x 5.1 x 2 CM (7.48 x 2.01 x 0.79 Inches)
Weight	72 Grams (approx.)

WARRANTY AND SUPPORT

Information regarding specific warranty terms or customer support contacts for the ASHATA RC1205 remote control is not provided in this manual. Please refer to your purchase documentation or contact the retailer for details on warranty coverage and support options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question