

- Manuals.plus /
- › ECONTROLLY /
 - › ECONTROLLY LCD4299A Replacement Remote Control User Manual

ECONTROLLY LCD4299A

ECONTROLLY LCD4299A Replacement Remote Control User Manual

Model: LCD4299A

INTRODUCTION

This user manual provides detailed instructions for the ECONTROLLY LCD4299A replacement remote control. This remote is designed to be compatible with Curtis LCD4299A televisions, offering a direct replacement without the need for complex programming. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your remote control.

PRODUCT OVERVIEW

The ECONTROLLY LCD4299A remote control is a dedicated replacement unit. It features a standard layout for easy navigation and control of your compatible television. Its ergonomic design ensures comfortable handling.





Image: Front view of the ECONTROLLY LCD4299A remote control, displaying all buttons and their labels. The remote is black with white buttons.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.

3. Insert two (2) AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, showing two AAA batteries inserted into the compartment with correct polarity markings.

Initial Use

This remote control is pre-programmed for compatibility with Curtis LCD4299A televisions. No additional programming or setup is required. Once batteries are correctly installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

The ECONTROLLY LCD4299A remote control provides full functionality for your compatible Curtis television. Point the remote directly at the television's infrared receiver for optimal performance.

Button Functions

Button	Function
STANDBY (Red)	Turns the television on or off (standby mode).
SOURCE	Selects input sources (e.g., HDMI, AV, Component).
MUTE	Mutes or unmutes the television's audio.
0-9 (Number Buttons)	Direct channel selection.
VOL +/-	Adjusts the volume level up or down.
CH +/-	Changes channels up or down.
MENU	Accesses the television's main menu.
OK	Confirms selections within menus.
Directional Arrows (Up, Down, Left, Right)	Navigates through menus and options.
EXIT	Exits the current menu or on-screen display.
INFO	Displays information about the current program or input.
EPG	Accesses the Electronic Program Guide.

Button	Function
MTS	Selects Multi-channel Television Sound options (e.g., Stereo, SAP).
CC	Activates or deactivates Closed Captions.
ASPECT	Changes the screen aspect ratio.
3D	Activates or deactivates 3D mode (if supported by TV).
L/R	Switches audio channels (e.g., for dual audio broadcasts).
PMODE	Cycles through picture modes.
SMODE	Cycles through sound modes.
FAV	Accesses favorite channels list.
SLEEP	Sets the sleep timer.



Image: Angled view of the ECONTROLLY LCD4299A remote control, highlighting the button layout and ergonomic design.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.
- **Environmental Conditions:** Avoid exposing the remote control to extreme temperatures, direct sunlight, high humidity, or dusty environments.

TROUBLESHOOTING

If you experience issues with your ECONTROLLY LCD4299A remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AAA alkaline batteries.
 - Check for any obstructions between the remote control and the television's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - This may indicate a dirty or faulty button. Try cleaning around the button with a dry, soft cloth. If the issue persists after battery replacement, the remote may require replacement.
- **Television Not Responding to Remote:**
 - Verify that the television is powered on and not in standby mode.
 - Confirm that the remote control is indeed compatible with your specific Curtis LCD4299A television model.
 - If you have another remote for the TV, test if the TV responds to it. This helps determine if the issue is with the remote or the TV's IR receiver.

SPECIFICATIONS

Feature	Detail
Model Number	LCD4299A
Compatibility	Curtis LCD4299A Televisions
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Dimensions (L x W x H)	7 x 2 x 0.65 inches (approximately)
Item Weight	2.3 ounces (approximately, without batteries)
Color	Black
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

For any questions regarding the ECONTROLLY LCD4299A remote control, or if you require further assistance, please refer to the

retailer where the product was purchased. Specific warranty information may vary by retailer and region.

© 2025 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0CNP9CWN7>

More documents and user manuals: <https://manuals.plus/>