

ECONTROLLY RAV334-WT92700

ECONTROLLY RAV334-WT92700 Replacement Remote Control User Manual

Compatible with Yamaha HTR, RX-V, and YHT Series Receivers

1. INTRODUCTION

Thank you for choosing the ECONTROLLY RAV334-WT92700 Replacement Remote Control. This remote is designed to function as a direct replacement for your original Yamaha remote, offering seamless compatibility with various Yamaha HTR, RX-V, and YHT series receivers. No complex programming is required; simply install batteries, and the remote is ready for use.

Compatible models include: HTR-4063, HTR-5063, RAV-467, RX-V467, RX-V467BL, RX-V567BL, YHT-593, YHT-593BL, YHT-693, YHT-693BL, YHT-893, YHT-893BL, RX-V567.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





This image illustrates the rear side of the ECONTROLLY RAV334-WT92700 remote control. The battery compartment is visible with its cover removed, indicating where to insert the AAA batteries. The polarity markings (+/-) are also shown inside the compartment.

Note: Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

This ECONTROLLY replacement remote control requires no programming. Once batteries are installed, it is ready to operate your compatible Yamaha receiver directly.

3.1 Basic Functions

- **Power Button:** Turns the receiver on or off.
- **Source Buttons (e.g., HDMI, AV, TUNER):** Selects the input source for your receiver.
- **Volume Up/Down:** Adjusts the master volume level.
- **Mute Button:** Silences the audio output.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **Scene Buttons:** Activates pre-programmed scene settings on your receiver.



This image displays the front of the ECONTROLLY RAV334-WT92700 remote control, highlighting the layout of all functional buttons including power, source selection, volume, channel, and numerical keys. The design is ergonomic for ease of use.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote and the receiver's infrared sensor.
 - Ensure you are within the effective operating range (up to 10 meters).
- **Specific functions not working:**
 - Verify that the correct input source is selected on your receiver.
 - Some advanced functions may require specific receiver settings; refer to your Yamaha receiver's manual for details.

6. SPECIFICATIONS

Feature	Detail
Brand	ECONTROLLY
Model Number	RAV334-WT92700
Connectivity Technology	Infrared (IR)
Battery Type	2 x AAA (not included)
Maximum Range	10 Meters
Compatible Devices	Yamaha HTR, RX-V, YHT Series Receivers
Special Feature	No programming required

7. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ECONTROLLY RAV334-WT92700 replacement remote control, please contact the seller directly through your purchase platform. They will be able to provide assistance with product-specific inquiries and warranty information.