

KRIB BLING ZT-NEW-GOLD WASHER

KRIB BLING ZT-NEW-GOLD WASHER Portable Automatic Washing Machine User Manual

Model: ZT-NEW-GOLD WASHER

1. INTRODUCTION

Thank you for choosing the KRIB BLING ZT-NEW-GOLD WASHER Portable Automatic Washing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and retain it for future reference.



Figure 1: KRIB BLING 17.7 lbs Portable Automatic Washing Machine, showcasing its compact design and capacity.



Figure 2: Overview of key features including LED display, quiet operation, energy efficiency, and multiple wash programs.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.

- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning, servicing, or attempting to remove any parts.
- Ensure the appliance is properly grounded.

3. WHAT'S IN THE BOX

Carefully unpack your washing machine and check that all the following items are included:

- KRIB BLING Portable Automatic Washing Machine
- Inlet Hose
- Drain Hose
- Adaptor
- Washing Impeller (pre-installed)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your washing machine.

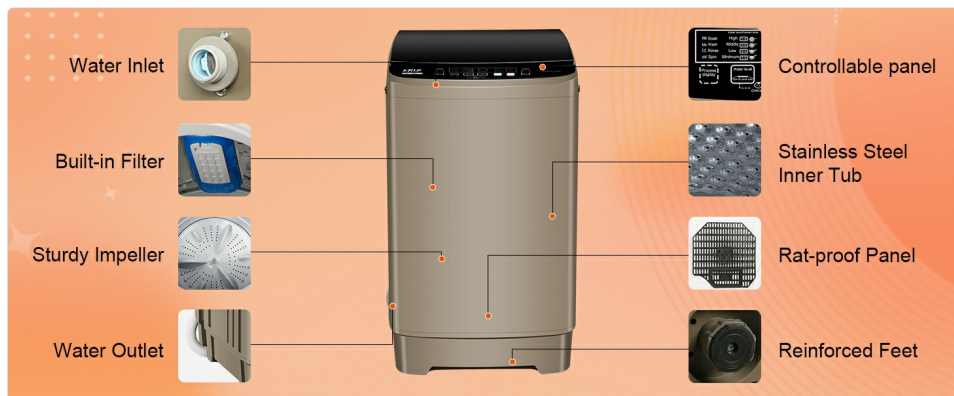


Figure 3: Labeled diagram of the washing machine's main parts, including the water inlet, filter, impeller, control panel, and inner tub.



Figure 4: View of the washing machine's inner tub, indicating its diameter for capacity reference.

5. SETUP AND INSTALLATION

5.1 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the unit for ventilation and hose connections. This appliance is suitable for various locations such as apartments, dorms, RVs, and bathrooms.



Figure 5: Examples of suitable placement locations for the portable washing machine.

5.2 Leveling

The washing machine is equipped with adjustable leveling legs. Adjust these legs to ensure the machine is stable and level. An unlevel machine can cause excessive vibration and noise during operation.

5.3 Water Inlet Connection

1. Connect one end of the inlet hose to the water inlet port on the back of the washing machine.

2. Connect the other end of the inlet hose to a cold water faucet. Ensure all connections are tight to prevent leaks.

5.4 Drain Hose Connection

Attach the drain hose to the drain outlet on the washing machine. Position the other end of the drain hose into a sink, utility tub, or standpipe. The machine features a drain pump, allowing for flexible drainage angles.

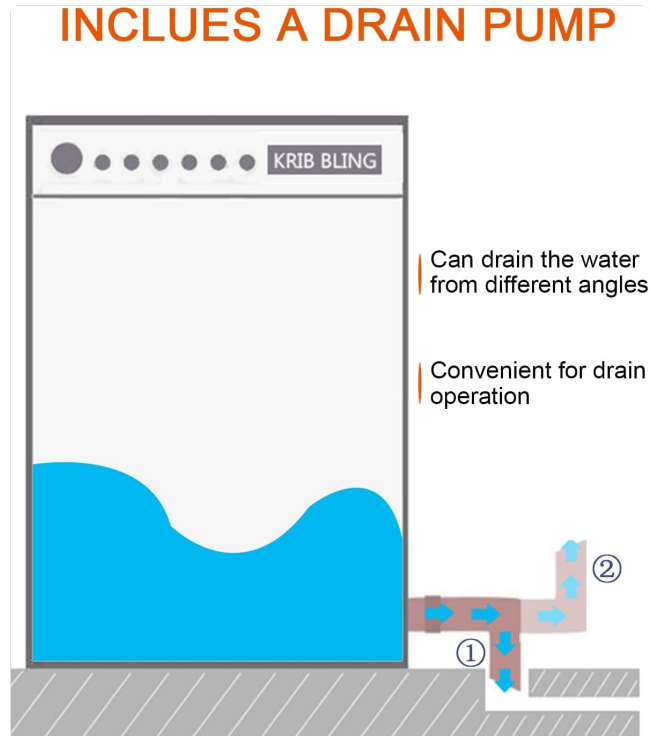


Figure 6: Illustration of the drain pump's capability to drain water from various angles.

5.5 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.

6. OPERATING INSTRUCTIONS

6.1 Control Panel Overview

The washing machine features a multi-functional control panel with an LED display for easy operation.



Figure 7: Detailed view of the control panel, highlighting program and water level selections.



Figure 8: Step-by-step guide for operating the washing machine using the control panel.

6.2 Loading Laundry

The inner tub has a capacity of 17.7 lbs. Distribute laundry evenly inside the tub to ensure balanced washing.



Figure 9: Visual guide to the 17.7 lbs capacity with approximate weights for common clothing items.



Figure 10: Examples of clothing types suitable for washing in this machine.

6.3 Washing Programs

The machine offers 10 washing programs to suit different fabric types and soil levels:

- **Standard:** For daily laundry.
- **Soft:** For delicate items.
- **Quick Wash:** For lightly soiled items or small loads.
- **Heavy Duty:** For heavily soiled or bulky items.
- **Soak Wash:** For items requiring pre-soaking.
- **Wash Only:** Performs only the wash cycle.
- **Spin Only:** Performs only the spin cycle.
- **Tub Clean:** For cleaning the washing machine tub.
- **Tub Air Dry:** For drying the inside of the tub.
- **Water Recycle:** For specific water-saving operations.

6.4 Water Levels

Select from 8 water level options to match your load size, optimizing water usage.

6.5 Child Lock Function

To activate the child lock, press and hold the designated buttons (refer to the control panel diagram) for a few seconds. This prevents accidental changes to settings during operation.

7. MAINTENANCE AND CARE

7.1 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7.2 Cleaning the Interior (Tub Clean)

Regularly use the 'Tub Clean' program to prevent mold and mildew buildup and maintain hygiene. You may use a washing machine cleaner specifically designed for this purpose.

7.3 Cleaning the Lint Filter

The machine has a built-in lint filter. Regularly remove and clean the filter to ensure efficient operation and prevent lint from redepositing on clothes. Refer to the product overview diagram for the filter's location.

7.4 Winterizing (for cold climates)

If the machine is stored in an area subject to freezing temperatures, drain all water from the hoses and tub to prevent damage. Disconnect water inlet hoses and allow them to drain. Run a spin cycle to remove any remaining water from the tub.

8. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Power outage.	Check power connection; Ensure lid is fully closed; Check household circuit breaker.
No water filling	Water faucet off; Water inlet hose kinked; Water supply pressure too low.	Open water faucet; Straighten hose; Check water supply.
Machine vibrates excessively	Machine not level; Load unbalanced; Shipping bolts not removed (if applicable).	Adjust leveling legs; Redistribute laundry; Ensure all shipping materials are removed.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Error code displayed	Specific malfunction.	Refer to the specific error code in a more detailed manual or contact customer support.

9. SPECIFICATIONS

Technical details for the KRIB BLING ZT-NEW-GOLD WASHER:



Figure 11: Key technical specifications of the washing machine.




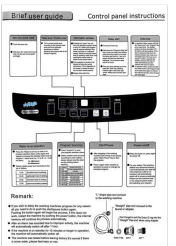 

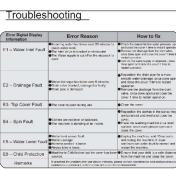 
Feature	Detail
Brand	KRIB BLING
Model	ZT-NEW-GOLD WASHER
Capacity	17.7 lbs (7.7 kg)
Product Dimensions (D x W x H)	20 x 19.98 x 34 inches
Rated Voltage	110V-120V / 60Hz
Rated Power	260W
Washing Noise Level	59 dB
Spinning Noise Level	69 dB
Water Proof Class	IPX4
Installation Type	Freestanding
Control Console	Touch
Material Type	Plastic

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact KRIB BLING customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 KRIB BLING. All rights reserved.

Related Documents - ZT-NEW-GOLD WASHER

	KRIB BLING Automatic Washing Machine Instruction Manual Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, safety, and troubleshooting. Includes model numbers XQB201B-GOLD9 and XQB201B-GREY9.
	KRIB BLING Automatic Washing Machine Instruction Manual Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, troubleshooting, and safety precautions for models XQB60-201B and XQB70-618B.
	KRIB BLING Automatic Washing Machine User Manual Comprehensive user manual for the KRIB BLING Automatic Washing Machine (Models XQB201A-GOLD5, XQB201A-GREY5), covering safety, installation, operation, and troubleshooting.
	Washing Machine User Guide and Danco Aerator Installation Instructions Comprehensive user guide for a Krib Bling washing machine, including control panel instructions, error code troubleshooting, and installation guidance for Danco water-saving aerators. Features information on water conservation and California Proposition 65 warnings.
	Krib Bling Automatic Washing Machine Instruction Manual Instruction manual for the Krib Bling Automatic Washing Machine, models XQB60-201B and XQB70-618B. Includes safety warnings, installation guides, usage instructions, troubleshooting, and parts information.
	KRIB BLING Portable Washer Troubleshooting Guide Comprehensive troubleshooting guide for KRIB BLING 17.7 lbs portable washing machines, covering common error codes like Water Inlet Fault, Drainage Fault, Spin Fault, and Child Protection.