

SoBuy FSR151-HG

SoBuy FSR151-HG Shoe Cabinet Instruction Manual

Model: FSR151-HG | Brand: SoBuy

1. INTRODUCTION

Thank you for choosing the SoBuy FSR151-HG Shoe Cabinet. This compact and practical storage solution is designed to organize your footwear efficiently in narrow spaces such as entryways or hallways. This manual provides detailed instructions for safe assembly, proper use, and maintenance to ensure the longevity and optimal performance of your product.

2. SAFETY INFORMATION

Important: Please read all safety warnings and instructions carefully before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Do not exceed the maximum load capacity of **16 kg** for the entire unit.
- To ensure maximum stability and prevent tipping, the shoe cabinet **must be securely fastened to a wall** using the provided anti-tip hardware.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Assemble the product on a soft, clean surface to avoid scratches.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- All wooden panels (MDF E1, grey lacquered)
- Metal legs (4 pieces)
- Hardware pack (screws, dowels, anti-tip kit, etc.)
- Assembly instructions (this manual)

4. SETUP AND ASSEMBLY

Assembly is required for this shoe cabinet. Follow the numbered steps and illustrated instructions provided in the package. A Phillips head screwdriver is the only tool required (not included).

4.1 Assembly Steps

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface. Each part is numbered for easy identification.
2. **Assemble the Main Frame:** Connect the side panels to the top and bottom panels using the designated screws and dowels. Ensure all connections are secure.
3. **Install the Flap Mechanisms:** Attach the shoe flaps and their internal mechanisms to the main frame. Pay attention to the orientation of the parts.
4. **Attach the Metal Legs:** Secure the four metal legs to the bottom of the cabinet. Ensure they are tightened firmly for stability.
5. **Mount to Wall (Crucial for Stability):** Position the cabinet in its desired location. Use the provided anti-tip kit to secure the cabinet to the wall. This step is essential to prevent accidental tipping, especially in households with children or pets.

Maximale Belastung: 16 kg
Perfekte Tragfähigkeit für Ihren Lagerbedarf.

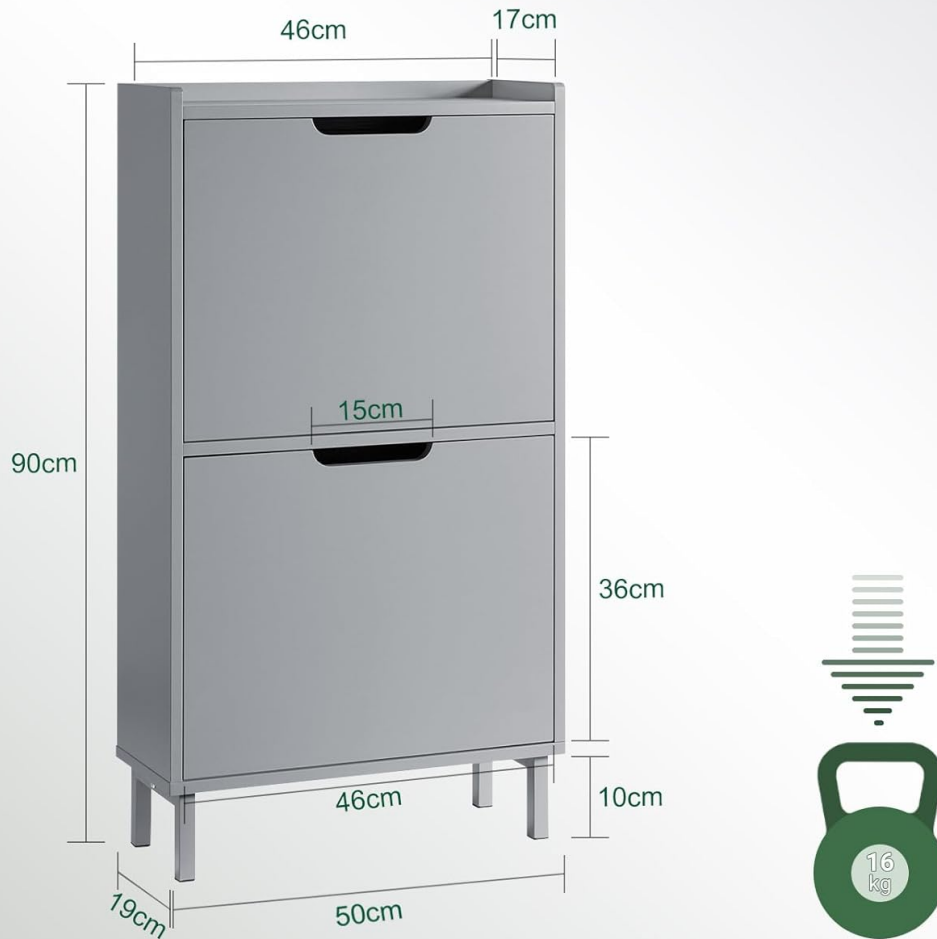


Figure 1: Dimensions and maximum load capacity of the SoBuy FSR151-HG shoe cabinet. The cabinet measures 50 cm (width) x 19 cm (depth) x 90 cm (height) and has a maximum load of 16 kg.



Figure 2: Detail of the robust metal legs and the anti-tip wall attachment point, ensuring stability.

5. OPERATING INSTRUCTIONS

The SoBuy FSR151-HG shoe cabinet is designed for easy and efficient shoe storage.

5.1 Storing Shoes

- Gently pull the hollow handle on each flap to open it downwards.
- Place your shoes onto the internal racks. The cabinet features two flaps, each designed to hold multiple pairs of shoes depending on their size and style.
- Push the flap upwards until it clicks securely into place. The hollow handle design also aids in ventilation.



Figure 3: The interior of a flap, demonstrating how shoes are stored on the adjustable racks.

Anti-Kipp

Raffiniertes Design, harmonisch
in allen Innenräumen



Figure 4: Detail of the integrated hollow handle, which facilitates opening and closing while providing ventilation.

6. MAINTENANCE

Regular maintenance will help keep your shoe cabinet in excellent condition.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the lacquered finish.
- **Dusting:** Dust regularly with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.
- **Avoid Moisture:** Do not expose the cabinet to excessive moisture or direct sunlight, as this can cause warping or discoloration.

7. TROUBLESHOOTING

If you encounter any issues with your shoe cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Screws are loose; not properly wall-mounted.	Ensure all assembly screws are tightened. Verify the cabinet is securely fastened to the wall using the anti-tip kit.

Problem	Possible Cause	Solution
Flaps do not open or close smoothly.	Mechanism incorrectly assembled; obstruction.	Check the assembly of the flap mechanism according to the instructions. Ensure no shoes or objects are obstructing the movement.
Shoes do not fit inside.	Shoes are too large for the compartment.	The cabinet is designed for various shoe sizes, but very large or high-top shoes may not fit. Try adjusting the internal dividers if possible, or store smaller shoes.

8. SPECIFICATIONS

- **Model Number:** FSR151-HG
- **Brand:** SoBuy
- **Dimensions (L x D x H):** 50 x 19 x 90 cm (19.7 x 7.5 x 35.4 inches)
- **Weight:** 11.7 kg (25.8 lbs)
- **Material:** MDF (E1), lacquered grey; Iron legs
- **Maximum Load Capacity:** 16 kg (35.3 lbs)
- **Number of Flaps:** 2
- **Assembly:** Required (self-assembly)
- **Country of Origin:** China

9. WARRANTY AND SUPPORT

SoBuy is committed to providing high-quality products and customer satisfaction.

9.1 Returns and Replacements

If you are not satisfied with your product or if there is an issue, you may be eligible for a free return voucher. Please contact our customer service for assistance.

9.2 Customer Support

For any questions, concerns, or assistance with assembly or product issues, please contact SoBuy customer support. Our team is available to help you.

Contact Information: Please refer to your purchase documentation or the SoBuy official website for the most current customer support contact details.