

Peakeep MHP6010

Peakeep Digital Alarm Clock User Manual

Model: MHP6010 | Brand: Peakeep

INTRODUCTION

This manual provides comprehensive instructions for the Peakeep Digital Alarm Clock, Model MHP6010. This alarm clock is designed for bedrooms, offering a mirror face with large numbers, adjustable brightness, and a super loud alarm for heavy sleepers. It features a dual power supply system with battery backup to ensure reliable operation even during power outages.



Figure 1: Peakeep Digital Alarm Clock (White-mirror)

WHAT'S IN THE BOX

Upon opening the package, please verify that all components are present and in good condition:

- Peakeep Digital Alarm Clock (Model: MHP6010)
- USB Type-C Power Cable
- Power Adapter (Wall Plug)



Figure 2: Included items and power options. Note: 4 AA batteries are required for backup but are not included.

SETUP

- Power Connection:** Connect the provided USB Type-C power cable to the DC 5V port on the back of the alarm clock. Plug the power adapter into a standard electrical outlet. The display will light up.
- Battery Backup (Optional but Recommended):** For uninterrupted operation and to save settings during power outages, install 4 AA batteries (not included) into the battery compartment on the back of the clock. This ensures the alarm still functions and settings are retained if main power is lost. The display can be lit for 20 seconds by touching the top when on battery backup.
- Initial Time Setting:** The clock may display a default time. Proceed to the "Operating Instructions" section to set the correct time and alarm.

Super Easy to Set

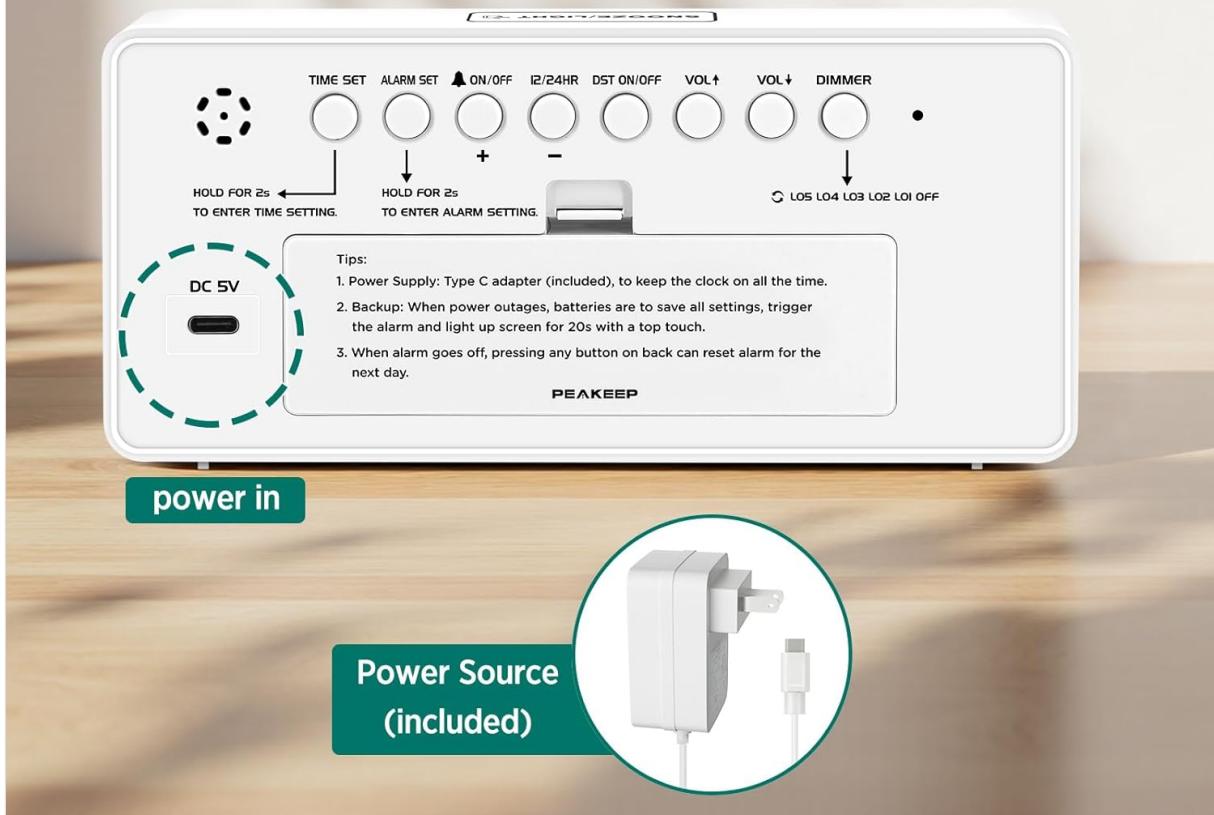


Figure 3: Rear panel with control buttons and power input.

OPERATING INSTRUCTIONS

The Peakeep Digital Alarm Clock features intuitive controls located on the back panel. Refer to Figure 3 for button locations.

1. Setting Time

- Press and hold the **TIME SET** button for 2 seconds to enter time setting mode. The hour digits will flash.
- Use the + or - buttons to adjust the hour.
- Press **TIME SET** again to move to minute setting. The minute digits will flash.
- Use the + or - buttons to adjust the minutes.
- Press **TIME SET** once more to confirm and exit time setting mode.

2. Setting Alarm

- Press and hold the **ALARM SET** button for 2 seconds to enter alarm setting mode. The alarm hour digits will flash.
- Use the + or - buttons to adjust the alarm hour.
- Press **ALARM SET** again to move to alarm minute setting. The alarm minute digits will flash.

- Use the + or - buttons to adjust the alarm minutes.
- Press **ALARM SET** once more to confirm and exit alarm setting mode.
- To turn the alarm ON/OFF, simply press the **ON/OFF** button. A bell icon will appear on the display when the alarm is active.

3. Adjusting Brightness (Dimmer)

- Press the **DIMMER** button repeatedly to cycle through 6 adjustable brightness levels (L05, L04, L03, L02, L01, OFF).
- Select the brightness level that best suits your environment and preference.



Figure 4: Adjustable brightness levels for optimal viewing.

4. Adjusting Volume

- Press the **VOL+** or **VOL-** buttons to adjust the alarm volume. There are 5 levels of alarm volume.
- Choose a volume level suitable for your needs, from low for light sleepers to super loud for heavy sleepers.

Loud Alarm Clock with Volume Optional

Protects hearing while friendly to heavy sleepers



Figure 5: Five adjustable alarm volume options.

5. Snooze Function

- When the alarm sounds, press the large **SNOOZE/LIGHT** button on the top of the clock to activate the 9-minute snooze function.
- The alarm will sound again after 9 minutes.
- To stop the alarm completely, press any button on the back of the clock.

6. 12/24 Hour Format Conversion

- Press the **12/24HR** button to switch between 12-hour and 24-hour time formats.
- In 12-hour format, "AM" or "PM" indicators will be displayed.

7. Daylight Saving Time (DST) On/Off

- Press the **DST ON/OFF** button to enable or disable Daylight Saving Time.
- When DST is active, the clock will automatically adjust by one hour.

MAINTENANCE

- **Cleaning:** To clean the clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or strong chemicals, as these may damage the mirror finish or plastic casing.

- **Battery Replacement:** If using the battery backup feature, replace the 4 AA batteries annually or when the display no longer lights up during a power outage. Ensure correct polarity when inserting new batteries.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.



Figure 6: The mirror face can be easily cleaned with a soft cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is off.	No power or power outage.	Ensure the power adapter is securely plugged in. If there's a power outage, check if backup batteries are installed. Touch the top of the clock to temporarily light up the display for 20 seconds.
Alarm does not sound.	Alarm is not set or volume is too low.	Verify the alarm is turned ON (bell icon visible). Check the alarm time setting. Increase the alarm volume using the VOL+ button.
Display is too bright/dim.	Brightness level needs adjustment.	Press the DIMMER button to cycle through the 6 brightness levels until desired brightness is achieved.

Problem	Possible Cause	Solution
Time is incorrect after power loss.	No backup batteries or batteries are depleted.	Install new 4 AA batteries for backup. Reset the time as per "Setting Time" instructions.

SPECIFICATIONS

Brand: Peakeep

Model: MHP6010

Color: White-mirror

Display Type: Digital LED

Product Dimensions: 7 inches (W) x 3.2 inches (H)

Item Weight: 7.5 ounces (0.47 Pounds)

Power Source: Dual Power Supply (Plug-in AC adapter, 4 AA batteries for backup - not included)

Special Features: HD LED Digits, Mirror Face, Large Numbers, 6-level Dimmer, 5-level Adjustable Volume, Battery Backup, 9-minute Snooze, 12/24 HR Conversion, DST On/Off.

Room Type: Bedroom, Living Room, Guest Room, Home Office, Study Room, Kid's Room, Dining Room, Kitchen

Mounting Type: Tabletop

Frame Material: Plastic

Country of Origin: China

WARRANTY & SUPPORT

Peakeep is committed to providing high-quality products and excellent customer service. For any inquiries, technical support, or warranty claims regarding your Peakeep Digital Alarm Clock, please contact our customer service team.

Contact Information:

Email: sales@us-myhome.com

(Please refer to your product packaging or the back of the device for the most current contact details.)

We value your feedback and are here to assist you with any questions or concerns.

Documents - Peakeep – MHP6010

PEAKEEP

**Battery Operated
Digital Clock, Alarm Clock**
(Model: MHP6010-B)



QUESTIONS? Contact: sales@us-myehome.com

[Peakeep MHP6010-B Battery Operated Digital Alarm Clock User Manual](#)

This manual provides instructions for setting up and using the Peakeep MHP6010-B Battery Operated Digital Alarm Clock, including features like voice activation, adjustable brightness, and alarm volume.

lang: **score:18** filesize: 8.82 M page_count: 10 document date: 2023-10-26