



Manuals.plus /

› XINJISHIMIN /

› XINJISHIMIN Replacement Remote Control Instruction Manual for ApooDr Mini Split Air Conditioner (Models ASF16-12H1B, ASF16-18H2B, ASF16-09H220V1B, ASF16-12H220V1B)

## XINJISHIMIN C123112001D17

# XINJISHIMIN Replacement Remote Control Instruction Manual

For ApooDr Mini Split Air Conditioner Ductless Inverter Systems

## 1. INTRODUCTION

---

This manual provides instructions for the setup, operation, and maintenance of your XINJISHIMIN replacement remote control. This remote is designed for use with specific ApooDr Mini Split Air Conditioner Ductless Inverter System models. Please read this manual thoroughly before using the remote control.

## 2. PRODUCT OVERVIEW

---

The XINJISHIMIN replacement remote control is designed to provide full functionality for compatible ApooDr mini split air conditioner units. It features a clear display and ergonomic button layout for ease of use. A wall mounting bracket is included for convenient storage.



Image 2.1: The replacement remote control and its accompanying wall mounting bracket.



Image 2.2: The remote control being used to operate an air conditioner unit.

## 2.1 Key Features

- **Compatibility:** Designed for ApooDr Mini Split Air Conditioner models ASF16-12H1B, ASF16-18H2B, ASF16-09H220V1B, and ASF16-12H220V1B.
- **Temperature Display:** Supports both Fahrenheit (°F) and Celsius (°C) temperature units.
- **Green Backlight:** The display features a green backlight for improved visibility in low light conditions.
- **Wall Mounting Bracket:** Includes a bracket for secure and accessible storage.



# UPGRADE!

Display in Fahrenheit



Display in Celsius



°C ⇌ °F



**GREEN BACKLIGHT**



Compatible with All R57 Series



R57\*\*\*\* / \*\*\*\*\*

R57B/BGE	RG57D1(C)/BGEF
R57B1/BGE	RG57A3/BGEF
R57B2/BGE	R57E1/BGEU1
RG57D/BGE	RG57A7/BGEF
RG57A6/BGEFU1	RG57A6/BGEF
RG57A2/BGEF	RG57A2/BGE
RG57K7(B)/BGEF	RG57A3/BGEF
RG57B(B)/BGE	RG57B/BGE
RG57A1(B)/BGE	



Image 2.3: The remote control display indicating support for both Fahrenheit and Celsius temperature units.



Image 2.4: A close-up view of the remote control's display, showing the green backlight feature.

### 3. SETUP

#### 3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

*Note:* Ensure batteries are inserted correctly. Incorrect insertion may prevent the remote from functioning.

#### 3.2 Wall Mounting Bracket Installation

1. Choose a suitable location on a wall, away from direct sunlight or heat sources.
2. Use screws (not included) to secure the wall mounting bracket to the desired surface.
3. Place the remote control into the bracket for convenient storage.

## 4. OPERATING INSTRUCTIONS

Point the remote control directly at the indoor unit of your air conditioner. Ensure there are no obstructions between the remote and the unit.



Image 4.1: Front view of the remote control, showing button layout.

### 4.1 Button Functions

- **ON/OFF:** Press to turn the air conditioner unit on or off.
- **MODE:** Press to cycle through operating modes: Auto, Cool, Dry, Heat, Fan.
- **FAN:** Press to adjust the fan speed: Auto, Low, Medium, High.
- **TEMP ▲ / ▼:** Press to increase or decrease the set temperature.
- **SLEEP:** Activates or deactivates the sleep mode, which adjusts temperature for comfortable sleep and energy saving.
- **TURBO:** Activates or deactivates the turbo function for rapid cooling or heating.
- **SHORT CUT:** Recalls your preferred settings.
- **TIMER ON:** Sets a timer for the unit to turn on automatically.

- **TIMER OFF:** Sets a timer for the unit to turn off automatically.
- **SWING:** Controls the horizontal louver swing.
- **DIRECT:** Controls the vertical louver direction.
- **LED:** Turns the display light on the indoor unit on or off.

## 4.2 Changing Temperature Units (°F / °C)

To switch between Fahrenheit (°F) and Celsius (°C) display:

1. Ensure the remote control is active.
2. Press and hold the **TEMP ▲** and **TEMP ▼** buttons simultaneously for approximately 3 seconds.
3. The temperature unit on the display will change. Repeat the process to switch back.

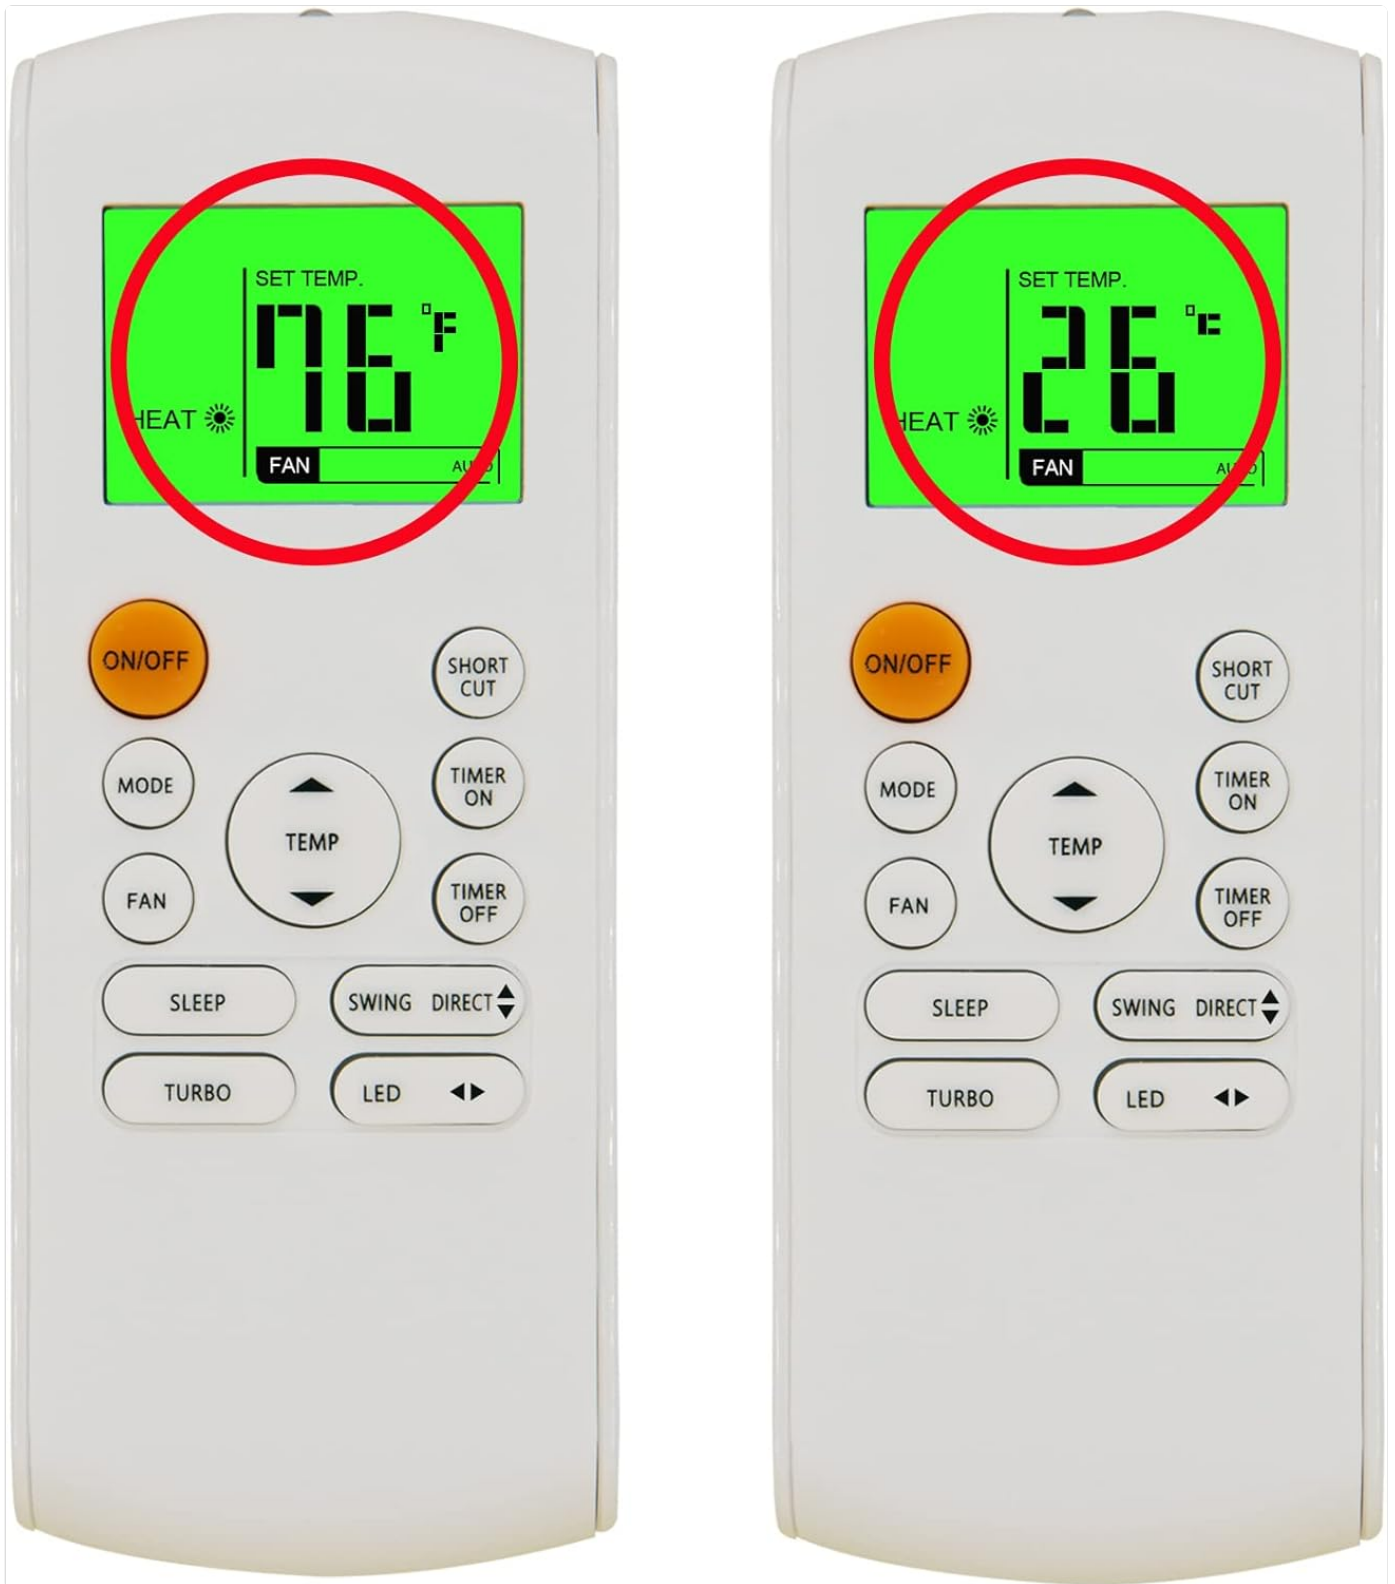


Image 4.2: The remote control display showing temperature in Fahrenheit (left) and Celsius (right).

## 5. MAINTENANCE

### 5.1 Battery Replacement

When the remote control display dims or the remote becomes unresponsive, it is time to replace the batteries. Follow the steps in Section 3.1 to replace the two (2) AAA batteries. Always replace both batteries at the same time with new ones.

### 5.2 Cleaning the Remote Control

Wipe the surface of the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as

these can damage the remote's surface or internal components.

## 6. TROUBLESHOOTING

---

- **Remote not responding:**

- Check if the batteries are inserted correctly and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote control and the air conditioner's indoor unit.
- Verify that you are within the effective operating range of the air conditioner.

- **Incorrect temperature unit displayed:**

- Refer to Section 4.2 for instructions on how to switch between Fahrenheit and Celsius.

## 7. SPECIFICATIONS

---

<b>Model Number</b>	C123112001D17
<b>Compatible Devices</b>	ApooDr ASF16-12H1B, ASF16-18H2B, ASF16-09H220V1B, ASF16-12H220V1B Mini Split Air Conditioner Ductless Inverter System
<b>Connectivity Technology</b>	Infrared
<b>Power Source</b>	2 x AAA Batteries (required)
<b>Item Weight</b>	3.52 ounces
<b>Package Dimensions</b>	8.43 x 3.03 x 1.46 inches
<b>Special Feature</b>	Ergonomic design
<b>Max Number of Supported Devices</b>	1

## 8. WARRANTY INFORMATION

---

This product comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, or unauthorized modifications. Please retain your proof of purchase for warranty claims.

## 9. SUPPORT

---

For further assistance or inquiries regarding your XINJISHIMIN replacement remote control, please contact the seller through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt support.