

[manuals.plus](#) /

› [WDYQJE](#) /

› [WDYQJE 11 Inch Android 13 Tablet User Manual \(Model Zed-T30\)](#)

WDYQJE Zed-T30

WDYQJE 11 Inch Android 13 Tablet User Manual

Model: Zed-T30

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your WDYQJE 11 Inch Android 13 Tablet. Please read through these instructions carefully to ensure optimal performance and longevity of your device. This tablet is designed for a seamless user experience, powered by Android 13 and featuring a high-resolution display and robust performance capabilities.

2. PRODUCT FEATURES

- Operating System:** Latest Android 13, supporting horizontal screen view, multi-window operation, humanized reading mode, eye protection mode, and dark color mode.
- Display:** 11-inch Full HD 2000x1200 IPS screen for realistic colors and sharp images.
- Performance:** Equipped with 14GB (6GB physical + 8GB virtual) RAM and an 8-core high-performance processor for smooth multitasking.
- Storage:** 256GB internal ROM, expandable up to 512GB via TF/SD card.
- Cameras:** Dual camera setup with a 13MP rear camera and a 5MP front camera for clear photos and video calls.
- Battery:** 7500mAh long-lasting battery, providing up to 8-10 hours of usage on a single charge.
- Connectivity:** Bluetooth 5.0 and 2.4/5GHz WiFi support for high-speed wireless connections.
- Audio:** Dual stereo speakers for an immersive audio experience.

3. PRODUCT OVERVIEW



Figure 1: Front and back view of the WDYQJE 11 Inch Android 13 Tablet, highlighting its 2K resolution display and memory configuration.



Figure 2: Key features: Excellent 2K vision, high-performance processor, and a slim, lightweight design (7.3mm thin, 800g light).

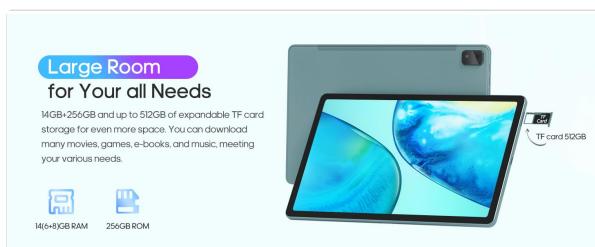


Figure 3: Large storage capacity with 14GB RAM (6+8 virtual) and 256GB ROM, expandable up to 512GB via TF card.

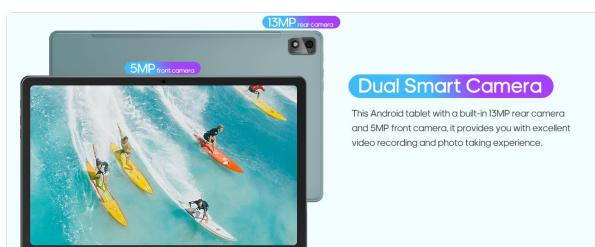


Figure 4: Dual Smart Camera system, featuring a 13MP rear camera and a 5MP front camera.



Figure 5: Long-lasting 7500mAh battery, supporting

extended video playback and usage.



Figure 6: Advanced connectivity with 2.4G & 5G WiFi, Bluetooth 5.0, and Dual SIM support.

Official Product Videos

Your browser does not support the video tag.

Video 1: A closer look at the WDYQJE Android Tablet, demonstrating its physical design and initial boot-up. This video is provided by the seller.

Your browser does not support the video tag.

Video 2: An unboxing and overview of a 10.1-inch tablet, showcasing its features and accessories. This video is provided by the seller.

4. SETUP

4.1 Unboxing and Initial Inspection

Upon receiving your WDYQJE tablet, carefully unbox all components. Verify that the package contains the tablet, charging cable, power adapter, and user manual. Inspect the tablet for any physical damage before proceeding.

4.2 Powering On and Initial Configuration

- Charge the Tablet:** Before first use, connect the tablet to the power adapter and charge it for at least 2 hours.
- Power On:** Press and hold the power button (located on the top edge) until the screen turns on.
- Language Selection:** Follow the on-screen prompts to select your preferred language.
- Wi-Fi Connection:** Connect to a stable Wi-Fi network to complete the setup process and access online features.
- Google Account:** Sign in with your Google account or create a new one. This is essential for downloading apps from the Play Store and syncing data.
- Security Setup:** Set up a screen lock (PIN, pattern, or password) to protect your device.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- Home Screen:** Swipe left or right to navigate between home screens.
- App Drawer:** Swipe up from the bottom of the home screen to access all installed applications.
- Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings (Wi-Fi, Bluetooth, brightness, etc.).
- Multitasking:** Tap the square icon (recent apps button) at the bottom of the screen to view and switch between recently used applications. Android 13 supports multi-window operation for enhanced

productivity.

5.2 Camera Usage

To use the tablet's cameras:

1. Open the **Camera** app from the home screen or app drawer.
2. Tap the camera icon to switch between the 13MP rear camera and the 5MP front camera.
3. Tap the shutter button to take a photo or press the record button to capture video.

5.3 App Management

- **Downloading Apps:** Open the **Play Store** app, search for your desired application, and tap 'Install'.
- **Uninstalling Apps:** Long-press an app icon on the home screen or in the app drawer, then drag it to 'Uninstall' or select the uninstall option.

5.4 Browsing the Web

Use the pre-installed **Chrome** browser to access the internet. Ensure you are connected to a Wi-Fi network for optimal browsing speed.

5.5 Files and Calendar

- **Files App:** Access your documents, images, videos, and other files using the **Files** app.
- **Calendar App:** Manage your schedule, set reminders, and view events using the **Calendar** app.

6. MAINTENANCE

6.1 Battery Care

- Use only the provided charger and cable to prevent damage.
- Avoid fully discharging the battery frequently. Charge it when the battery level is low.
- Do not expose the tablet to extreme temperatures, as this can affect battery life.

6.2 Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could scratch the surface.

6.3 Storage Management

Regularly check your storage usage in **Settings > Storage**. Delete unnecessary files or move them to an external TF/SD card to free up space and maintain performance.

7. TROUBLESHOOTING

7.1 Device Won't Power On

- Ensure the tablet is sufficiently charged. Connect it to the charger and wait a few minutes before attempting to power on again.
- Press and hold the power button for 10-15 seconds to perform a forced restart.

7.2 Slow Performance/Lagging

- Close unused applications running in the background.

- Clear cache data for frequently used apps (**Settings > Apps > [App Name] > Storage > Clear Cache**).
- Ensure sufficient free storage space.
- Restart the tablet regularly.

7.3 Wi-Fi/Bluetooth Connectivity Issues

- Toggle Wi-Fi/Bluetooth off and on again in Quick Settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect (**Settings > Network & internet > Wi-Fi**).

7.4 Factory Reset (Last Resort)

If issues persist, you may consider a factory reset. This will erase all data on your tablet, so ensure you back up important information first. Navigate to **Settings > System > Reset options > Erase all data (factory reset)**.

8. SPECIFICATIONS

Feature	Specification
Model Name	Zed-T30
Operating System	Android 13
Screen Size	11 inches
Screen Resolution	2000x1200 IPS HD
RAM	14GB (6GB physical + 8GB virtual)
Internal Storage (ROM)	256GB
Expandable Storage	Up to 512GB via TF/SD card
Rear Camera	13MP
Front Camera	5MP
Battery Capacity	7500mAh
Wireless Connectivity	2.4/5GHz WiFi, Bluetooth 5.0
GPS	Yes
Audio	Dual Stereo Speakers

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your WDYQJE tablet is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact WDYQJE customer support. Contact details can typically be found on the manufacturer's website or in the warranty documentation.