

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER PowerCrush Multi-Function Blender & 2-Slice Extra Wide Slot Toaster Instruction Manual

BLACK+DECKER B0CNRFN1PH

BLACK+DECKER PowerCrush Multi-Function Blender & 2-Slice Extra Wide Slot Toaster

Model: B0CNRFN1PH
Brand: BLACK+DECKER

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your new BLACK+DECKER PowerCrush Multi-Function Blender and 2-Slice Extra Wide Slot Toaster. Please read all instructions thoroughly before initial use and retain this manual for future reference.



Image 1.1: The BLACK+DECKER PowerCrush Multi-Function Blender and 2-Slice Extra Wide Slot Toaster.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

3.1. PowerCrush Multi-Function Blender





Image 3.1: Front view of the PowerCrush Multi-Function Blender.

- **4-Tip QuadPro Blade Technology:** The stainless steel blending blade is designed to work with the jar's shape, creating a constant flow and vortex that directs ingredients to the blades for efficient blending.
- **6-Cup PerfectPour Glass Jar:** A thick, sturdy glass jar with a molded spout for easy pouring.
- **Control Panel:** Features four speed functions (Low, Hi, Low Pulse, Hi Pulse) and dedicated buttons for various tasks.

3.2. 2-Slice Extra Wide Slot Toaster



Image 3.2: The 2-Slice Extra Wide Slot Toaster.

- **Extra Wide Slots:** Designed to accommodate bagels, thick artisan breads, and more.
- **Shade Settings:** A dial to select from six timed shade settings.
- **Special Functions:** Dedicated buttons for Bagel, Frozen, and Cancel.
- **Slide-Out Crumb Tray:** For easy cleaning and maintenance.

4. SETUP

4.1. Blender Setup

1. Place the blender base on a clean, dry, and stable surface.
2. Ensure the blade assembly is securely attached to the bottom of the glass jar.
3. Place the assembled glass jar onto the blender base, ensuring it is seated correctly.
4. Secure the lid onto the glass jar.

4.2. Toaster Setup

1. Place the toaster on a stable, heat-resistant surface, away from curtains or other flammable materials.
2. Ensure the slide-out crumb tray is properly inserted at the bottom of the toaster.

5. OPERATING INSTRUCTIONS

5.1. Blender Operation

1. Add ingredients to the 6-cup glass jar. For best results, add liquids first, followed by soft ingredients, then hard ingredients, and finally ice.
2. Securely place the lid on the jar. The lid features a hinged recloseable pour spout for convenience.
3. Plug the blender into a standard electrical outlet.
4. Select the desired speed setting (Low, Hi) or pulse function (Low Pulse, Hi Pulse) using the control buttons. Dedicated functions like Blend, Shake, Easy Clean, Puree, Icy Drink, Smoothie, Dice, Chop, Crumb, and Ice Crush are available for specific tasks.
5. Allow the blender to process ingredients until the desired consistency is achieved.
6. Unplug the blender after use.

5.2. Toaster Operation



INDIVIDUAL CONTROLS FOR BAGEL, FROZEN AND CANCEL

Image 5.1: Close-up of the toaster's control panel with Bagel, Frozen, and Cancel buttons.

1. Insert up to two slices of bread, bagels, or other items into the extra-wide slots.
2. Adjust the shade setting dial to your preference (1 for lightest, 6 for darkest).

- 3. Press down the toast lever until it locks into place. The toasting cycle will begin.
- 4. For specific items, press the **Bagel** button (toasts the cut side only) or the **Frozen** button (adds extra time for frozen items).
- 5. To stop the toasting cycle at any time, press the **Cancel** button.
- 6. Once toasting is complete, the toast will automatically pop up.

6. MAINTENANCE AND CLEANING

6.1. Blender Cleaning

- **Easy Clean Function:** For quick cleaning, add warm water and a drop of dish soap to the blender jar, secure the lid, and use the Easy Clean function. The blending blade's motion will help loosen caked-on food.
- **Dishwasher-Safe Parts:** The glass jar, blade assembly, and lid are dishwasher-safe for thorough cleaning. Ensure all parts are completely dry before reassembly and storage.

6.2. Toaster Cleaning

- **Slide-Out Crumb Tray:** Regularly remove and empty the crumb tray to prevent crumb buildup and maintain kitchen hygiene.
- **Exterior Cleaning:** Wipe the exterior of the toaster with a damp cloth. Do not use abrasive cleaners or immerse the toaster in water.

7. TROUBLESHOOTING

If your appliance is not operating correctly, please check the following common issues before contacting customer support:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet.
- **Blender not blending effectively:** Check that the blade assembly is properly tightened and the jar is correctly seated on the base. Ensure ingredients are added in the recommended order (liquids first).
- **Toaster not toasting:** Verify that the toast lever is fully pressed down and locked. Adjust the shade setting if toast is too light or too dark.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	BLACK+DECKER
Blender Capacity	6 Cups
Blender Speeds	4 (Low, Hi, Low Pulse, Hi Pulse)
Toaster Slots	2, Extra Wide
Toaster Power	850-Watts
Power Source	Corded Electric
ASIN	B0CNRFN1PH
Date First Available	November 21, 2023

9. WARRANTY AND SUPPORT

This product comes with a Limited or Full warranty. For detailed warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website.