

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AH59-01778B Replacement Remote Control User Manual

ECONTROLLY AH59-01778B

ECONTROLLY AH59-01778B Replacement Remote Control User Manual

Compatible with Samsung Home Theater Models: AH59-01778D, HT-X30, HT-X40

1. INTRODUCTION AND OVERVIEW

This manual provides instructions for the ECONTROLLY AH59-01778B Replacement Remote Control. This remote is designed to function as a direct replacement for your original Samsung Home Theater remote, specifically compatible with models AH59-01778D, HT-X30, and HT-X40. Constructed from durable ABS material, it offers wear-resistance and a long lifespan. It is an infrared remote control, requiring no programming or setup beyond battery installation.

2. PRODUCT FEATURES

- **No Programming Required:** Simply insert batteries to begin use.
- **High Compatibility:** Designed for Samsung Home Theater models AH59-01778D, HT-X30, HT-X40.
- **Infrared Technology:** Provides a strong signal and fast response time (under 0.2 seconds).
- **Durable Construction:** Made from ABS material for wear-resistance and longevity.
- **Ergonomic Design:** Features silicone buttons for a soft touch and anti-dust properties.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.







Image: Back of the remote control with the battery compartment open, illustrating where to insert the AA batteries.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready for immediate use with compatible Samsung Home Theater systems. Point the remote directly at your device and press the desired function button.



Image: Front view of the remote control, displaying the layout of all function buttons.

Key Functions:

- **POWER:** Turns the device on or off.
- **TV/DVD/TUNER/USB/AUX:** Selects the input source.
- **Number Buttons (0-9):** Direct channel selection or inputting numerical values.
- **VOLUME (+/-):** Adjusts the volume level.
- **MUTE:** Silences the audio output.
- **TUNING/CH (Up/Down):** Changes channels or navigates tuning frequencies.
- **MENU:** Accesses the device's main menu.
- **ENTER:** Confirms selections within menus.
- **Directional Arrows (Up/Down/Left/Right):** Navigates through menus and options.
- **RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Playback Controls (Play, Stop, Pause, Fast Forward, Rewind):** Controls media playback.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or harsh chemicals, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always use new, high-quality alkaline AA batteries. Avoid mixing old and new batteries, or different types of batteries, as this can lead to leakage or improper function. Do not use rechargeable batteries, as they may not provide sufficient power for optimal performance.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with brand new alkaline AA batteries. Rechargeable batteries are not recommended.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the infrared sensor on your Samsung Home Theater system.
- **Distance:** Ensure you are within the effective operating range of the remote control.
- **Device Compatibility:** Verify that your Samsung Home Theater model (AH59-01778D, HT-X30, HT-X40) is listed as compatible.

6.2 Intermittent Functionality

- **Weak Batteries:** Replace batteries with new alkaline ones.
- **Interference:** Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the infrared signal.

7. SPECIFICATIONS

Product Dimensions	6 x 3 x 0.5 inches
Item Weight	2 ounces
Item Model Number	AH59-01778B
Manufacturer	ECONTROLLY
Brand	ECONTROLLY
Special Feature	Ergonomic
Color	Black
Max Number of Supported Devices	5
Compatible Devices	Television (Samsung Home Theater systems)

8. WARRANTY AND SUPPORT

This ECONTROLLY replacement remote control is designed for reliable performance. While specific warranty details are not provided, the manufacturer offers direct support for any issues encountered.

If you experience any problems with your remote control, or if you are unsure about its compatibility with your specific Samsung Home Theater model, please contact the seller directly. They are committed to assisting you in resolving any issues and ensuring your satisfaction.

For further assistance, please refer to the contact information provided with your purchase or on the product listing page.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNRR2LXG>

More documents and user manuals: <https://manuals.plus/>