

ECONTROLLY KM2-YNPG

ECONTROLLY MECOOL KM2 Replacement Remote Control Instruction Manual

Model: KM2-YNPG

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY MECOOL KM2 Replacement Remote Control. This remote is designed to function as a direct replacement for the original remote controls of compatible MECOOL Android 4K HDR Streaming Media Players and Smart TV Boxes. It offers essential controls for navigating your media player and accessing popular streaming services.

2. COMPATIBILITY

This replacement remote control is compatible with the following MECOOL Android 4K HDR Streaming Media Player and Smart TV Box models:

- MECOOL KM2 Plus
- MECOOL KM7 Plus
- MECOOL KD3
- MECOOL KD5 Smart TV Box

3. FEATURES

- **Direct Replacement:** Functions as a direct replacement for original MECOOL remote controls.
- **Durable Construction:** Made from ABS material, ensuring wear-resistance and durability.
- **Ergonomic Design:** Designed for comfortable handling and ease of use.
- **Dedicated App Buttons:** Includes dedicated buttons for popular streaming services like YouTube, Netflix, and Prime Video, as well as Google Play.



Image 1: Front view of the ECONTROLLY MECOOL KM2 Replacement Remote Control, showing power, navigation, volume, and dedicated app buttons.

4. SETUP

4.1 Battery Installation

The remote control requires two (2) AA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two (2) AA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image 2: Back view of the remote control with the battery compartment open, showing where to insert two AA batteries.

Note: For optimal performance, use brand new alkaline batteries. Rechargeable batteries may not provide sufficient power for consistent operation.

5. OPERATING INSTRUCTIONS

Once batteries are correctly installed, the remote control is ready for use. Point the remote directly at your MECOOL Android 4K HDR Streaming Media Player or Smart TV Box.

- **Power Button** (⏻): Press to turn your device on or off.
- **Navigation Pad (Circular button)**: Use the directional arrows to move through menus and select items. The center button confirms selections.
- **Back Button** (⏮): Returns to the previous screen or menu.
- **Home Button** (🏠): Returns to the main home screen of your device.
- **Volume Buttons** (+/-): Adjusts the volume level.
- **Mute Button** (🔇): Mutes or unmutes the audio.
- **Dedicated App Buttons (YouTube, Netflix, Prime Video, Google Play)**: Press these buttons for quick access to the respective applications.

6. MAINTENANCE

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new alkaline batteries.
 - Check for any obstructions between the remote control and your media player.
 - Ensure you are within the effective range of the device.
- **Specific buttons not working:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris.
 - Ensure the remote is pointed directly at the device.

If troubleshooting steps do not resolve the issue, please refer to the support section.

8. SPECIFICATIONS

Brand	ECONTROLLY
Model Number	KM2-YNPG

Product Dimensions	6 x 3 x 0.5 inches (approx.)
Item Weight	1.41 ounces (approx.)
Color	Black
Special Feature	Ergonomic
Max Number of Supported Devices	5 (compatible MECOOL devices)
Compatible Devices	Television (via MECOOL Smart TV Box)
Battery Requirement	2 x AA batteries (not included)

9. SUPPORT

If you encounter any issues that cannot be resolved using the troubleshooting steps provided, or if you have further questions regarding your ECONTROLLY MECOOL KM2 Replacement Remote Control, please contact the seller or manufacturer for assistance. Provide your product model number (KM2-YNPG) and a detailed description of the issue to facilitate support.