

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Universal Replacement Remote Control User Manual for Marantz SR Receivers (Models: SR5007, SR4200, SR5015, SR5003, SR6009, SR6010, SR6011)

ECONTROLLY TSDA-MES

ECONTROLLY Universal Replacement Remote Control User Manual

MODEL: TSDA-MES

Compatible with Marantz SR Receiver Models: SR5007, SR4200, SR5015, SR5003, SR6009, SR6010, SR6011

Introduction

This manual provides instructions for the ECONTROLLY universal replacement remote control, model TSDA-MES. This remote is designed to function as a direct replacement for original Marantz SR series receiver remote controls, offering immediate usability without complex programming.

Setup

The ECONTROLLY replacement remote control requires no programming or setup. Simply install the batteries, and it is ready for use.

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks.

Note: Use new alkaline batteries for optimal performance. Rechargeable batteries may not provide sufficient power for consistent operation. Batteries are not included with the remote control.



Image: Back view of the remote control with the battery cover removed, illustrating the battery insertion process.



 



Image: Rear view of the remote control with the battery compartment securely closed.

Operating Instructions

This remote control utilizes infrared technology for communication with your Marantz SR receiver. Ensure a clear line of sight between the remote and the receiver's infrared sensor for proper operation.



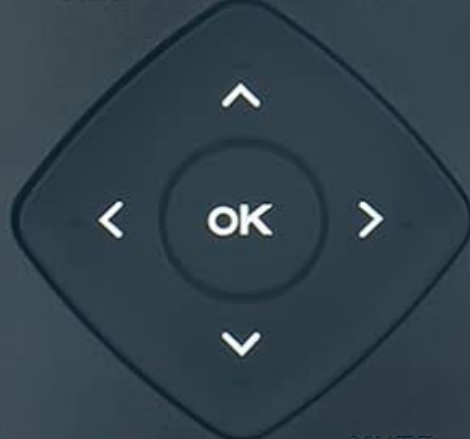

SOURCE



Image: Front view of the ECONTROLLY remote control, displaying the layout of all functional buttons.

Button Functions

- **POWER ()**: Turns the connected device (e.g., Marantz receiver) on or off.
- **TV / SAT / DVD / AUX**: Selects the input source on your receiver.
- **MENU / EXIT**: Accesses or exits the on-screen menu.
- **OK / Navigation Buttons (◀ ▲ ▼ ▶)**: Navigates through menus and confirms selections.
- **VOLUME (+/-)**: Adjusts the volume level.
- **MUTE ()**: Mutes or unmutes the audio output.
- **Playback Controls ()**: Controls media playback (Play, Pause, Rewind, Fast Forward).
- **Number Buttons (0-9)**: Direct input for channel selection or numerical entries.
- **SOURCE**: Cycles through available input sources.
- **INFO / EPG**: Displays program information or Electronic Program Guide.
- **SMART / NET TV**: Accesses smart TV or network features (functionality depends on receiver capabilities).
- **BACK / EXIT**: Returns to the previous screen or exits a function.
- **SIZE / SETUP / SUBT.**: Specific function buttons, refer to your receiver's manual for detailed use.

Maintenance

Battery Replacement

If the remote control's response becomes sluggish or inconsistent, replace the batteries. Always replace both batteries simultaneously with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Troubleshooting

- **Remote is not responding:**
 - Ensure new alkaline batteries are correctly installed.
 - Check for any obstructions between the remote control and the receiver's infrared sensor.
 - Verify that the remote is pointed directly at the receiver.
 - Confirm that the receiver is powered on.
- **Certain buttons do not work:**
 - Some advanced functions may be specific to the original remote or require specific receiver settings. Refer to your Marantz receiver's original manual for detailed function explanations.
 - Ensure the correct input source (e.g., TV, DVD) is selected on the remote if the button is source-specific.

Specifications

Brand	ECONTROLLY
Model Number	TSDA-MES
Compatible Devices	Marantz SR Series Receivers (SR5007, SR4200, SR5015, SR5003, SR6009, SR6010, SR6011)
Dimensions	6 x 3 x 0.5 inches
Item Weight	2 ounces
Color	Black
Special Feature	Ergonomic design
Power Source	2 x AA Batteries (not included)

Customer Support

If you encounter any issues with your ECONTROLLY replacement remote control that are not resolved by the troubleshooting steps, or if you have questions regarding compatibility, please contact ECONTROLLY customer support. Provide your product model number (TSDA-MES) and a detailed description of the issue for efficient assistance. Refer to the retailer's website or your purchase documentation for specific contact information.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNRRL9G2>

More documents and user manuals: <https://manuals.plus/>