

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RC01M Replacement Remote Control User Manual

ECONTROLLY RC01M

ECONTROLLY RC01M Replacement Remote Control User Manual

INTRODUCTION

This manual provides instructions for the ECONTROLLY RC01M Replacement Remote Control, designed for use with Sky Cajas HD and Sky Cajas Regulares devices. This remote offers a direct replacement solution, functioning without the need for programming.





Image: Front view of the ECONTROLLY RC01M Replacement Remote Control, showcasing all buttons and its ergonomic design.

SETUP

Battery Installation

The remote control requires two (2) AA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open.
3. Insert two AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the cover back into place until it clicks securely.

Note: For optimal performance, use new alkaline batteries. Rechargeable batteries may not provide sufficient power.





Image: Back view of the ECONTROLLY RC01M remote control with the battery compartment open, illustrating where to insert two AA batteries.

OPERATING INSTRUCTIONS


Basic Operation

Once batteries are installed, the remote is ready for immediate use with compatible Sky Cajas HD and Sky Cajas Regulares devices. Point the remote directly at your device.

- **Power Button:** Turns the device on or off.
- **Menu Button:** Accesses the device's main menu.
- **Guide Button:** Displays the program guide.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes channels.
- **Number Pad (0-9):** Directly enters channel numbers or other numerical inputs.
- **Mute Button:** Silences the audio.
- **TV/Video Button:** Switches input sources on your television.

Compatibility

This remote control is compatible with Sky Cajas HD and Sky Cajas Regulares models that originally used the RC01M remote.

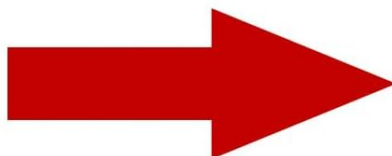

Replace

Original

Image: A visual comparison between the ECONTROLLY RC01M replacement remote (left) and an original remote (right), highlighting their similar button layouts.

MAINTENANCE

To ensure the longevity and proper function of your remote control:

- Keep the remote control dry. Avoid exposure to liquids.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the remote or subjecting it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity. Replace with new alkaline batteries if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the device's infrared receiver.
- **Distance:** Operate the remote within a reasonable distance from the device.
- **Device Power:** Confirm that the device itself is powered on.

Buttons Not Functioning Correctly

- **Clean Buttons:** If specific buttons are sticky or unresponsive, gently clean around them with a soft, dry cloth.
- **Battery Check:** Weak batteries can sometimes cause intermittent button functionality. Replace batteries.

If issues persist after following these steps, please contact customer support.

SPECIFICATIONS

- **Model:** RC01M
- **Brand:** ECONTROLLY
- **Power Source:** 2 x AA Batteries (not included)
- **Material:** ABS
- **Dimensions:** 6 x 3 x 0.5 inches (approximately)
- **Item Weight:** 2 ounces (approximately)
- **Special Feature:** Ergonomic design
- **Compatible Devices:** Television (specifically Sky Cajas HD and Sky Cajas Regulares)

WARRANTY AND SUPPORT

For product support or warranty inquiries, please refer to the contact information provided by your retailer or the ECONTROLLY official website. Ensure you have your purchase details and product model number (RC01M) available.