

Farberware 5317658

Farberware Compact Battery Operated Automatic Can Opener User Manual

Model: 5317658

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Farberware Automatic Can Opener. Keep this manual for future reference.

- This appliance is intended for household use only.
- Do not immerse the can opener in water or other liquids. Clean with a damp cloth only.
- Keep fingers away from the cutting blade during operation.
- Ensure the can opener is properly positioned on the can before starting.
- Always remove batteries if the appliance will not be used for an extended period.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries properly according to local regulations.
- Keep out of reach of children.

2. PACKAGE CONTENTS

- 1 x Farberware Compact Battery Operated Automatic Can Opener

Note: 2 AA batteries are required and not included.

3. SETUP: BATTERY INSTALLATION

The Farberware Automatic Can Opener requires 2 AA batteries for operation.

1. Locate the battery compartment on the underside of the can opener.
2. Gently lift the cover to open the battery compartment.
3. Insert 2 AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.

4. Close the battery compartment cover securely.



Figure 3.1: Battery installation. Simply lift the cover to replace AA batteries.

4. OPERATING INSTRUCTIONS

The Farberware Automatic Can Opener is designed for easy, hands-free operation.

1. Place the can opener on top of the can, aligning the guide with the can's edge. Ensure the cutting wheel is positioned just inside the rim of the can.
2. Press the "Start" button to begin operation. The can opener will automatically grip the can and start rotating around the lid.
3. Allow the can opener to complete a full rotation. It will typically stop automatically once the lid is fully cut. If it does not stop, press the "Stop" button.
4. Once the cutting is complete, the built-in magnet will lift the lid from the can, preventing direct contact with sharp edges.
5. Carefully remove the can opener from the can and dispose of the lid safely.

FARBERWARE



HANDS-FREE

Attach to top of can and
press button to operate;
press button again to stop

Figure 4.1: Hands-free operation. Attach to top of can and press button to operate; press button again to stop.



FARBERWARE

FARBERWARE
3V DC 1.5V TYPE AA

SAFE AND EASY

The magnet lifts the lid from the can, preventing fingers from touching sharp edges

Figure 4.2: Safe and easy lid removal. The magnet lifts the lid from the can, preventing fingers from touching sharp edges.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity of your can opener.

- To clean the can opener, wipe the exterior with a damp cloth. Do not use abrasive cleaners.
- Do not immerse the can opener in water or place it in a dishwasher.
- Ensure the cutting wheel area is free of food debris after each use.
- Store the can opener in a dry place when not in use. Its compact size allows it to tuck into a drawer.

FARBERWARE™

COMPACT & PORTABLE

No cords or plugs and tucks into a drawer when not in use*



Figure 5.1: Compact and portable design for easy storage.

6. TROUBLESHOOTING

If you encounter issues with your can opener, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Can opener does not start or stops during operation.	Batteries are low or incorrectly installed.	Replace with fresh AA batteries and ensure correct polarity.
	Can opener is not properly aligned on the can.	Re-position the can opener, ensuring the guide is flush with the can's edge.

Problem	Possible Cause	Solution
Can is not fully opened or cut is uneven.	Can opener not properly seated. Cutting wheel is dirty or worn. Can rim is damaged or unusual shape.	Ensure the can opener is firmly attached and aligned before starting. Clean the cutting wheel area. Try re-positioning the opener or attempt on a different can.
Lid does not lift with the magnet.	Lid material is non-magnetic. Lid is stuck due to contents or vacuum seal.	Use a separate tool to carefully lift the lid. Gently pry the lid off using a non-sharp utensil.

7. SPECIFICATIONS

Brand	Farberware
Model Number	5317658
Color	Gray
Material	Chrome, Plastic
Dimensions (L x W x H)	9.06 x 2.56 x 2.17 Inch
Item Weight	9.6 ounces (0.27 Kilograms)
Operation Mode	Automatic
Power Source	2 AA Batteries (not included)

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact Farberware customer service directly. Contact details can typically be found on the manufacturer's official website or on the product's retail page.

You may also visit the official Farberware store for more information:[Farberware Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question