

FREEZE2TRIM Globe Toy

FREEZE2TRIM Galaxy Ball Toy 2025

MODEL: GLOBE TOY - INSTRUCTION MANUAL

Introduction

The FREEZE2TRIM Galaxy Ball Toy 2025 is a motorized flying spinner designed for interactive play. This orb drone features LED lights and is capable of various aerial maneuvers, including a boomerang effect. It is suitable for both indoor and outdoor use and is designed with safety and durability in mind.

What's in the Box

- Galaxy Ball Toy
- Remote Control
- USB Cable

Safety Information

The Galaxy Ball Hover Ball Fidget Ball is constructed from high-quality, eco-friendly ABS material. It features a concealed propeller design to protect fingers during operation. Intelligent collision technology automatically stops the propellers upon impact with obstacles, enhancing safety during play.

Recommended age for use is 8 years and up.

Setup

1. **Charging the Device:** Use the provided USB cable to charge the Galaxy Ball. Connect the USB cable to the charging port on the ball and to a compatible USB power source. A full charge takes approximately 15 minutes and provides up to 30 minutes of continuous play.
2. **Powering On:** Locate the power button on the top of the ball and push it to turn the device on.
3. **Initial Activation:** Gently shake the ball to start the propellers.



POWER BUTTON


USB CHARGE

**To Turn On, Push Power Button
On Top of Ball**

To Start Shake the Ball.
To Stop and Start Again, use Included Remote Control



**Watch the Galaxy Ball
Hover Over Your Hand!**

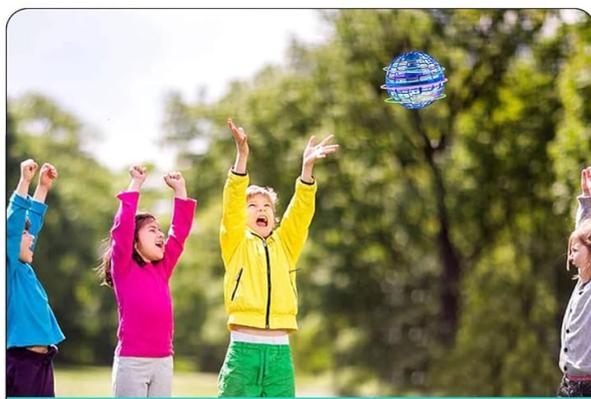

Straight Flight

Turn the Ball Downwards by 30° for Steady,
Straight-line Trajectory



Like a Boomerang

Toss the Ball Upwards at a 30° Angle to
Witness Mesmerizing Spins & a Return Flight

Figure 1: Power button location and initial activation steps.



Figure 2: USB charging for the Galaxy Ball.

Operating Instructions

The Galaxy Ball is designed for intuitive control using hand gestures. A simple shake starts or stops the propellers.

1. **Basic Flight:** Once activated, the ball will hover. You can guide its flight path with your hands.
2. **Straight Flight:** To achieve a steady, straight-line trajectory, turn the ball downwards by approximately 30 degrees before launching.
3. **Boomerang Effect:** Toss the ball upwards at a 30-degree angle to observe mesmerizing spins and its return flight to your hand.
4. **Stopping the Device:** To stop the ball, you can either shake it again or use the included remote control.

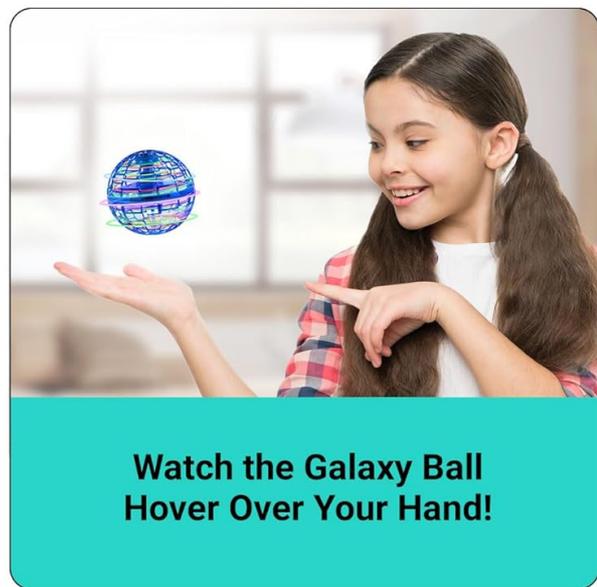


Figure 3: Demonstrations of various flight modes and control methods.

You will love how the Galaxy Ball hovers over the palm of your hand. Throw it high and watch it light up the sky!



Figure 4: Hand control for hovering and launching the Galaxy Ball.

Maintenance

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the Galaxy Ball. Do not use harsh chemicals or immerse the device in water.
- **Storage:** Store the Galaxy Ball in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in active use.

Troubleshooting

Problem	Possible Cause	Solution
Ball does not turn on.	Low battery or power button not pressed correctly.	Charge the ball using the USB cable. Ensure the power button is fully pressed.

Problem	Possible Cause	Solution
Ball does not fly or flies erratically.	Insufficient power, propellers obstructed, or incorrect launch technique.	Ensure the ball is fully charged. Check for any debris obstructing the propellers. Review operating instructions for proper launch angles.
Short play time.	Battery not fully charged or battery degradation over time.	Ensure the ball is charged for the recommended 15 minutes. If the issue persists, contact customer support.
Remote control not working.	Remote battery low or out of range.	Replace remote control batteries (if applicable). Ensure you are within the effective range of the remote.

Specifications

- **Model Number:** Globe Toy
- **ASIN:** B0CNS976X3
- **Package Dimensions:** 4.09 x 4.09 x 3.9 inches
- **Item Weight:** 2.39 ounces
- **Manufacturer Recommended Age:** 8 years and up
- **Batteries:** 1 Lithium Ion battery required (included)
- **Manufacturer:** FREEZE2TRIM

Warranty and Support

For warranty information or technical support, please contact FREEZE2TRIM directly through their official channels or the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.