

- Manuals.plus /
- › Satisfyer /
- › Satisfyer Pixie Dust Vibrator User Manual

Satisfyer B0CNSB43ML

Satisfyer Pixie Dust Vibrator User Manual

Model: B0CNSB43ML | Brand: Satisfyer

1. INTRODUCTION

The Satisfyer Pixie Dust is an innovative clitoral vibrator designed to provide enchanting stimulation through a combination of touch-free pressure waves and intense vibrations. Featuring two individually controllable motors, this device offers a wide range of customizable pleasure experiences. Its body-safe silicone construction and waterproof design ensure comfort, hygiene, and versatility for use in various environments, including the shower or bathtub.



Image 1: Front view of the Satisfyer Pixie Dust Vibrator, showcasing its mint-pink color gradient and sleek design.

2. SAFETY INFORMATION

Please read all instructions carefully before first use and retain this manual for future reference. Your safety is paramount.

- **For Adult Use Only:** This product is intended for adult use only. Keep out of reach of children.
- **Material Safety:** The device is made of body-safe silicone. If you experience any irritation, discontinue use immediately.
- **Charging:** Use only the provided USB charging cable. Do not use the device while it is charging. Ensure the charging port is dry before connecting the cable.
- **Waterproof:** The device is waterproof (IPX7), meaning it can be submerged in water up to 1 meter for 30 minutes. However, avoid prolonged submersion or use in deep water.
- **Cleaning:** Clean the device thoroughly before and after each use as described in the Maintenance section.
- **Storage:** Store the device in a clean, dry place away from direct sunlight and extreme temperatures.
- **Disposal:** Do not dispose of the device with household waste. Follow local regulations for electronic waste disposal.

3. PACKAGE CONTENTS

Upon opening your Satisfyer Pixie Dust package, you should find the following items:

- 1 x Satisfyer Pixie Dust Vibrator
- 1 x USB Magnetic Charging Cable
- 1 x User Manual (this document)



Image 2: The retail packaging for the Satisfyer Pixie Dust, indicating the product and its included accessories.

4. PRODUCT FEATURES

The Satisfyer Pixie Dust is engineered with advanced features for an unparalleled experience:

- **Air Pulse Technology:** Provides touch-free clitoral stimulation through innovative pressure waves.
- **Dual Motors:** Equipped with two individually controllable motors for both pressure wave and vibration functions.
- **Multiple Programs:** Offers 11 distinct pressure wave programs and 12 vibration programs, which can be used independently or combined.
- **Body-Safe Silicone:** Crafted from super soft, skin-friendly silicone for maximum comfort and hygiene.
- **Waterproof (IPX7):** Fully submersible, allowing for use in the shower or bath.
- **Rechargeable:** Conveniently recharges via the included USB magnetic charging cable.
- **Intuitive Control:** Designed with user-friendly buttons for easy program selection and intensity adjustment.

CARACTERÍSTICAS DEL PRODUCTO

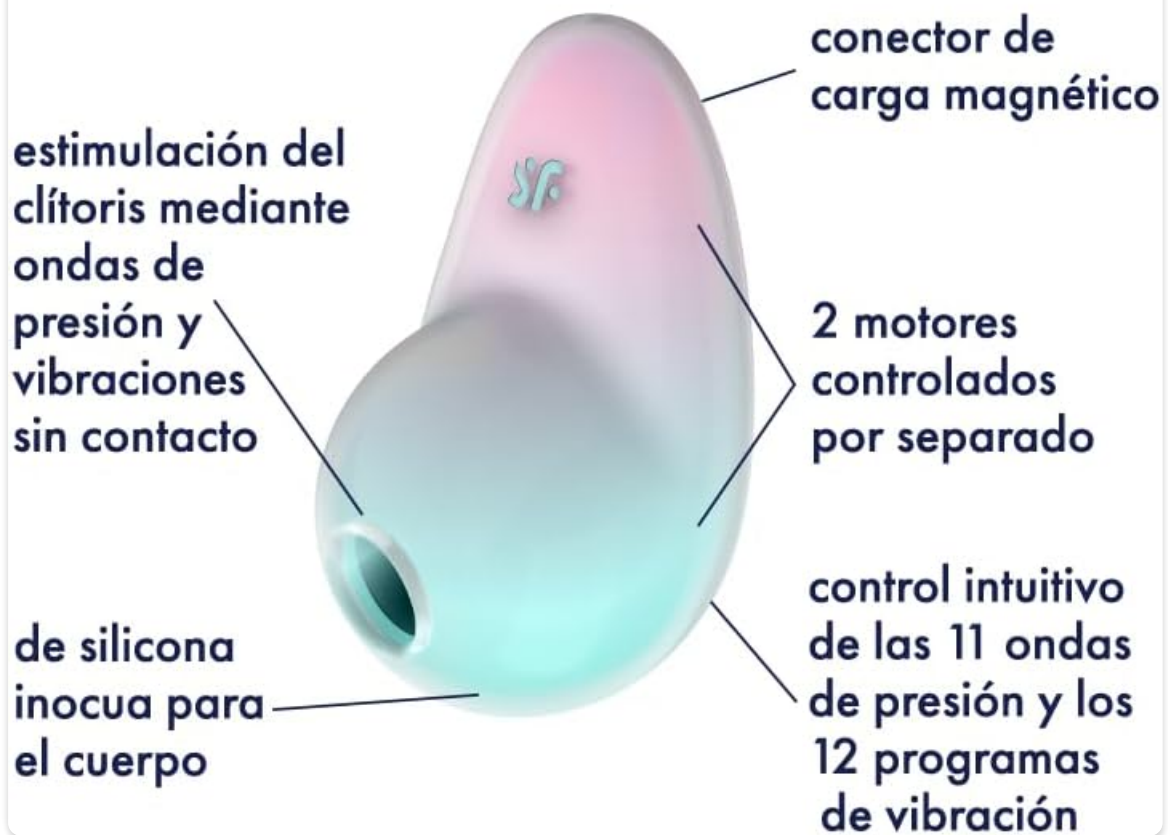


Image 3: A diagram highlighting key features of the Satisfyer Pixie Dust, including touch-free clitoral stimulation, body-safe silicone, magnetic charging, two separately controlled motors, and intuitive controls for 11 pressure wave and 12 vibration programs.

5. SETUP

5.1 Initial Charging

Before first use, fully charge your Satisfyer Pixie Dust. The device comes with a USB magnetic charging cable.

1. Locate the magnetic charging contacts on the device.
2. Connect the magnetic end of the USB cable to these contacts. It will snap into place.
3. Plug the USB-A end of the cable into a standard USB power adapter (not included), computer USB port, or power bank.
4. The device's indicator light will illuminate or flash to show it is charging. Refer to the operating instructions for specific light indicators.
5. A full charge typically takes approximately 2-3 hours. The indicator light will change or turn off when charging is complete.

Do not overcharge the device. Disconnect the charger once fully charged.

6. OPERATING INSTRUCTIONS

The Satisfyer Pixie Dust features intuitive buttons for easy control of its functions.



Image 4: A close-up view of the control buttons on the Satisfyer Pixie Dust, showing the power, pressure wave, and vibration controls.

6.1 Power On/Off

- **To Power On:** Press and hold the Power button (⏻) for approximately 2 seconds until the device vibrates or the indicator light turns on.
- **To Power Off:** Press and hold the Power button (⏻) for approximately 2 seconds until the device stops.

6.2 Adjusting Pressure Waves

- Once powered on, press the Pressure Wave button (⤴) to cycle through the 11 different pressure wave programs.
- Each short press will advance to the next program.

6.3 Adjusting Vibrations

- Press the Vibration button ())) to cycle through the 12 different vibration programs.
- Each short press will advance to the next program.

6.4 Combining Functions

The Satisfyer Pixie Dust allows you to use pressure waves and vibrations simultaneously. Simply activate both functions using their respective buttons and adjust them independently to find your preferred combination.

7. MAINTENANCE AND CARE

7.1 Cleaning

Proper cleaning ensures hygiene and extends the lifespan of your device.

1. Always clean the device thoroughly before and after each use.
2. Wash the device with warm water and a mild, toy-friendly soap or a specialized toy cleaner.
3. Rinse thoroughly with clean water to remove all soap residue.
4. Dry the device completely with a lint-free cloth or allow it to air dry before storage.
5. Do not use harsh chemicals, alcohol-based cleaners, or abrasive materials, as these can damage the silicone.

7.2 Storage

Store your Satisfyer Pixie Dust in a clean, dry, and dust-free environment. Keep it away from direct sunlight, extreme temperatures, and other toys made of different materials (e.g., PVC) to prevent material degradation.

8. TROUBLESHOOTING

If you encounter any issues with your Satisfyer Pixie Dust, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully as per Section 5.1.
Device does not charge.	Charging cable not properly connected or faulty.	Ensure magnetic contacts are clean and cable is securely attached. Try a different USB power source.
Weak or inconsistent performance.	Low battery.	Recharge the device.
Buttons are unresponsive.	Temporary software glitch.	Power off the device and then power it back on. Ensure buttons are clean and free of debris.

If the problem persists after trying these solutions, please contact Satisfyer customer support for further assistance.

9. SPECIFICATIONS

Feature	Detail
Model	Pixie Dust
ASIN	B0CNSB43ML
Color	Mint-pink
Material	Body-safe Silicone
Waterproof Rating	IPX7 (submersible up to 1 meter for 30 minutes)
Power Source	Rechargeable via USB Magnetic Cable
Pressure Wave Programs	11
Vibration Programs	12
Package Dimensions	7.48 x 6.65 x 2.99 inches
Weight	10.23 ounces
Manufacturer	Satisfyer
Country of Origin	China

10. WARRANTY AND SUPPORT

10.1 Warranty Information

Satisfyer products are known for their quality and durability. The Satisfyer Pixie Dust comes with a **15-year warranty**, ensuring long-lasting satisfaction and peace of mind. This warranty covers manufacturing defects and ensures the product functions as intended under normal use.



Image 5: Official Satisfyer 15-Year Warranty emblem, signifying extended product assurance.

10.2 Customer Support

For any questions, concerns, or warranty claims, please contact Satisfyer customer support through their official website

or the retailer from whom you purchased the product. Please have your product model number (B0CNSB43ML) and proof of purchase ready when contacting support.

You can visit the official Satisfyer store for more information:[Satisfyer Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question