

FlareMore 10224710HJ

FlareMore Electric Cordless Heating Pad for Back User Manual

Model: 10224710HJ

INTRODUCTION

Thank you for choosing the FlareMore Electric Cordless Heating Pad. This XL Heated Waist Belt Wrap is designed to provide targeted heat and vibration massage for your back, waist, and lumbar areas. Featuring 3 fast heating modes and 3 soothing vibration massage modes, this portable device offers comfort and relief. This manual provides essential information for safe and effective use of your heating pad.

SAFETY INFORMATION

- **Do not use while charging:** For safety reasons, avoid operating the device when it is connected to a power source for charging.
- **Avoid direct skin contact:** To prevent potential burns or discomfort, refrain from applying the device directly onto bare skin. Use over clothing.
- **Consult a physician:** If you have any pre-existing medical conditions, are pregnant, or have sensitive skin, consult a healthcare professional before using this product.
- **Keep out of reach of children:** This device is not a toy and should be stored away from children.
- **Proper storage:** Store the device in a cool, dry place when not in use.

PRODUCT FEATURES

The FlareMore Electric Cordless Heating Pad is equipped with several features designed for comfort and ease of use:

- **Breathable Fabric:** Constructed from a lightweight and soft fabric that offers elasticity and excellent thermal insulation.
- **Adjustable Fit:** The belt measures 46.5 x 7.9 inches and includes an extension belt, allowing comfortable coverage for waists up to 58 inches. Features a self-adhesive hook and loop closure for

secure placement.

- **Dual Therapy Modes:** Offers 3 distinct heating modes and 3 vibration massage modes for customizable relief.
- **Fast Heating:** Provides rapid warmth to the targeted area.
- **User-Friendly Touch Screen:** Intuitive controls for adjusting settings and monitoring temperature.
- **Portable & Cordless:** Powered by a built-in 5000mAh high-capacity rechargeable battery for freedom of movement.



Image: Overview of the FlareMore heating pad's key benefits and features.

PACKAGE CONTENTS

Please ensure all items are present in the package:

- FlareMore Electric Cordless Heating Pad (Grey)
- Long Strap Belt (Extension Belt)
- 1m Type-C USB Charging Cable

Note: A 5V 2A power adapter is required for charging but is not included in the package.

SETUP AND CHARGING

Initial Charging

Before first use, fully charge the heating pad. Connect the provided Type-C USB cable to the device and a 5V 2A power adapter (not included). The display will show the charging progress.

- Use a 5V 2A adapter for optimal charging.
- Do not use the device while it is charging.



Image: The heating pad's display showing charging status when connected to a power source.

Wearing the Heating Pad

The heating pad is designed for versatile use on the waist, back, lumbar, abdomen, shoulder, thigh, knee, and legs. Follow these steps for proper placement:

1. Buckle the long strap belt on the back of the heating belt.
2. Position the heating area on the desired body part (e.g., lower back).

3. Wrap the belt around your body, ensuring the control screen is on the left side. Use the extension belt if needed for a comfortable fit.
4. Fasten the belt securely using the hook and loop closures.



Image: Step-by-step guide illustrating how to correctly wear the heating pad and initiate its functions.

OPERATING INSTRUCTIONS

Power On/Off

To power the device on or off, long press the Power button located on the side of the control unit. The screen will illuminate upon activation.

Adjusting Heating and Massage Modes

Once the device is powered on, use the touch screen buttons to customize your experience:

- **Heating Button:** Tap the flame icon to cycle through the 3 heating modes:
 - Low Heat: 45°C / 113°F
 - Mid Heat: 54°C / 129.2°F
 - High Heat: 65°C / 149°F
- **Vibration Button:** Tap the wave icon to cycle through the 3 vibration massage modes.

Touch Screen Buttons

Simple and convenient operation



Image: Detailed view of the touch screen buttons for controlling heating and vibration functions.



Image: Illustration of the three available heating modes and their intensity.

3 Vibration Massage Modes

Low Mid High

Allows you to relax muscles and relieve stress

Image: Illustration of the three available vibration massage modes.

Temperature Display Conversion

To switch the temperature display between Celsius (°C) and Fahrenheit (°F), long press both the Heating button and the Vibration button simultaneously.

Temperature Display can Convert between °C/°F

Long press the heating button and vibration button to switch the temperature display between °C/°F



Image: Demonstrating how to switch the temperature unit on the display.

Anti-False Touch Function (Lock Button)

To prevent accidental changes to settings during use, utilize the Lock button. Short press the Power button to activate the lock function. The lock icon on the display will change color to indicate its status:

- **Green Lock Icon:** Supports adjustment (unlocked).
- **Red Lock Icon:** Avoids accidental touch (locked).

Anti-false Touch Function



Image: Visual guide for using the lock function to prevent unintended button presses.

MAINTENANCE

Cleaning Instructions

To maintain the cleanliness and longevity of your heating pad:

- **Wipe with a damp cloth:** It is recommended to gently wipe the surface of the heating pad with a damp cloth.
- **Do not machine wash:** The device contains internal motors and electronic components, making it unsuitable for machine washing.
- **Do not soak in water:** Avoid submerging the heating pad in water or any other liquids.



Image: Visual guide on how to clean and maintain the heating pad.

TROUBLESHOOTING

If you encounter any issues with your FlareMore Electric Cordless Heating Pad, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not power on.	Low battery or not charged.	Ensure the device is fully charged using the provided Type-C cable and a 5V 2A adapter. Long press the Power button to turn on.
Heating function is weak or not working.	Low battery; incorrect heat setting; device not positioned correctly.	Recharge the battery. Select a higher heat mode. Ensure the heating elements are in direct contact with clothing over the desired area.
Vibration massage is inconsistent or not working.	Low battery; vibration mode not activated; internal motor issue.	Recharge the battery. Tap the Vibration button to cycle through modes. If the issue persists after charging, contact customer support.
Controls are unresponsive.	Lock function is active.	Short press the Power button to unlock the controls (lock icon should be green).

If the problem persists after attempting these solutions, please contact FlareMore customer support for further assistance.

SPECIFICATIONS

- **Brand:** FlareMore
- **Model Number:** 10224710HJ
- **Model Name:** FlareMore Heating Pad
- **Color:** Grey
- **Material:** Fabric
- **Belt Dimensions:** 46.5 x 7.9 inches (118 x 20 cm)
- **Max Waist Coverage (with extension):** Up to 58 inches

- **Battery:** Built-in 5000mAh high-capacity rechargeable battery
- **Charging Input:** 5V 2A (adapter not included)
- **Heating Modes:** 3 levels (Low: 45°C/113°F, Mid: 54°C/129.2°F, High: 65°C/149°F)
- **Massage Modes:** 3 vibration levels
- **Package Dimensions:** 10.67 x 8.23 x 3.27 inches (27.1 x 20.9 x 8.3 cm)
- **Item Weight:** 1.87 Pounds (0.85 kg)

Premium Diving-Level Material

Light and soft, good elasticity, strong thermal insulation

Fastener Belt



Heated Pad for Back



Extension Belt



Image: Detailed dimensions and material information for the heating pad components.

WARRANTY AND SUPPORT

FlareMore is committed to providing high-quality products. For any questions, concerns, or warranty inquiries regarding your Electric Cordless Heating Pad, please contact our customer support team. Please have your model number (10224710HJ) and purchase information ready when contacting support.

Contact information can typically be found on the product packaging or the retailer's website where the product was purchased.

