Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- KIVI /
- > KIVI 43U750NW 43-inch Smart TV Android UHD Frameless: User Manual

KIVI 43U750NW

KIVI 43U750NW 43-inch Smart TV Android UHD Frameless: User Manual

Model: 43U750NW | Brand: KIVI

1. Introduction

This manual provides essential information for the safe and efficient operation of your KIVI 43U750NW 43-inch Smart TV. Please read it thoroughly before using the device and retain it for future reference.



Figure 1.1: Front view of the KIVI 43U750NW 43-inch Smart TV. This image displays the television's frameless design and vibrant display, highlighting its modern aesthetic.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Use only the power cord supplied with the TV.
- · Keep batteries out of reach of children.

3. SETUP

3.1 Unpacking and Contents

Carefully remove the TV from its packaging. Verify that all components are present:

- KIVI 43U750NW Television
- Remote control
- 2 x AAA batteries (for remote)
- Power cord
- Stand components (if applicable)
- 4 x screws (for stand/wall mount)
- Hex key
- · Composite adapter
- Installation instructions, user manual, warranty card, energy label, microfiche

3.2 Stand Installation / Wall Mounting

For stand installation, attach the provided stand components to the bottom of the TV using the supplied screws and hex key. Ensure the stand is securely fastened before placing the TV on a stable surface.

For wall mounting, use a compatible VESA wall mount (not included) and follow the wall mount manufacturer's instructions. The TV supports wall mounting.

3.3 Connecting Peripherals

The KIVI 43U750NW offers various connectivity options:



Figure 3.1: Rear view of the KIVI 43U750NW showing available ports. This image illustrates the location of HDMI, USB, Ethernet, Optical, Mini RCA, Antenna, Headphone, and CI ports.

- **HDMI:** Connect external devices like Blu-ray players, game consoles, or set-top boxes. The TV features HDMI (eARC) for enhanced audio return channel functionality.
- USB 2.0: Connect USB storage devices for media playback.
- Ethernet: For a wired internet connection.
- Optical: Digital audio output for soundbars or home theater systems.
- Mini RCA: For connecting older analog devices using the composite adapter.
- Antenna (75 Ω): Connect your terrestrial or cable antenna.
- Headphone: For private listening.
- CI Slot: For Conditional Access Modules (CAM) from your service provider.
- Wi-Fi: Supports Wi-Fi 5G for wireless internet connectivity.
- Bluetooth: For connecting wireless accessories like headphones or game controllers.

3.4 Initial Power-On and Setup Wizard

- 1. Connect the power cord to the TV and a power outlet.
- 2. Press the power button on the remote control or TV.
- 3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection, and channel scanning.
- 4. Insert the 2 AAA batteries into the remote control. The remote uses BT+IR technology.



Figure 3.2: KIVI Smart TV remote control. This image shows the ergonomic design of the remote control, featuring dedicated buttons and a microphone for voice commands.

4. OPERATING YOUR TV

4.1 Remote Control Functions

The remote control allows you to navigate the TV's features. Key functions include:

- Power Button: Turns the TV on or off.
- Navigation Pad: For menu navigation.
- OK Button: Confirms selections.
- Back/Home Buttons: Returns to previous screen or home menu.
- Volume Up/Down: Adjusts audio level.
- Channel Up/Down: Changes TV channels.
- Voice Assistant Button: Activates voice control for commands and searches.
- Dedicated App Buttons: Quick access to streaming services like Netflix.

4.2 Android TV 11 Interface

Your KIVI Smart TV runs on Android TV 11, providing access to a wide range of apps and features.



Figure 4.1: The Android TV 11 home screen. This image displays the user-friendly interface with various streaming app icons and Google ecosystem integration.

- Home Screen: Provides quick access to installed apps, recommended content, and settings.
- Google Play Store: Download and install additional applications.
- Voice Assistant: Use voice commands for searching content, controlling smart home devices, and more.
- Streaming Services: Pre-installed and compatible with popular services like Netflix, Amazon Prime, HBO, and Disney+.

4.3 Picture and Sound Settings

Optimize your viewing experience through the TV's settings menu:

- **Picture Modes:** Select from various presets (e.g., Standard, Vivid, Movie) or customize settings like brightness, contrast, and color.
- HDR10 & HLG Support: Enjoy enhanced contrast and color with compatible HDR content.
- MEMC (Motion Estimation, Motion Compensation): Improves motion clarity for fast-paced scenes.
- Max Vivid: Enhances color saturation for SDR content.
- Super Contrast Control: Dynamically adjusts contrast for deeper blacks and brighter whites.
- Ultra Clear: Optimizes picture clarity and detail.
- Sound Modes: Choose from presets (e.g., Standard, Music, Movie) or adjust equalizer settings.
- **Dolby Audio:** Provides an immersive audio experience.
- Surround Sound: Configured for 2.0 channel output.

4.4 Gaming Features

The TV includes features designed to enhance your gaming experience:

 ALLM (Auto Low Latency Mode): Automatically switches to a low-latency mode when a game console is detected, reducing input lag. • Game Mode: Optimizes picture settings for gaming.

5. MAINTENANCE

5.1 Cleaning Your TV

- Screen: Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaning solution specifically designed for TVs, applied to the cloth, not directly to the screen.
- Exterior: Wipe the TV casing with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Always unplug the TV from the power outlet before cleaning.

5.2 Software Updates

Your KIVI Smart TV may receive software updates to improve performance and add new features. It is recommended to keep your TV connected to the internet to receive these updates automatically. You can also manually check for updates in the TV's settings menu.

6. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

• No Power:

- Ensure the power cord is securely connected to both the TV and the power outlet.
- Check if the power outlet is functioning by plugging in another device.
- Try pressing the power button on the TV itself, not just the remote.

• No Picture, But Sound:

- Verify the correct input source is selected.
- Check cable connections from external devices.

• No Sound, But Picture:

- Increase the volume.
- Check audio settings and ensure Mute is not activated.
- If using external audio, ensure it is properly connected and powered on.

· Remote Control Not Working:

- · Replace the AAA batteries.
- Ensure there are no obstructions between the remote and the TV's IR sensor.
- If using Bluetooth, ensure the remote is paired with the TV.

• Network Connection Issues:

- Restart your router and modem.
- Check Wi-Fi password if connecting wirelessly.
- If using Ethernet, ensure the cable is securely connected.

7. SPECIFICATIONS

Feature	Detail
Brand	KIVI
Model	43U750NW
Screen Size	43 Inch
Resolution	3840 x 2160 Pixels (4K UHD)
Display Technology	LED, Super MVA
Refresh Rate	60 Hz
Operating System	Android 11
Memory Storage Capacity	8 GB
Connectivity	Bluetooth, Ethernet, HDMI (eARC), USB 2.0, 3.5 mm audio, Optical, Mini RCA, Wi-Fi 5G
Audio Output Mode	Surround (2.0 channel)
Max Speaker Power	12 Watt
Power Source	Electric Corded (220 VAC)
Wattage	12 Watt
Product Dimensions (WxHxD)	96 x 55.6 x 6.4 cm
Product Weight	9.9 kg
Energy Efficiency Class	F
Supported Internet Services	Netflix, Amazon Prime, HBO, Disney+

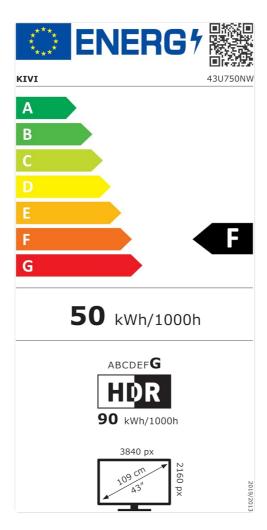


Figure 7.1: EU Energy Label for KIVI 43U750NW. This label indicates an energy efficiency class F and power consumption details. For more details, visit the **EPREL database**.

8. WARRANTY INFORMATION

The KIVI 43U750NW Smart TV typically comes with a**2-year display warranty**. For complete details regarding your product's warranty, including coverage, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official KIVI website. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact KIVI customer support. Contact information can usually be found on the official KIVI website or on your warranty card.

Related Documents - 43U750NW



KIVI LED TV User Manual

User manual for KIVI LED TVs, providing comprehensive guidance on setup, features, operation, troubleshooting, and safety. Includes model specifications and support information.



KIVI LED TV User Manual

Comprehensive user manual for KIVI LED TVs, covering setup, operation, safety, specifications, and troubleshooting for various models. Access the electronic version and support resources.



KIVI LED TV User Manual: Installation, Features, and Troubleshooting Guide

Comprehensive user manual for KIVI LED TVs (models 24H740LW, 24H740LB), covering setup, operation, safety guidelines, specifications, and troubleshooting tips.



KIVI LED TV User Manual - Comprehensive Guide

Explore the KIVI LED TV user manual for detailed instructions, features, troubleshooting, and setup guides. Learn how to safely operate and maintain your KIVI television.



KIVI LED TV User Manual: Setup, Features, and Troubleshooting

Comprehensive user manual for KIVI LED TVs, covering setup, features, remote control, connectivity, troubleshooting, and specifications. Learn how to use your KIVI TV safely and effectively.



KIVI LED TV User Manual - Comprehensive Guide

This user manual provides detailed instructions for setting up, operating, and troubleshooting your KIVI LED TV. Available in multiple languages, it ensures safe and effective use.