

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Modway](#) /

› [Modway Tessa Tall Arched Storage Display Cabinet \(Model EEI-6638\) User Manual](#)

## Modway EEI-6638

# Modway Tessa Tall Arched Storage Display Cabinet (Model EEI-6638) User Manual

Model: EEI-6638

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your Modway Tessa Tall Arched Storage Display Cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference. This cabinet is designed to offer versatile storage and display solutions with its distinctive arched design and functional features.



Image 1.1: The Modway Tessa Tall Arched Storage Display Cabinet in an entryway setting.

## 2. SAFETY INFORMATION

---

To ensure safe use of your cabinet, please observe the following guidelines:

- **Weight Limits:** Do not exceed the specified weight limits for each shelf. Overloading can cause structural damage or tipping.
  - Arched Shelf: 88 lbs (40 kg)
  - Adjustable & Fixed Shelves: 70 lbs (31.75 kg) each
  - Bottom Shelf: 84 lbs (38 kg)
- **Stable Placement:** Always place the cabinet on a stable, level surface to prevent tipping.
- **Hinge Caution:** Exercise caution when opening and closing doors to avoid pinching fingers.
- **Assembly:** Ensure all components are securely fastened according to the assembly instructions. Loose parts can compromise stability.
- **Children and Pets:** Keep children and pets away from the assembly area. Do not allow children to climb on or play

with the cabinet.

- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

### 3. PACKAGE CONTENTS

---

Before assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Cabinet Frame Components (sides, top, bottom, back panels)
- Tempered Glass Doors (2)
- Adjustable Shelves (2)
- Fixed Shelf (1)
- Wood Legs (4)
- Metal Ring Pull Handles (2, brushed gold finish)
- Non-Marking Felt Pads (4)
- Assembly Hardware (screws, dowels, cam locks, hinges, shelf pins)

### 4. SETUP AND ASSEMBLY INSTRUCTIONS

---

Assembly of the Modway Tessa Tall Arched Storage Display Cabinet is required. It is recommended to have two people for assembly. Follow the detailed steps provided in the included assembly guide. A general overview of the process is provided below:

1. **Prepare the Area:** Clear a spacious, clean, and soft area (e.g., carpeted floor) to prevent scratching components during assembly.
2. **Identify Components:** Unpack all parts and identify them using the parts list in your separate assembly guide.
3. **Assemble the Cabinet Frame:** Connect the side panels to the base and top panels using the provided hardware (e.g., cam locks, dowels). Ensure all connections are tight and secure.
4. **Install Back Panel:** Attach the back panel to the assembled frame.
5. **Attach Doors:** Secure the tempered glass doors to the cabinet frame using the soft-close hinges. Adjust hinges as needed for proper door alignment.
6. **Install Handles:** Attach the metal ring pull handles to the doors.
7. **Insert Shelves:** Place the fixed shelf into its designated position. Insert shelf pins into the desired height for the two adjustable shelves and place the shelves on top.
8. **Attach Legs:** Secure the wood legs to the bottom of the cabinet. Apply non-marking felt pads to the bottom of the legs to protect your flooring.
9. **Final Check:** Verify that all connections are secure and the cabinet is stable.



**71" H**

**16.5" W**

**31" L**

*Image 4.1: Cabinet dimensions: 31" L x 16.5" W x 71" H.*





*Image 4.2: Interior view with doors open, highlighting the adjustable and fixed shelves.*

## 5. OPERATING INSTRUCTIONS


---

The Modway Tessa cabinet is designed for displaying and storing various items. Follow these guidelines for optimal use:


- **Adjusting Shelves:** The two adjustable shelves can be repositioned to accommodate items of different heights. To adjust, remove items from the shelf, lift the shelf, remove the shelf pins, reinsert pins into desired holes, and then place the shelf back on the pins.
- **Loading Items:** Distribute weight evenly across shelves. Place heavier items on lower shelves to enhance stability. Do not exceed the maximum weight limits for each shelf as specified in the Safety Information section.
- **Door Operation:** The doors feature soft-close hinges for gentle and quiet closing. Use the metal ring pull handles to open and close the doors.
- **Display Area:** Utilize the arched top section and glass-front shelves for displaying decorative items, books, or collectibles. The concealed storage area behind the lower door panels is suitable for items you wish to keep out of sight.

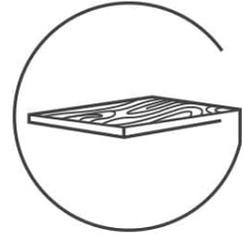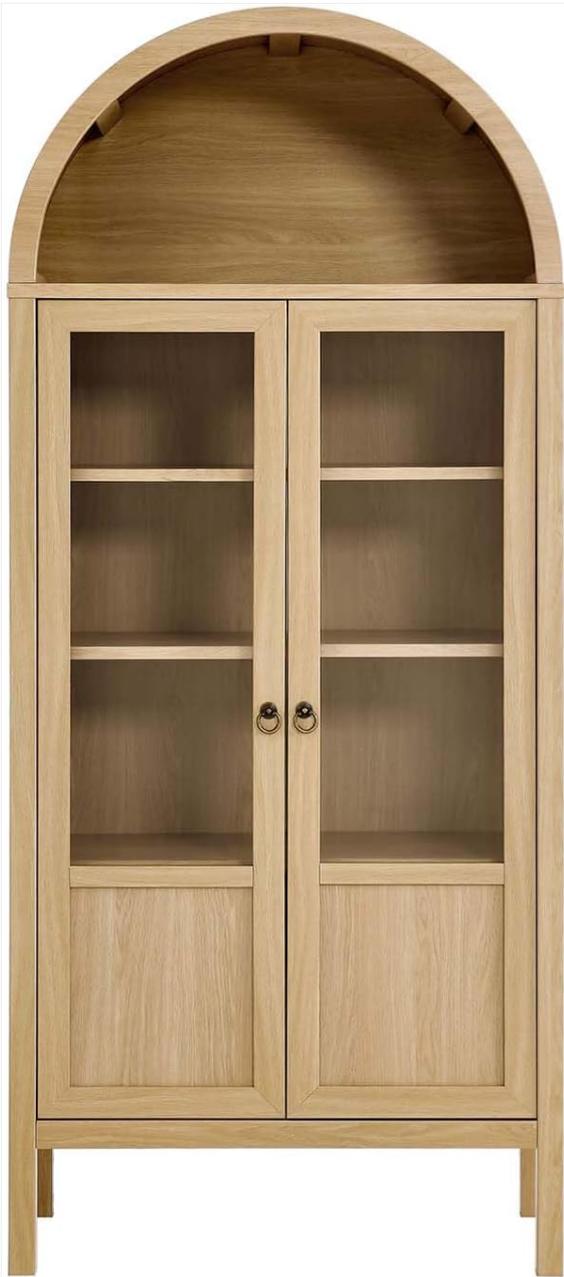

Wood Grain Laminate with  
MDF and Particleboard

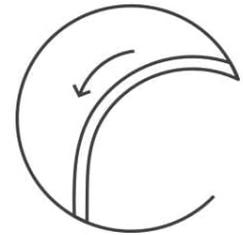

Rounded Arched Top

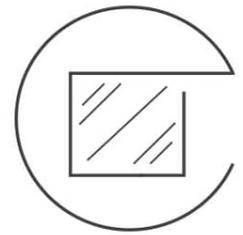

Tempered Glass Doors with  
Metal Ring Pull Handles

Image 5.1: Detail of an adjustable shelf and soft-close hinge mechanism.

## 6. MAINTENANCE

---

Proper care will extend the life and appearance of your cabinet:

- **Cleaning:** Wipe surfaces with a soft, slightly damp cloth. Avoid using abrasive cleaners, harsh chemicals, or polishes that may damage the finish. For glass panels, use a standard glass cleaner.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Tighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.
- **Humidity Control:** Maintain a consistent humidity level in the room to prevent wood from warping or cracking.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven floor; loose assembly hardware.	Ensure the cabinet is on a level surface. Check and tighten all assembly screws.
Doors do not close properly or are misaligned.	Hinges are not adjusted correctly; loose hinge screws.	Adjust the hinge screws to align the doors. Refer to the hinge adjustment section in your assembly guide. Tighten hinge screws.
Shelves sag or appear weak.	Overloaded shelf; incorrect shelf pin placement.	Reduce the weight on the shelf, ensuring it does not exceed the weight limit. Verify shelf pins are fully inserted and correctly positioned.
Missing parts or damaged components upon arrival.	Shipping damage; packaging error.	Do not assemble. Contact Modway customer support immediately for assistance.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	E EI-6638
Brand	Modway
Color	Oak
Overall Dimensions (L x W x H)	31" x 16.5" x 71" (78.7 cm x 41.9 cm x 180.3 cm)
Item Weight	83 lbs (37.6 kg)
Frame Material	Wood, MDF, and Particleboard
Top Material Type	Wood Grain Laminate or MDF
Back Material Type	Engineered Wood
Handle Material	Metal (Brushed Gold finish)
Door Style	Flat Panel with Tempered Glass
Number of Shelves	3 (2 adjustable, 1 fixed)
Weight Limit (Arched Shelf)	88 lbs (40 kg)
Weight Limit (Adjustable & Fixed Shelves)	70 lbs (31.75 kg) each
Weight Limit (Bottom Shelf)	84 lbs (38 kg)
Assembly Required	Yes
Installation Type	Freestanding

## 9. WARRANTY AND SUPPORT

---

For warranty information, missing parts, or any product-related inquiries, please contact Modway customer support directly. Keep your purchase receipt and model number (EEI-6638) handy when contacting support.

You can visit the official Modway store for additional product information and support resources: [Modway Store on Amazon](#)