

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Universal Remote Control User Manual for Hisense LED TVs (Models ERF-32909HS, ERF-32904A, HI55xt770pzln3)

ASHATA eboxhKI8hZTyc4

ASHATA Universal Remote Control User Manual

For Hisense LED TVs: ERF-32909HS, ERF-32904A, HI55xt770pzln3

Brand: ASHATA | Model: eboxhKI8hZTyc4

1. INTRODUCTION

This manual provides instructions for the ASHATA Universal Remote Control, designed as a replacement for various Hisense LED TV models, including ERF-32909HS, ERF-32904A, and HI55xt770pzln3. This remote control offers a straightforward, pre-programmed solution for operating your compatible television without the need for complex setup procedures.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Remote Control

Note: 2 x AAA dry batteries are required for operation and are not included in the package.

3. SETUP

The ASHATA Universal Remote Control is designed for immediate use with compatible Hisense TV models. No programming is required. Simply install the batteries to begin operation.

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA dry batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Battery compartment with cover removed, showing where to insert AAA batteries.

4. OPERATING THE REMOTE CONTROL

This remote control provides all essential functions for your compatible Hisense LED TV. Point the remote directly at your television's infrared receiver for optimal performance.



Figure 2: Overview of the remote control's buttons.

4.1. Key Functions

- **Power Button (Red):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels sequentially.
- **Mute:** Mutes or unmutes the TV audio.
- **Menu:** Accesses the TV's main menu.
- **OK / Navigation Arrows:** Confirms selections and navigates through menus.
- **Source:** Selects input sources (e.g., HDMI, AV).
- **Return / Exit:** Returns to the previous screen or exits a menu.
- **EPG:** Displays the Electronic Program Guide.
- **PVR, T.shift, Text, Mix, Still, Subtitle, Audio I/II, Zoom** Various media playback and display options, functionality may vary by TV model.



Figure 3: The remote control's ergonomic design for comfortable handling.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, extreme temperatures, and moisture.

6. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited functionality	Not compatible with your specific TV model or TV's IR receiver is blocked.	Ensure your TV model is listed as compatible. Check for obstructions between the remote and the TV.
Buttons are sticky or unresponsive	Dirt or debris under the buttons.	Clean the remote control with a soft, dry cloth. Avoid pressing buttons excessively hard.

7. SPECIFICATIONS

- **Item Type:** Remote Control
- **Material:** ABS
- **Color:** Black
- **Range of Application:** Applicable for ERF-32904A hI55xt770pzIn3 ERF-32909HS LED TV
- **Battery Type:** 2 x AAA Dry Battery (Not Included)
- **Model Number:** eboxhKI8hZTyc4
- **Special Features:** No programming required, pre-programmed
- **Dimensions:** Approximately 22 x 5 x 3 cm (Parcel Dimensions)

8. WARRANTY AND SUPPORT

For specific warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNVCKT1Q>

More documents and user manuals: <https://manuals.plus/>