

Beelicious 4.0L Non-Oil Air Fryer

Beelicious 4.0L Non-Oil Air Fryer Instruction Manual

Model: 4.0L Non-Oil Air Fryer | Brand: Beelicious

1. INTRODUCTION

Thank you for purchasing the Beelicious 4.0L Non-Oil Air Fryer. This appliance uses rapid hot air circulation technology to cook your favorite foods with little to no oil, resulting in healthier and delicious meals. Please read this manual thoroughly before use to ensure safe operation and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

3. PRODUCT OVERVIEW

The Beelicious Air Fryer features a sleek design with an intuitive LED touch display for easy operation. Its 4.0L capacity is suitable for 1-5 people, and it offers versatile cooking functions.



Image: Beelicious 4.0L Non-Oil Air Fryer, showcasing its compact design.

Key Features:

- **360° High-Speed Air Circulation:** Ensures even cooking and crispy results.
- **LED Touch Display:** Easy-to-use interface with preset cooking options.
- **Wide Temperature Range:** Adjustable up to 230°C for various recipes.
- **4.0L Large Capacity:** Ideal for families of 1-5 people.
- **Multi-functional:** Acts as an air fryer, oven, toaster, and more.
- **Quiet Operation:** Operates at approximately 53dB.
- **Easy to Clean:** BPA-free materials, dishwasher-safe components.

4. SETUP

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Remove any stickers or labels.
2. **Cleaning:** Before first use, clean the basket and crisper plate with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm of free space on the back, sides, and above the appliance.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

5. OPERATING INSTRUCTIONS

General Operation:

1. **Power On:** Plug in the air fryer. The power button will illuminate.
2. **Preheating (Optional but Recommended):**

Video: Guide on how to preheat the Beelicious Air Fryer. This video demonstrates setting the temperature to 200°C and a 3-minute timer for preheating before adding food.

- Touch the power button to turn on the display.
 - Adjust the temperature to 200°C and set the timer to 3 minutes.
 - Press the start button. The air fryer will preheat.
 - Once preheating is complete (alarm sounds 5 times), carefully pull out the basket.
3. **Loading Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.

360°高速空氣循環



Image: Illustration of 360-degree high-speed air circulation cooking food inside the air fryer basket.

4. Selecting Cooking Mode:

Video: Detailed guide on operating the Beelicious Air Fryer. This video demonstrates selecting preset functions, adjusting time and temperature, and using the defrost function.

- Use the LED touch display to select a preset cooking function (e.g., fries, steak, shrimp, cake, fish, bacon, vegetables, defrost).
- Alternatively, manually adjust the temperature (80°C-230°C) and time using the +/- buttons.
- Press the start button to begin cooking.

5. **Shake Reminder:** For some foods, the air fryer will beep (3 times) to remind you to shake or flip the food for even cooking. Pull out the basket, shake/flip, and reinsert. The cooking will resume automatically.

6. **Cooking Completion:** When the cooking time is complete, the air fryer will beep (5 times). Carefully remove the basket and transfer the cooked food to a plate.

Defrost Function:

- Place frozen food on the crisper plate in the basket.
- Select the 'Defrost' function on the LED display.

- Adjust temperature (e.g., 80°C) and time as needed.
- Press start. The air fryer will beep 5 times when defrosting is complete.

LEDタッチ式ディスプレイ オイル最大95%カット！



Image: The LED touch display of the Beelicious Air Fryer, showing various preset cooking icons and temperature/timer controls.

6. COOKING TIPS

- For best results, shake smaller ingredients halfway through cooking.
- Add a tablespoon of oil to fresh potatoes for a crispier result.
- Use oven-safe dishes or molds if cooking delicate items like cakes or quiches.
- The air fryer can reheat food quickly and efficiently.
- The 95% oil reduction feature allows for healthier versions of fried favorites.

95%オイルカット、ダイエットに適用！



ポテトフライ



唐揚げ



手羽先



とんかつ



天ぷら



コロッケ

Image: Various dishes like fries, fried chicken, and tempura cooked with 95% less oil using the air fryer.

7. CLEANING AND MAINTENANCE

Clean the air fryer after every use.

- **Before Cleaning:** Unplug the appliance and allow it to cool down completely.
- **Basket and Crisper Plate:** These parts are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes.

BPAフリー素材で、お手入れ簡単！

手洗いと食洗機全部対応可能！



Image: Demonstrates easy cleaning of the air fryer basket, showing both hand washing and dishwasher compatibility.

- **Interior:** Wipe the interior with a damp cloth and mild detergent. Avoid abrasive cleaners or metal scouring pads.
- **Exterior:** Wipe the exterior with a damp cloth.
- **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
- **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Shake or flip food halfway through cooking.
White smoke comes from the appliance.	Fat residue from previous use; oil/grease dripping onto heating element.	Clean the basket and crisper plate thoroughly after each use. Remove excess oil from food before air frying.
Food is not crispy.	Too much moisture in food; not enough oil (for certain foods).	Pat food dry before cooking. For some foods, a light spray of oil can help.

9. SPECIFICATIONS

- **Brand:** Beelicious
- **Model:** 4.0L Non-Oil Air Fryer
- **Capacity:** 4 Liters
- **Color:** Gray
- **Control Method:** Touch
- **Item Weight:** 3.9 kg
- **UPC:** 841837104086
- **ASIN:** B0CJVJD5MH
- **Certifications:** PSE Certified (Electrical Appliance Safety Law)

10. WARRANTY AND SUPPORT

This Beelicious Air Fryer comes with a **12-month quality guarantee**. If the product becomes defective under normal use within the warranty period, we offer returns, refunds, or exchanges.

For customer support or inquiries, please contact us:

- **Email:** haihome123@outlook.com
- Japanese language support is available within 24 hours.

品質保証



電気商品安全法PSE認証済み



食品衛生法JFSL370認証済み



24時間以内日本語対応



保証期間以内に
正常な使用範囲内で
不具合になった場合、返品・返金・交換対応



連絡先 : お問い合わせ/
haihome123@outlook.com

Image: Details on quality assurance, including PSE certification, JFSL370 certification, 24-hour Japanese support, 12-month warranty, and contact email.