

[Manuals.plus](#) /

› [MAXLANDER](#) /

› MAXLANDER 13-Inch 12Amp Electric 2-in-1 Dethatcher and Scarifier User Manual

MAXLANDER 533d9c6b-9d83-4b7d-8480-c22fecbbe03a

MAXLANDER 13-Inch 12Amp Electric 2-in-1 Dethatcher and Scarifier User Manual

Model: 533d9c6b-9d83-4b7d-8480-c22fecbbe03a

INTRODUCTION

Thank you for choosing the MAXLANDER 13-Inch 12Amp Electric 2-in-1 Dethatcher and Scarifier. This manual provides essential information for the safe assembly, operation, and maintenance of your new lawn care tool. Please read it thoroughly before first use and keep it for future reference. This machine is designed to remove thatch and scarify your lawn, promoting healthier grass growth. It is not intended for use as a lawnmower.

SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow these instructions may result in serious injury or property damage.

- **Read the entire manual:** Understand all operating instructions and warnings before use.
- **Wear appropriate personal protective equipment (PPE):** Always wear safety glasses, hearing protection, and sturdy footwear. Long pants are recommended.
- **Keep bystanders away:** Ensure children, pets, and other people are at a safe distance (at least 50 feet) from the operating area.
- **Inspect the work area:** Remove any objects such as rocks, sticks, wires, or toys that could be thrown by the blades.
- **Check for damage:** Before each use, inspect the machine for loose parts, damage, or wear. Do not operate if damaged.
- **Use a proper extension cord:** Ensure the extension cord is rated for outdoor use, is of adequate gauge for the tool's amperage, and is in good condition.
- **Maintain a firm grip:** Always hold the handle firmly with both hands during operation.
- **Avoid wet conditions:** Do not operate the machine in wet grass or rain to prevent electrical shock.
- **Disconnect power:** Always unplug the machine before performing any maintenance, cleaning, or when changing blades.
- **Double Safety Switches:** This dethatcher and scarifier feature two switches to prevent accidental startup. Ensure both are engaged correctly for operation.

COMPONENTS LIST

Verify that all components are present before assembly:

- Main Dethatcher/Scarifier Unit
- Upper Handle Assembly
- Lower Handle Assembly
- Dethatching Cylinder (pre-installed or separate)
- Scarifying Cylinder (interchangeable)
- 30L Grass Collection Bag
- Handle Knobs and Bolts
- Cord Retainer Clip
- User Manual

SETUP

Follow these steps to assemble your MAXLANDER Dethatcher and Scarifier:

1. **Attach Lower Handle:** Secure the lower handle assembly to the main unit using the provided bolts and knobs. Ensure it is firmly attached.
2. **Attach Upper Handle:** Connect the upper handle assembly to the lower handle using the remaining bolts and knobs. Make sure all connections are tight.
3. **Secure Power Cord:** Use the cord retainer clip to secure the power cord to the handle, preventing it from interfering with operation or getting caught in the blades.



Figure 1: The MAXLANDER 13-inch Electric Dethatcher and Scarifier, showcasing its 13-inch working width.



Figure 2: Illustration of the cord restraint system to keep the power cord secure during operation.

Blade Installation/Change

Your unit comes with two interchangeable cylinders: a dethatching blade and a scarifying blade. Always ensure the unit is unplugged before changing blades.

1. Lay the unit on its side to access the underside.
2. Locate the retaining mechanism for the blade cylinder.
3. Carefully remove the current cylinder.
4. Insert the desired cylinder (dethatching or scarifying) and secure it in place.
5. Ensure the cylinder is properly seated and locked before returning the unit to an upright position.

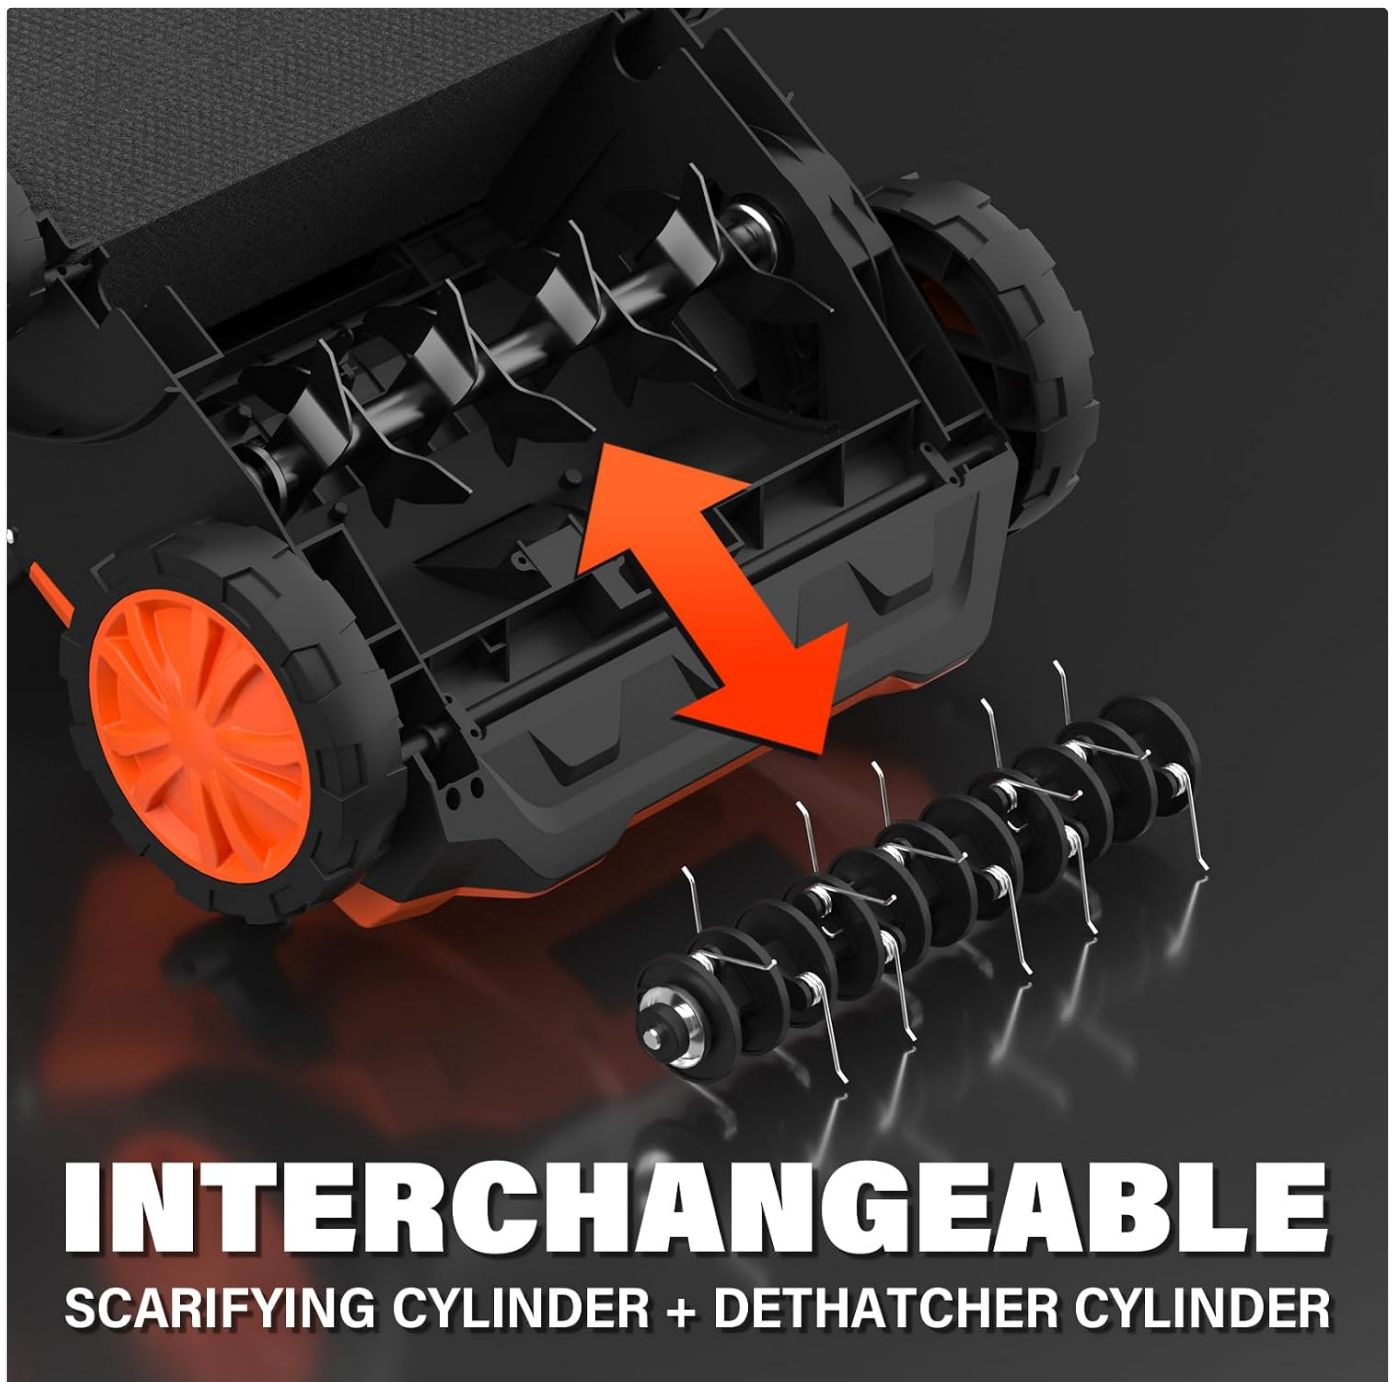


Figure 3: The interchangeable scarifying and dethatcher cylinders, highlighting the versatility of the tool.

Attaching the Collection Bag

The 30L collection bag helps gather debris during operation.

1. Lift the rear discharge flap of the main unit.
2. Hook the collection bag onto the designated slots under the flap.
3. Ensure the bag is securely attached to prevent debris from escaping.



Figure 4: The 30L grass clippings collection bag, designed for easy debris collection.

OPERATING INSTRUCTIONS

Before operating, ensure all safety precautions are understood and followed.

Depth Adjustment

The unit features a 4-position height adjustment lever to control the working depth.

- **Scarifying Blade:** Adjustable from -0.6" to 0.2".
- **Dethatching Blade:** Adjustable from -0.47" to 0.16".

Adjust the depth according to your lawn's condition and the task at hand. Start with a higher setting and gradually decrease if more aggressive action is needed.



Figure 5: Detailed view of the 4-position height adjustment lever and corresponding depth settings for both dethatching and scarifying blades.

Starting the Machine

1. Connect the power cord to a suitable outdoor extension cord, ensuring the cord retainer is used.
2. Press and hold the safety switch button located on the handle.
3. While holding the safety switch, pull the ON/OFF lever towards you. The machine will start.
4. Release the safety switch button once the machine is running.

Operating Tips

- Walk at a steady pace, pushing the machine forward. Do not pull it backward towards you.
- Overlap passes slightly to ensure complete coverage.
- Empty the collection bag frequently to maintain optimal performance and prevent clogging.
- For heavily thatched lawns, multiple passes at different depths or directions may be necessary.

Official Product Videos

Your browser does not support the video tag.

Video 1: Installation and usage guide for the MAXLANDER Dethatcher and Scarifier. This video demonstrates the assembly process and how to operate the machine effectively.

Your browser does not support the video tag.

Video 2: Demonstration of the MAXLANDER Dethatcher in use, highlighting its ease of operation and effectiveness in removing thatch.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your tool.

- **Cleaning:** After each use, unplug the machine and clean the housing, blades, and collection bag. Remove any grass clippings or debris. Do not use water directly on electrical components.
- **Blade Inspection:** Regularly inspect the dethatching and scarifying blades for wear or damage. Replace worn or damaged blades promptly.
- **Storage:** The handle is foldable for compact storage. Store the machine in a dry, secure location away from children and moisture.



Figure 6: The foldable handle design allows for convenient and space-saving storage of the dethatcher.

TROUBLESHOOTING

If you encounter issues, refer to this section before contacting customer support.

Problem	Possible Cause	Solution
Machine does not start	No power supply; Safety switch not engaged; Loose connection	Check power outlet and extension cord; Ensure safety switch and ON/OFF lever are correctly engaged; Verify all connections are secure.
Poor dethatching/scarifying performance	Incorrect depth setting; Worn or dull blades; Clogged blades/discharge chute	Adjust depth to a lower setting; Inspect and replace blades if necessary; Unplug and clear any blockages from blades or chute.
Excessive vibration	Damaged or unbalanced blade; Loose components	Unplug and inspect blades for damage; Tighten all assembly bolts and knobs.

Problem	Possible Cause	Solution
Collection bag not filling	Bag not properly attached; Discharge chute clogged; Too much moisture in grass	Ensure bag is securely attached; Unplug and clear chute; Operate on dry grass.

SPECIFICATIONS

- **Brand:** MAXLANDER
- **Model Number:** 533d9c6b-9d83-4b7d-8480-c22fecbbe03a
- **Power Source:** Corded Electric
- **Motor:** 12 Amp
- **No-Load Speed:** Up to 3,000 RPM
- **Cutting Width:** 13 Inches
- **Depth Adjustment:** 4-Position (Scarifying: -0.6" to 0.2"; Dethatching: -0.47" to 0.16")
- **Collection Bag Capacity:** 30 Liters
- **Item Weight:** 20.3 Pounds
- **Product Dimensions:** 20.67"D x 16.7"W x 12.13"H
- **Material:** Plastic
- **Color:** Orange

WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the warranty card included with your product or visit the official MAXLANDER website. Keep your purchase receipt as proof of purchase.