

[Manuals.plus](#) /

› [LIFERUN](#) /

› LIFERUN 3x6 Folding Pavilion Instruction Manual (Model PAV-003)

LIFERUN PAV-003

LIFERUN 3x6 Folding Pavilion Instruction Manual

MODEL: PAV-003

1. SAFETY WARNINGS

Important: Read all safety warnings and instructions carefully before assembly and use. Failure to follow these instructions may result in product damage, personal injury, or property damage.

- Do not expose the tent to strong winds. Secure the tent firmly to the ground using all provided anchoring equipment (ground hooks, ropes, sandbags) in the event of wind.
- Do not use the tent near open flames or heat sources. Keep all flammable materials away from the tent fabric.
- Do not overload the tent beyond its maximum capacity. Refer to specifications for recommended occupancy.
- In heavy rain, strong winds, or other severe weather conditions, it is recommended to fold and store the tent to prevent damage and ensure safety.
- Ensure the tent is fully dry before folding and storing to prevent mold and mildew.

2. PRODUCT OVERVIEW

The LIFERUN 3x6 Folding Pavilion (Model PAV-003) is a versatile and robust event shelter designed for various outdoor activities. It features a sturdy, powder-coated steel frame and a durable 210D Oxford fabric canopy with UV 50+ protection and waterproof properties. The pavilion includes four removable side walls for added protection against wind, sun, and light rain.



Image: The LIFERUN 3x6 Folding Pavilion providing shelter for an outdoor event.

Key Features:

- **Dimensions:** 3 x 6 meters, offering 18m² of shade area.
- **Adjustable Height:** Three height settings (290-300-310 cm).
- **Canopy Material:** 210D Oxford fabric with silver coating, UPF 50+ UV protection, and waterproof tape on seams.
- **Frame Material:** Powder-coated alloy steel for rust resistance.
- **Side Walls:** Four removable side walls with windows for protection.
- **Stability:** Includes 12 ground hooks, 6 ropes, and 6 sandbags for secure anchoring.
- **Portability:** Foldable design with a portable storage bag (120 x 38 x 27 cm).


3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1 x 210D Oxford Covering Fabric (Canopy)
- 1 x Coated Steel Frame (Pre-assembled)
- 4 x Side Walls
- 6 x Wind Straps (Ropes)
- 6 x Sandbags
- 6 x 7-shaped Ground Nails (Hooks)
- 6 x Spiral Ground Nails
- 1 x Portable Storage Bag


4. SETUP INSTRUCTIONS

Assembly typically requires 2 people and takes approximately 10-15 minutes. No additional tools are required.

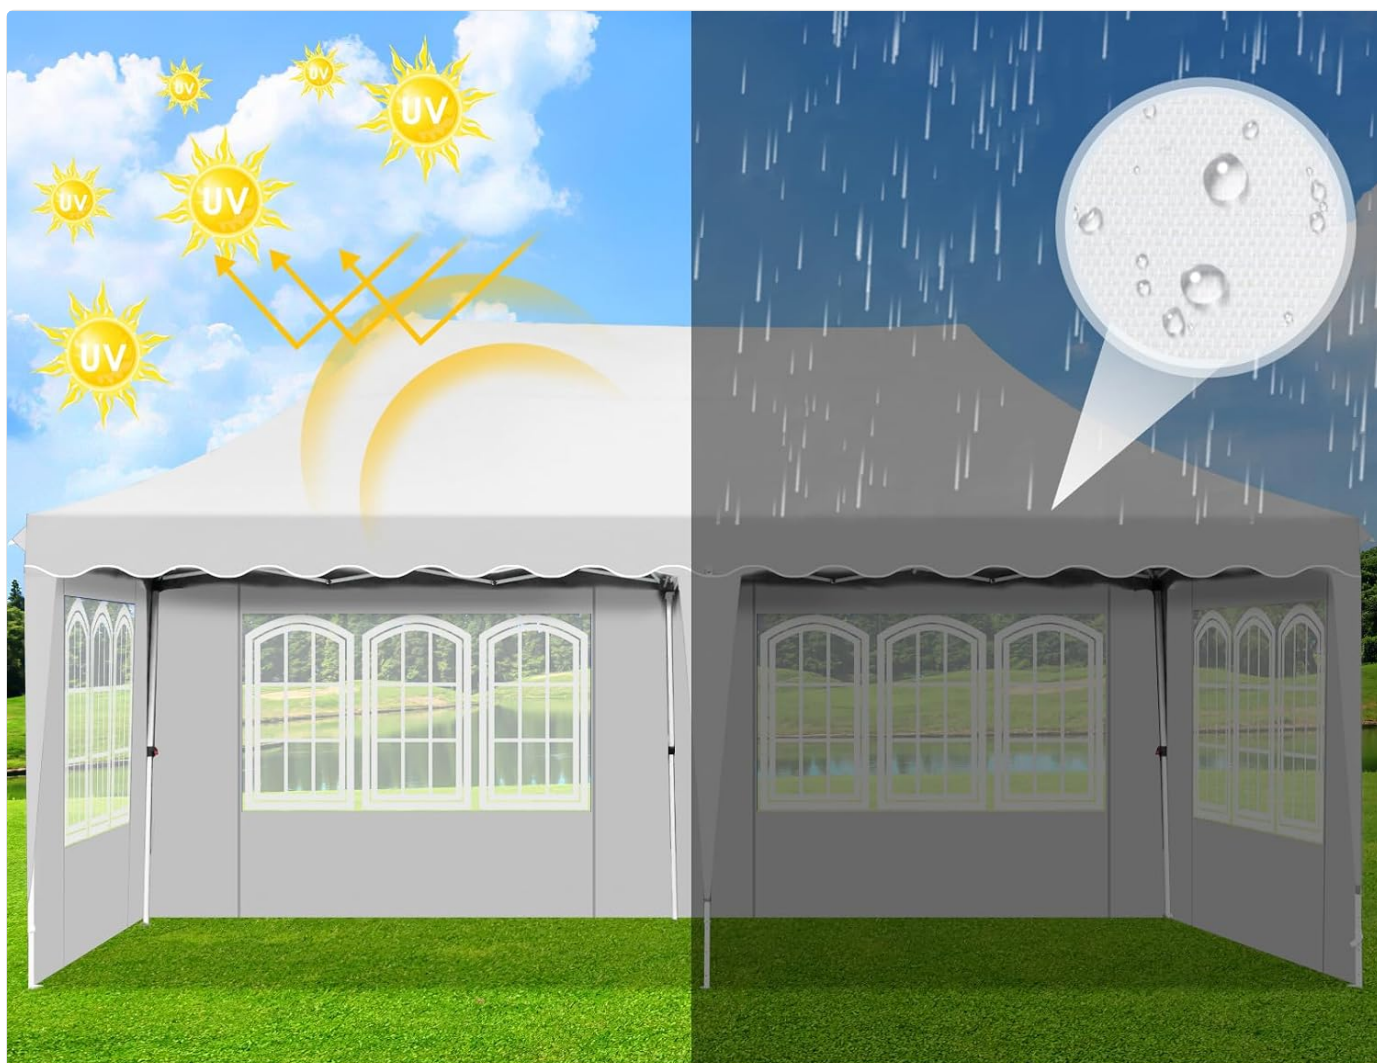

Block UV

UPF 50+
UV Resistance
Silver-coated Fabric

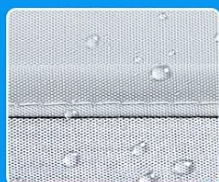

UV Waterproof

210D Oxford Cloth
Waterproof Strip
Leak Hole

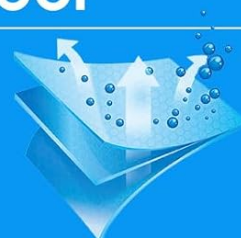 


Image: Illustration of the pavilion's UV protection (UPF 50+) and waterproof capabilities, including leak holes and waterproof tape.

1. Step 1: Unfold the Frame

Place the pre-assembled steel frame on a flat, clear surface. With one person at each end, slowly pull the frame outwards until it begins to expand. Do not force the frame.

2. Step 2: Attach the Canopy

Carefully place the 210D Oxford covering fabric over the expanded frame. Secure the canopy to the frame using the Velcro fasteners or ties provided at each corner and along the edges. Ensure the canopy is taut and evenly distributed.

3. Step 3: Adjust Height

Locate the red height-adjustable buttons on the four support bars. Press the buttons and lift each leg to the desired height (290 cm, 300 cm, or 310 cm). Ensure all four legs are set to the same height for stability.

4. Step 4: Install Side Walls (Optional)

Attach the four side walls to the pavilion frame using the Velcro fasteners. The side walls can be rolled up or removed as needed.

5. Step 5: Secure the Tent

For maximum stability, especially in windy conditions, use the provided ground hooks, ropes, and sandbags. Attach the wind straps to the corners of the canopy and stake them into the ground. Fill the sandbags with sand and attach them to the tent legs.

Quick Installation without Tools

2 person 10-15 minutes

STEP ①

Unfold pre-assembled steel frame



STEP ②

Adjust height



STEP ③

Install wall & Fix tent with ropes and stakes



Image: Visual guide illustrating the three main steps for quick installation: unfolding the frame, adjusting height, and securing the tent with walls, ropes, and stakes.

5. OPERATING INSTRUCTIONS

Height Adjustment:

The pavilion offers three adjustable height settings. To change the height, ensure the tent is not under load. Press the red buttons on each leg and carefully raise or lower the frame to the desired position. Always ensure all legs are locked into place at the same height before use.

Using Side Walls:

The four removable side walls provide flexibility for different weather conditions. Attach them using the Velcro fasteners for privacy, shade, or protection from wind and light rain. They can be rolled up and secured or completely removed when not needed.

Anchoring and Stability:

Always use the provided ground hooks, ropes, and sandbags to secure the pavilion, even in calm weather. This prevents accidental movement or damage. In anticipation of strong winds, it is crucial to reinforce anchoring or dismantle the pavilion entirely.

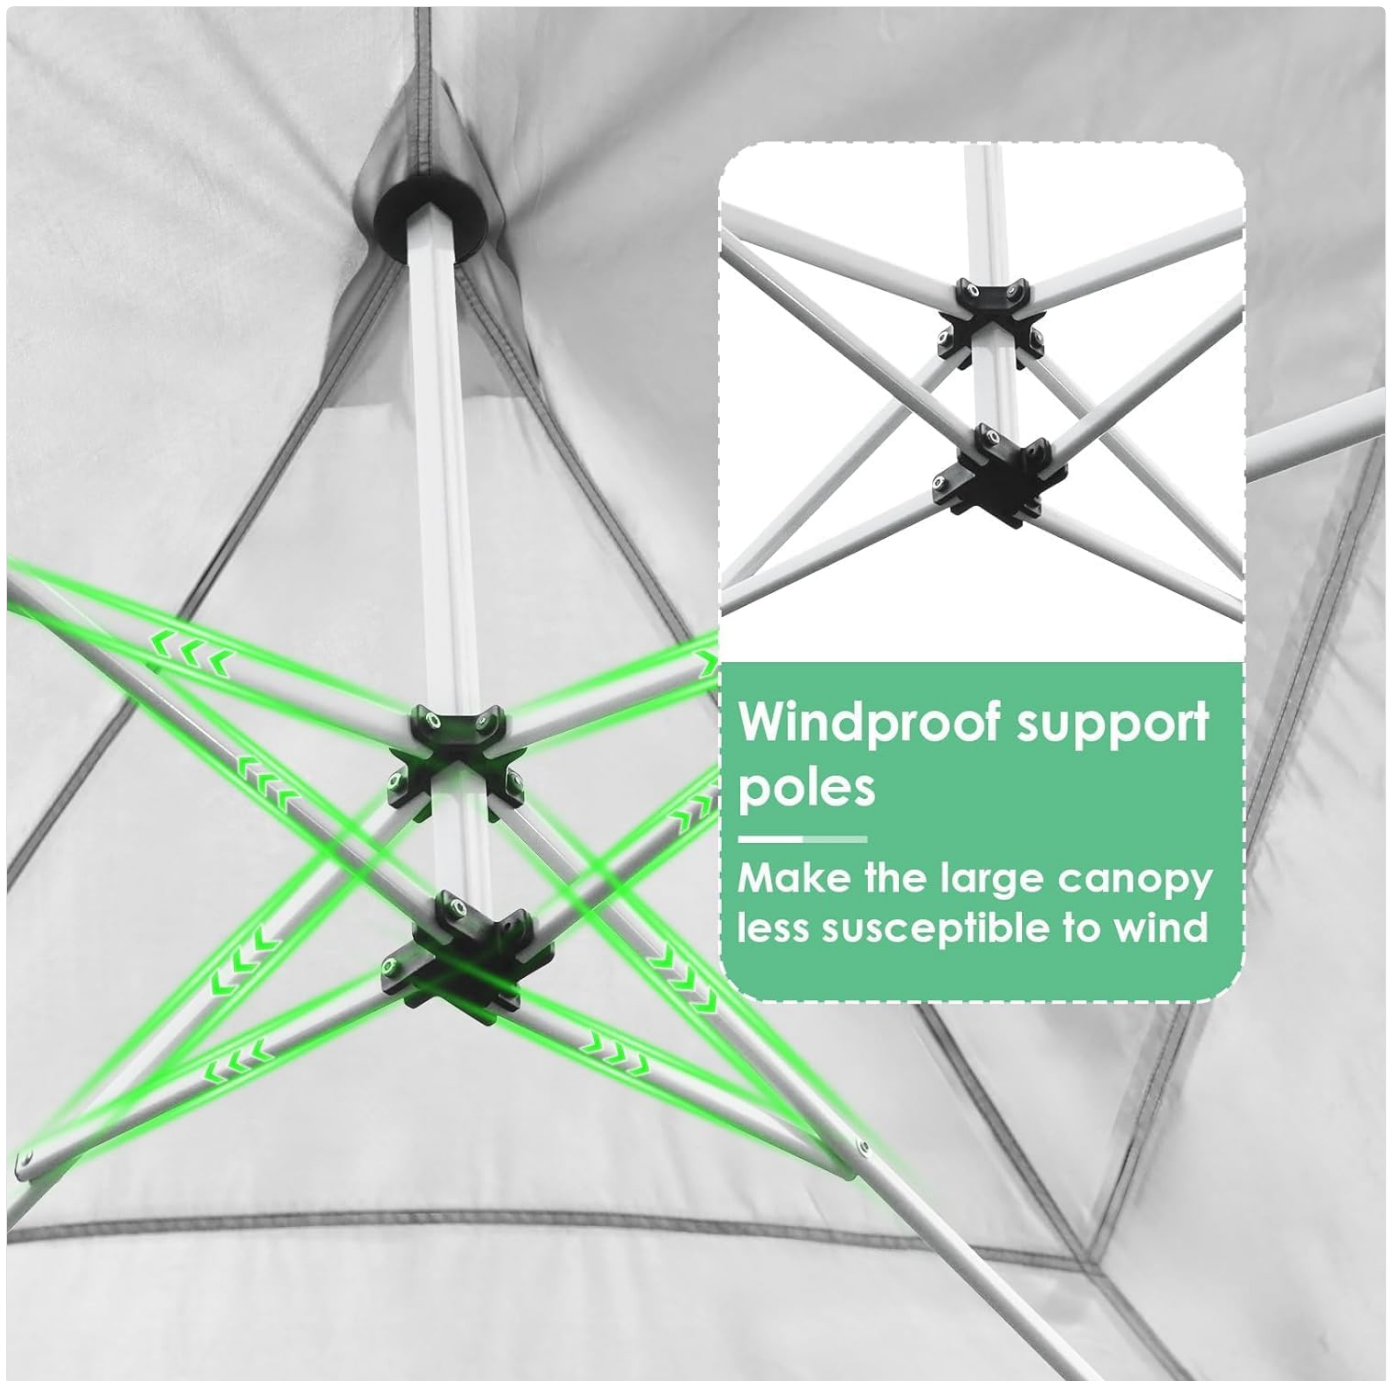


Image: Detail of the windproof support poles within the pavilion's frame, designed to enhance stability.

6. MAINTENANCE

Cleaning:

- **Canopy:** Clean the 210D Oxford fabric with a soft brush or cloth and mild soap and water. Rinse thoroughly and allow to air dry completely before storage. Do not use harsh chemicals or abrasive cleaners.
- **Frame:** Wipe the steel frame with a damp cloth to remove dirt and debris. Ensure it is dry before storage to prevent rust.

Storage:

When not in use, especially during periods of severe weather or for extended durations, fold the pavilion and store it in the provided storage bag. Ensure all components are clean and completely dry before packing to prevent mold, mildew, and corrosion. Store in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Tent Instability:

- **Issue:** Pavilion feels unstable or sways in light wind.
- **Solution:** Ensure all legs are fully extended and locked at the same height. Verify that all ground hooks, ropes, and sandbags are properly installed and taut. In stronger winds, consider dismantling the tent.

Water Accumulation on Canopy:

- **Issue:** Water pools on the canopy during rain.
- **Solution:** While the canopy is waterproof and has leak holes, excessive pooling can occur if the canopy is not taut or if the tent is not set up on level ground. Ensure the canopy is stretched tightly over the frame. Adjust leg heights if necessary to create proper tension and drainage.

8. SPECIFICATIONS



Image: Detailed diagram illustrating the pavilion's dimensions (600x300x310 cm) and the compact size of its storage bag (120x38x27 cm).

Feature	Specification
Model Number	PAV-003
Product Dimensions (Extended)	600 x 300 x 310 cm (Length x Width x Max Height)
Adjustable Heights	290 cm, 300 cm, 310 cm
Shade Area	18 m²
Canopy Material	210D Oxford Fabric (95g) with Silver Coating
UV Protection	UPF 50+ (Blocks 99% of harmful UV rays)
Water Resistance Level	Waterproof (1000 mm, with waterproof tape and leak holes)

Feature	Specification
Frame Material	Powder-Coated Alloy Steel
Item Weight	28 kg
Packing Size	120 x 38 x 27 cm
Recommended Uses	Camping, Parties, Weddings, Outdoor Events

9. WARRANTY AND SUPPORT

For specific warranty information regarding your LIFERUN 3x6 Folding Pavilion (Model PAV-003), please refer to the documentation provided at the time of purchase or contact your retailer directly. Warranty terms and conditions may vary.

For product support, technical assistance, or to inquire about replacement parts, please contact the manufacturer, LIFERUN, through their official website or the customer service channels provided by your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNW2J4VN>

More documents and user manuals: <https://manuals.plus/>