

[Manuals.plus](#) /

> [GOEBLESON](#) /

> GOEBLESON 64.4" Dimmable Floor Lamp (Model E06LD05W1) Instruction Manual

GOEBLESON E06LD05W1

GOEBLESON 64.4" Dimmable Floor Lamp

MODEL: E06LD05W1 - INSTRUCTION MANUAL

Introduction

Thank you for choosing the GOEBLESON 64.4" Dimmable Floor Lamp. This modern standing lamp is designed to provide versatile lighting for various spaces, including living rooms, bedrooms, and offices. It features convenient control options, adjustable light settings, and a stable design for optimal functionality and ambiance.



Image: The GOEBLESON Dimmable Floor Lamp positioned in a modern living room, showcasing its ambient light.

What's in the Box

Please ensure all components are present before assembly:

- Bulb (10W E26 LED)
- Remote Control
- Battery for Remote Control
- On-Off Foot Switch
- User Manual (this document)
- Lamp Pole Sections

- Weighted Base
- Linen Lampshade

Magnetic Remote Control Lamp

Set the warmth and the brightness from the comfort of your bed.



Image: A visual representation of the floor lamp's dimensions (64.4 inches height, 5.1 inches shade diameter) and key components including the remote control and 10W A19 LED bulb.

Setup and Assembly

Follow these steps to assemble your GOEBLESON Floor Lamp:

1. Carefully unbox all components and verify against the "What's in the Box" list.
2. Screw the lamp pole sections together clockwise until secure. Ensure the power cord runs freely through the pole.
3. Attach the assembled lamp pole to the weighted base by screwing it clockwise until firm.
4. Assemble the linen lampshade. The shade typically comes rolled; unroll it and attach it to the top and bottom rings using the provided clips or Velcro.
5. Screw the included 10W E26 LED bulb into the lamp socket.

6. Connect the power cord to the foot switch, then plug the foot switch into a standard wall outlet.
7. Insert the battery into the remote control.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and assembly process of the floor lamp, including connecting the pole sections, attaching the base, and installing the lampshade and bulb.

Operating Instructions

Your GOEBLESON Floor Lamp offers multiple ways to control its lighting:

Remote Control

The magnetic remote control allows for convenient adjustment of light settings from a distance. It can be attached to the lamp pole or any metal surface for easy access.

- **Power Button:** Press to turn the lamp On or Off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease light brightness (10%-100% stepless dimming).
- **Color Temperature Adjustment:** Use the 'K' button to cycle through different color temperatures (3000K-6500K).
- **Preset Modes:** Dedicated buttons for Night Light, Reading, Working, and Nursing modes provide optimized lighting with a single press.
- **Timer:** Press the '1H' button to activate a 60-minute timer, after which the lamp will automatically turn off.
- **Memory Function:** The lamp remembers the last mode setting used when turned off and on.

Dimmable Floor Lamp with Memory Function

Versatile lighting solution for any mood or activity.



3000K

6500K

Adjustable Color Temperatures
3000K-6500K

10%

100%

Stepless Dimming 10%-100%

Image: The remote control displaying buttons for power, brightness adjustment, color temperature, and various preset lighting modes (night light, reading, working, nursing).

Foot Switch

For quick operation, simply step on the integrated foot switch located on the power cord to turn the lamp On or Off.

Foot Control

Just step on the foot switch to turn on and off.



Image: A person demonstrating the use of the foot switch to activate the floor lamp, highlighting its convenient placement on the power cord.

Maintenance

To ensure the longevity and optimal performance of your floor lamp, follow these maintenance guidelines:

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Use a soft, dry cloth to wipe down the lamp pole and base. For the linen lampshade, gently dust with a soft brush or vacuum with a brush attachment. Avoid using liquid cleaners or abrasive materials.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before attempting to replace it. Use only E26 base LED bulbs, preferably 10W or equivalent, to maintain energy efficiency and light quality.
- **Cord Care:** Regularly inspect the power cord and foot switch for any signs of damage. Do not use the lamp if the cord is frayed or damaged.

Troubleshooting

If you encounter any issues with your floor lamp, refer to the following common solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power, loose bulb, faulty switch.	Check if the lamp is properly plugged into a working outlet. Ensure the bulb is screwed in tightly. Test the foot switch and remote control.
Remote control not working.	Dead battery, remote out of range, interference.	Replace the remote control battery. Ensure you are within effective range (approx. 10-15 feet). Remove any obstructions between the remote and the lamp.
Light flickers or is dim.	Loose bulb, incorrect bulb wattage, power fluctuation.	Tighten the bulb. Ensure the bulb is the correct wattage (10W LED). Try plugging the lamp into a different outlet.
Lampshade is uneven.	Improper assembly of shade.	Re-check the lampshade assembly, ensuring the rings are properly secured and the fabric is evenly stretched.

Specifications

Feature	Detail
Product Dimensions	5.1"D x 8"W x 64.4"H
Item Weight	4.9 Pounds
Light Source Type	LED
Wattage	10 watts
Bulb Base	E26
Color Temperature	3000K-6500K (Dimmable)
Control Method	Remote Control, Foot Switch
Material Type	Linen, Metal
Finish Type	Painted
Indoor/Outdoor Usage	Indoor
Special Features	Adjustable Color Temperature, Dimmable, Memory Function, Timer

Safety Information

- Always unplug the lamp before cleaning, moving, or replacing the bulb.
- Do not use the lamp in wet or damp locations. This product is for indoor use only.
- Ensure the lamp is placed on a stable, level surface to prevent tipping. The weighted base provides stability, but caution should still be exercised.
- Keep the power cord away from heat sources, sharp edges, and heavy traffic areas.
- Do not attempt to modify or repair the lamp yourself. Contact qualified personnel for service.

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official GOEBLESON website. Keep your purchase receipt as proof of purchase.

Manufacturer: GOEBLESON

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNW45Z6R>

More documents and user manuals: <https://manuals.plus/>