

[Manuals.plus](#) /

> [GOEBLESON](#) /

> GOEBLESON E07LD05 64.6" Floor Lamp Instruction Manual

GOEBLESON E07LD05

GOEBLESON E07LD05 64.6" Floor Lamp Instruction Manual

Model: E07LD05 | Brand: GOEBLESON

1. INTRODUCTION

Thank you for choosing the GOEBLESON E07LD05 Floor Lamp. This modern and minimalist standing lamp is designed to provide warm and cozy lighting for various spaces in your home or office. Featuring a convenient foot switch and a durable construction, this manual will guide you through the assembly, operation, and maintenance of your new lamp.

2. SAFETY INSTRUCTIONS

- Always disconnect the power supply before assembly, disassembly, or cleaning.
- Ensure the lamp is placed on a stable, flat surface to prevent tipping.
- Use only E26 base bulbs with a maximum wattage of 60W. Exceeding this limit may cause overheating and damage.
- Do not expose the lamp to water or moisture. This product is for indoor use only.
- Keep the lamp away from flammable materials.
- If the power cord is damaged, it must be replaced by a qualified professional to avoid hazards.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before assembly:

- Linen Shade
- Foot Switch
- Solid Base
- Metal Rod (multiple sections)



Figure 1: Lamp Components

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your floor lamp:

1. **Attach the Metal Rods:** Carefully screw the metal rod sections together clockwise until they are securely connected.

2. **Secure the Base:** Attach the assembled metal rod to the solid base by screwing it clockwise until firm. Ensure the base is stable.
3. **Install the Lampshade Frame:** Place the lampshade frame onto the top of the metal rod, ensuring it sits securely.
4. **Attach the Linen Shade:** The linen lampshade features Velcro strips along its edges. Wrap the lampshade around the frame and press the Velcro strips together to form a rectangular shade.
5. **Insert the Bulb:** Screw an E26 base bulb (not included, max 60W) into the lamp socket.
6. **Connect to Power:** Plug the power cord into a standard electrical outlet.

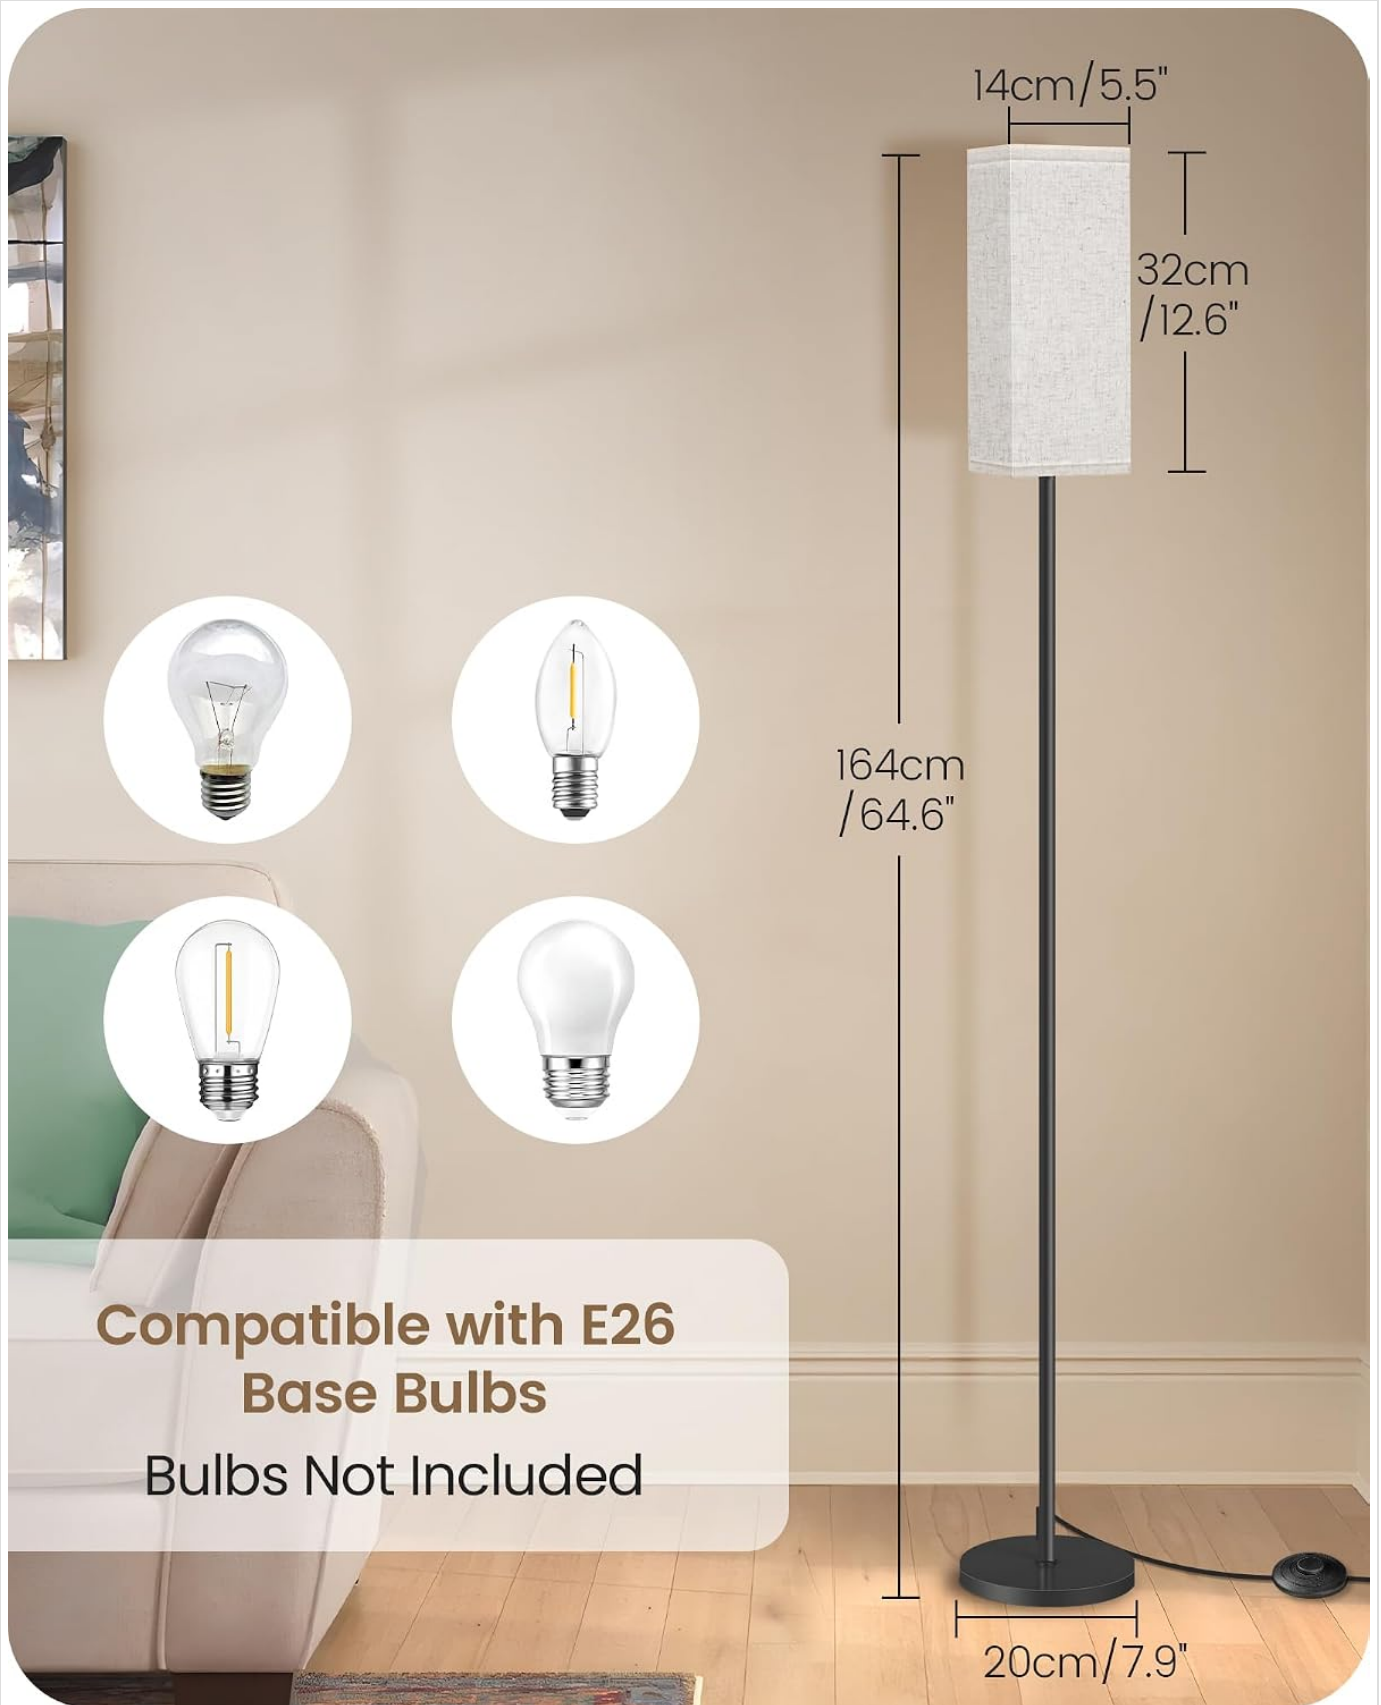




Figure 3: Natural Linen Lampshade Detail

5. OPERATING INSTRUCTIONS

The GOEBLESON E07LD05 Floor Lamp is equipped with a convenient foot switch for easy operation:

- To turn the lamp ON, gently step on the foot switch.

- To turn the lamp OFF, step on the foot switch again.
- If using a compatible smart bulb (not included), you can adjust color temperature (e.g., warm light, neutral light, daylight) and brightness according to the bulb's instructions.



Figure 4: Adjustable Lighting Atmospheres (with compatible bulb)

6. MAINTENANCE

To ensure the longevity and optimal performance of your lamp, follow these maintenance guidelines:

- **Cleaning:** Wipe the metal pole and base with a soft, dry cloth. For the linen lampshade, use a lint roller or a soft brush to remove dust. Do not use liquid cleaners directly on the shade.
- **Bulb Replacement:** Always unplug the lamp before replacing the bulb. Allow the old bulb to cool completely before unscrewing it. Screw in the new E26 bulb (max 60W) firmly but gently.
- **Inspection:** Periodically check the power cord and plug for any signs of damage. If damage is found, discontinue use and contact customer support.

7. TROUBLESHOOTING

If you encounter any issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power, loose bulb, faulty bulb.	Check if the plug is fully inserted into the outlet. Ensure the bulb is screwed in tightly. Replace the bulb with a new one.
Light is flickering.	Loose bulb, incompatible bulb, unstable power.	Tighten the bulb. Ensure the bulb is compatible with the lamp. Try plugging the lamp into a different outlet.
Lampshade is crooked.	Shade not properly aligned or Velcro loose.	Adjust the lampshade on its frame. Re-secure the Velcro strips if they have come undone.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	7.9"D x 7.9"W x 64.6"H
Item Weight	4.9 Pounds
Bulb Base	E26
Max Wattage	60 Watts
Material	Linen, Metal
Switch Type	Foot Switch
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor
Finish Type	Polished
Model Name	Floor Lamp

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact GOEBLESON customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNW5MX61>

More documents and user manuals: <https://manuals.plus/>