

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY QT1D Remote Control Instruction Manual for SONIQ TVs

ALLIMITY QT1D

ALLIMITY QT1D Remote Control Instruction Manual

Model: QT1D

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ALLIMITY QT1D remote control. This remote is designed for compatibility with various SONIQ TV models, offering a straightforward and functional replacement for your original remote.

Please read this manual carefully to ensure proper use and to maximize the lifespan of your device.

PRODUCT OVERVIEW

The ALLIMITY QT1D remote control is an ergonomic and fully functional replacement remote. It requires no programming or installation, making it ready for use right out of the box after battery insertion. Its design ensures a comfortable grip and stable control performance.



Front view of the ALLIMITY QT1D remote control, showing all buttons and their labels. The remote features a dark gray body with red, green, and white buttons for power, mute, and other functions, along with a numeric keypad and navigation controls.



Angled front view of the ALLIMITY QT1D remote control, highlighting its ergonomic shape and button layout. The remote is slightly curved for comfortable handling.



Another angled front view of the ALLIMITY QT1D remote control, providing a different perspective of the button arrangement and overall design.





Rear view of the ALLIMITY QT1D remote control, showing the battery compartment cover and the smooth, ergonomic back casing.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new Alkaline batteries (size typically AAA, though not specified, check the compartment for markings) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Your remote control is now ready for use. No additional programming is required.

OPERATING INSTRUCTIONS

The ALLIMITY QT1D remote control is designed to replicate the full functionality of your original SONIQ TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

Key Functions:

- **POWER (Red Button)**: Turns the TV on or off.
- **MUTE (Green Button)**: Mutes or unmutes the TV audio.
- **0-9 Number Pad**: Directly selects channels or inputs numerical data.
- **VOL +/-**: Adjusts the volume level up or down.
- **CH +/-**: Changes the channel up or down.
- **OK / Navigation Arrows**: Confirms selections and navigates through menus.
- **MENU**: Accesses the TV's main menu.
- **SOURCE**: Selects input sources (HDMI, AV, etc.).
- **INFO**: Displays information about the current program or input.
- **EXIT**: Exits the current menu or function.
- **SLEEP**: Sets the TV's sleep timer.
- **SUBTITLE**: Toggles subtitles on or off.
- **ASPECT**: Changes the screen aspect ratio.
- **P.MODE**: Cycles through picture modes.
- **S.MODE**: Cycles through sound modes.
- **EPG**: Accesses the Electronic Program Guide.
- **Media Control Buttons** (Play, Pause, Stop, Rewind, Fast Forward, Record): Controls media playback functions.
- **Color Buttons** (Red, Green, Yellow, Blue): Used for specific functions within menus or interactive services, as indicated on screen.

For specific functions related to your SONIQ TV model, refer to your television's user manual.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use harsh chemicals or abrasive cleaners.
- Ensure no liquid enters the remote control's internal components.

Battery Care

- Replace batteries when the remote's performance diminishes or stops working.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared receiver.
- **Distance:** Ensure you are within the effective operating range (up to 10 meters).
- **TV Compatibility:** Verify that your TV model is listed as compatible with the ALLIMITY QT1D remote control.

Intermittent Response

- This could indicate low battery power. Replace the batteries.
- Ensure the remote's infrared emitter is clean and unobstructed.

SPECIFICATIONS

Brand	ALLIMITY
Model Number	MM-QT1D-NP (QT1D)
Compatible Devices	SONIQ Televisions (Specific models include E23Z13A, E32W13D, E40W13C-AU, E32S12A-AU, E40S12A, E32V15D, E40V14B-AU, E32W13A-AU, E40W13A, E32W13B-AU, E40W13A-AU)
Connectivity Technology	Infrared
Number of Buttons	25
Maximum Range	10 Meters
Item Weight	59 Grams
Battery Description	Alkaline
Special Feature	Ergonomic

WARRANTY AND SUPPORT

Information regarding specific warranty terms or dedicated customer support channels for the ALLIMITY QT1D remote control was not available in the provided product data.

For warranty inquiries or technical support, please refer to the documentation that came with your purchase or contact the retailer or ALLIMITY directly through their official website or customer service channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNXMF8QC>

More documents and user manuals: **<https://manuals.plus/>**