

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY Remote Control User Manual for NORDMENDE TVs \(MM-ND28S3200M-NP\)](#)

## ALLIMITY MM-ND28S3200M-NP

# ALLIMITY Remote Control User Manual

**MODEL: MM-ND28S3200M-NP**

Compatible with NORDMENDE TV Models: ND28S3200M, ND24S3500M, ND39S3500M, ND43S3200M, ND32S3600, ND55KS4400M SMART, ND39S310H SMART, ND32S3600M SMART, ND50S3000M-SMART, ND43KS4400M-SMART, ND43S3300M-SMART

## 1. INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY MM-ND28S3200M-NP remote control. Designed for ease of use, this remote is fully functional and compatible with a wide range of NORDMENDE TV models. Please read this manual carefully to ensure proper operation and to maximize your experience.

## 2. PRODUCT OVERVIEW AND FEATURES

The ALLIMITY MM-ND28S3200M-NP remote control is engineered for convenience and reliability. It offers a stable remote control performance and a longer transmission distance.

- **Easy to Use:** No programming or installation is required.
- **Fully Functional:** Designed to cover all functions of your original remote control.
- **Ergonomic Design:** Lightweight and comfortable to hold.
- **Wide Compatibility:** Supports various NORDMENDE TV models.



Figure 2.1: Angled view of the ALLIMITY remote control, showcasing its button layout.





Figure 2.2: Front view of the ALLIMITY remote control, highlighting all buttons clearly.





Figure 2.3: Back view of the ALLIMITY remote control, showing the battery compartment area.

## 3. SETUP

---

The ALLIMITY MM-ND28S3200M-NP remote control requires no programming or complex setup. Simply insert batteries, and it is ready for use.

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## 4. OPERATING INSTRUCTIONS

---

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the TV's IR receiver for optimal performance.

### 4.1 Basic Functions

- **Power Button (U):** Turns the TV on or off.
- **Number Buttons (0-9):** Selects TV channels directly.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH +/-):** Changes TV channels sequentially.
- **Mute Button ():** Mutes or unmutes the TV sound.
- **Source Button (SOURCE):** Selects input sources (e.g., HDMI, AV).
- **Menu Button (MENU):** Accesses the TV's main menu.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigates through menus and options.
- **OK Button (OK):** Confirms selections in menus.
- **Exit Button (EXIT):** Exits the current menu or function.
- **Home Button (HOME):** Returns to the TV's home screen (for Smart TV models).

Refer to your NORDMENDE TV's user manual for specific functions and menu navigation details, as button labels may correspond to various features depending on your TV model.

## 5. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your remote control.

### 5.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or

internal components.

## 5.2 Battery Replacement

If the remote control's range decreases or it becomes unresponsive, replace the batteries as described in Section 3.1. Always dispose of used batteries according to local regulations.

## 6. TROUBLESHOOTING

---

If you encounter issues with your remote control, please refer to the following troubleshooting steps:

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Check for any obstructions between the remote control and the TV's infrared receiver.
- Ensure you are within the effective operating range (up to 10 meters).

- **Remote functions are incorrect:**

- Verify that your TV model is listed as compatible with this remote control. You can usually find the full model number on a label on the back of your TV.
- Some advanced functions may require specific TV settings or may not be supported by all compatible TV models.

- **Intermittent operation:**

- Weak batteries can cause intermittent operation. Replace them.
- Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with infrared signals. Try operating the remote in a different environment.

If the problem persists after trying these steps, please contact the product vendor for further assistance.

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	ALLIMITY
Model Number	MM-ND28S3200M-NP
Color	Black
Connectivity Technology	Infrared
Special Feature	Lightweight
Compatible Devices	NORDMENDE TV models: ND24S3500M, ND32S3600, ND39S3500M, ND43S3200M, ND28S3200M, ND32S3600M-SMART, ND50S3000M-SMART, ND43KS4400M-SMART, ND55KS4400M-SMART, ND39S310H-SMART, ND43S3300M-SMART

Feature	Specification
Maximum Range	10 Meters
Number of Buttons	25
Controller Type	Button Control
Item Weight	59 Grams

## 8. WARRANTY AND SUPPORT

---

Information regarding product warranty is not available in this manual. For warranty details, please refer to the documentation provided with your purchase or contact the seller directly.

For technical support or further inquiries, please contact ALLIMITY customer service or the retailer from whom you purchased the product.