

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Enboya](#) /

> [Enboya P30 Electric Composter User Manual](#)

## Enboya P30

# Enboya P30 Electric Composter User Manual

Model: P30 | Brand: Enboya

## 1. INTRODUCTION

---

The Enboya P30 Electric Composter is designed to transform food waste into valuable fertilizer, significantly reducing household waste and eliminating odors. This indoor countertop appliance offers a convenient and efficient solution for managing organic waste.



*Image 1: Enboya P30 Electric Composter in use, showing food scraps being added.*

## **2. IMPORTANT SAFETY INFORMATION**

Please read and understand all safety instructions before operating the Enboya P30 Electric Composter. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always use protective gloves when handling food waste.
- Do not place sharp objects in the composter.
- Keep the composter in a well-ventilated area and away from heat sources.
- Regularly clean the composter to prevent pest attraction.

- Do not operate the composter if it appears damaged or makes unusual noises.

### 3. PRODUCT OVERVIEW

The Enboya P30 Electric Composter consists of several key components designed for optimal performance and ease of use.

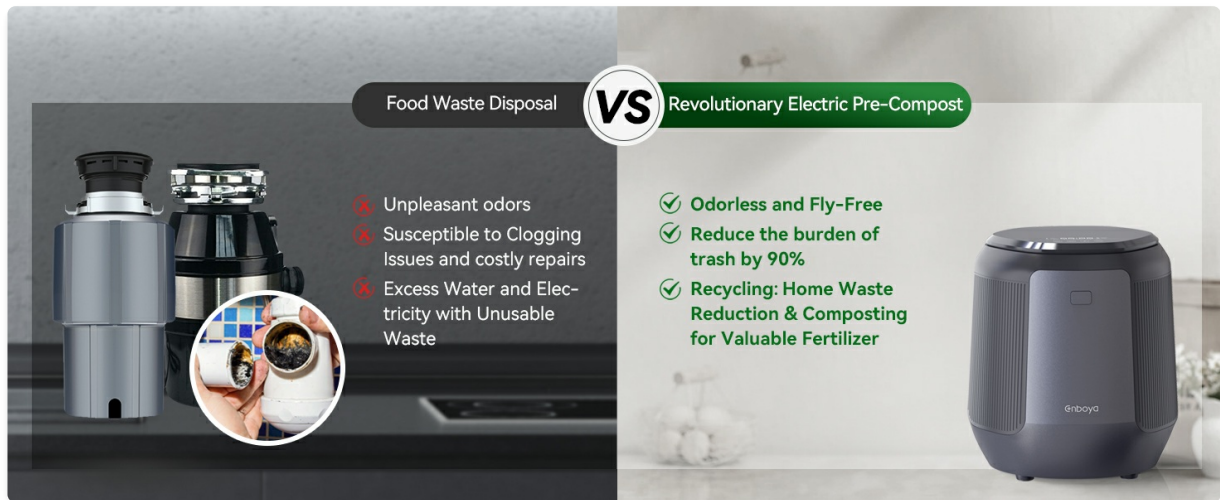


Image 2: Components included with the Enboya P30 Electric Composter.

#### Components:

- P30 Electric Composter Unit
- Bucket Lid
- Inner Bucket with 3 Reinforced Blades
- Charcoal Box (for odor filtration)
- Cleaning Brush
- User Manual & Quick Start Guide

### 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Position:** Place the composter on a stable, flat, and well-ventilated surface. Ensure it is away from direct heat sources and water.
3. **Install Charcoal Filter:** The composter comes with an upgraded charcoal filter to prevent odors. Locate the charcoal box setup, typically at the bottom or side of the unit, and ensure the charcoal is properly installed.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

### 5. OPERATING INSTRUCTIONS


The Enboya P30 is designed for user-friendly operation with flexible modes to suit various composting needs.

#### 5.1 Adding Food Waste

1. Open the composter lid.
2. Add food scraps to the inner bucket. The P30 has a 4.2L capacity with four different settings (1L, 2L,

3L, 4L) to accommodate varying amounts of waste.

3. Close the lid securely.

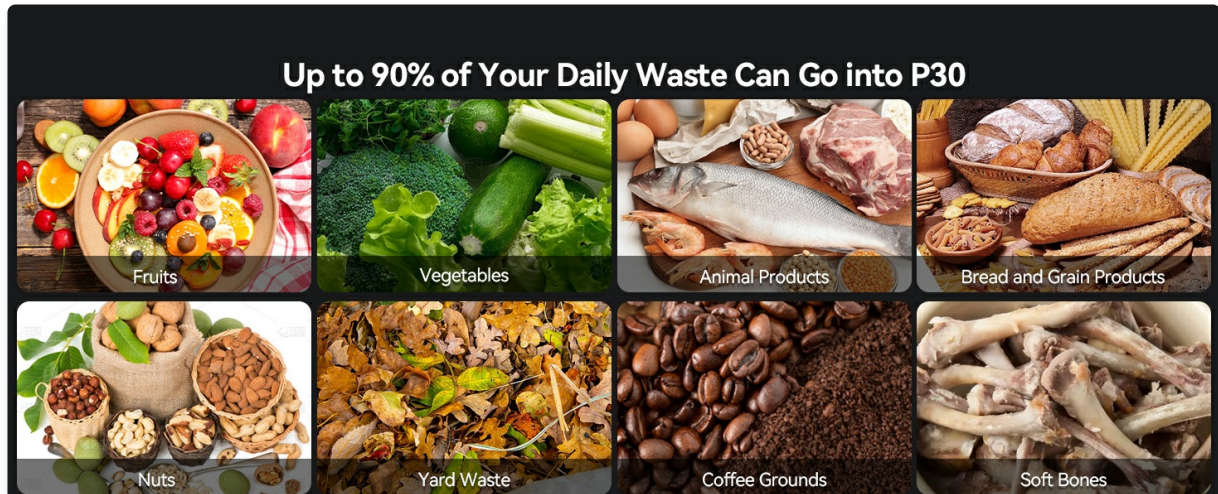

*Image 3: Types of food waste suitable for the Enboya P30 Electric Composter.*

## 5.2 Selecting a Mode

The control panel features intuitive touch buttons for different functions.



*Image 4: Control panel and capacity options.*

- **Power Button:** Press to turn the unit on/off.
- **Standard Mode:** For typical food waste processing.
- **Quick Mode:** For faster processing of smaller loads or less dense waste.
- **Clean Mode:** Initiates a self-cleaning cycle.


The P30 operates at a low noise level of 48 decibels (excluding hard items like bones), ensuring quiet operation.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Enboya P30 Electric Composter.

### 6.1 Cleaning

The P30 is designed for easy cleaning.

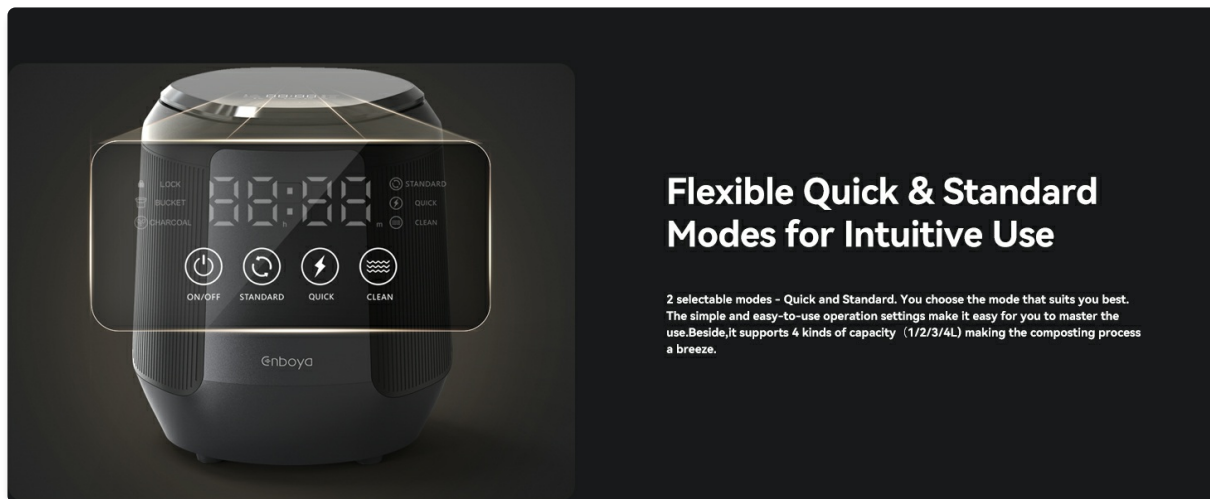

## Flexible Quick & Standard Modes for Intuitive Use

2 selectable modes - Quick and Standard. You choose the mode that suits you best. The simple and easy-to-use operation settings make it easy for you to master the use. Beside, it supports 4 kinds of capacity (1/2/3/4L) making the composting process a breeze.

Image 5: The self-cleaning function in action.

- **Inner Bucket:** The inner bucket is dishwasher-safe. Simply remove the blade and place the bucket in the dishwasher.
- **Self-Cleaning Function:** Utilize the 'Clean' mode for hassle-free internal cleaning.
- **Exterior:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water.

## 6.2 Charcoal Filter Replacement

The upgraded charcoal filter effectively avoids odor problems and is equipped with a replaceable charcoal box setup for regular replacement.

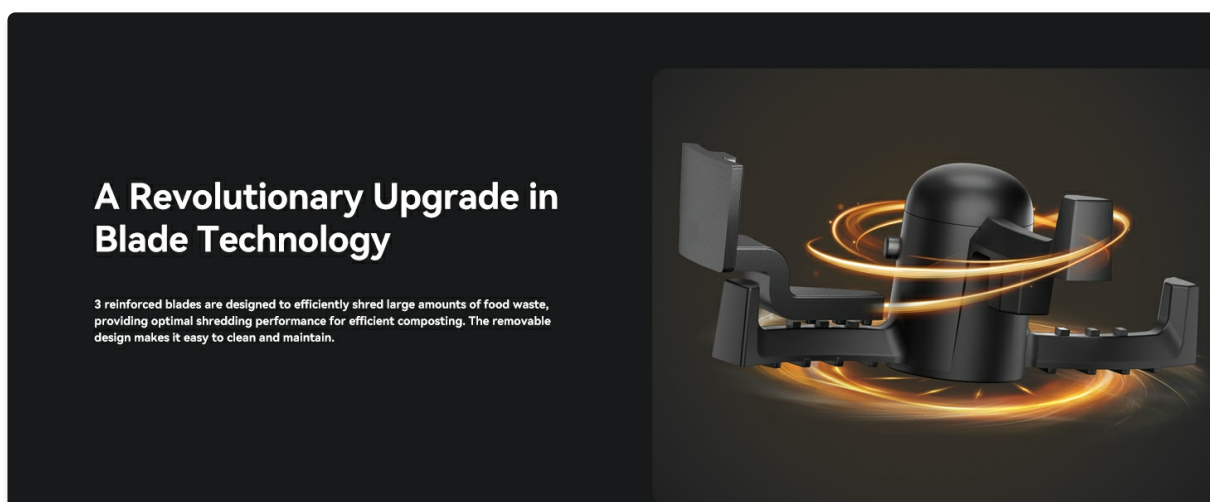


Image 6: Enhanced charcoal filtration system.

- The composter will indicate when the charcoal filter needs replacement.
- Replace the charcoal according to the instructions provided in the full user manual.
- The replaced charcoal can be used as composting material, promoting resource recycling.

## 7. TROUBLESHOOTING

If you encounter any issues with your Enboya P30 Electric Composter, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Composter not turning on	Not plugged in; power outage; unit malfunction	Check power connection; verify power supply; contact support if issue persists.
Unpleasant odors	Charcoal filter needs replacement; lid not sealed properly; inappropriate waste added.	Replace charcoal filter; ensure lid is securely closed; review acceptable waste types.
Waste not fully processed/wet byproducts	Overloaded bucket; too much wet waste; incorrect cycle selected.	Reduce load size; balance wet and dry waste; select appropriate cycle (e.g., longer cycle for larger/wetter loads).
Unusual noises during operation	Hard items in bucket; foreign object; motor issue.	Remove hard items; check for foreign objects; contact support if noise continues.

For more detailed troubleshooting or issues not listed here, please refer to the complete user manual or contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Enboya
Model	P30
Capacity	4.2 Liters (with 1/2/3/4L settings)
Material	Plastic
Color	Black
Product Dimensions	13"L x 14"W x 15"H
Item Weight	19.96 pounds
Noise Level	As low as 48 decibels (excluding hard items)
Odor Control	Upgraded charcoal filter

## 9. WARRANTY & SUPPORT

The Enboya P30 Electric Composter comes with a **2-year warranty**. For warranty claims, technical support, or any product-related inquiries, please refer to the contact information provided in your product packaging or visit the official Enboya website.

