

Missyou MS1

Missyou 16CM 3D Hologram Fan (Model MS1) Instruction Manual

Model: MS1 | Brand: Missyou

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Missyou 16CM 3D Hologram Fan. This device creates mesmerizing holographic displays, ideal for various applications. Please read this manual thoroughly before operation.

Your browser does not support the video tag.

Video: A demonstration of the 3D Hologram Fan displaying various dynamic holographic effects, including numbers, animals, and abstract shapes.

2. IMPORTANT SAFETY INFORMATION

- **Rotating Blades:** The device features rapidly spinning blades. **DO NOT TOUCH THE BLADES** while the device is powered on or spinning. Serious injury may occur.
- **Mounting:** Ensure the device is securely mounted in a location where the spinning blades will not come into contact with any objects or persons.
- **Power:** Use only the provided power adapter. Disconnect power before cleaning or maintenance.
- **Children and Pets:** Keep the device out of reach of children and pets.
- **Environment:** Do not expose the device to water, moisture, or extreme temperatures.



Image: Product packaging with a clear warning label indicating not to touch the hologram fan.

3. WHAT'S IN THE BOX

Verify that all components are present:

- 3D Hologram Fan Unit
- Power Adapter
- Remote Control
- User Manual
- TF Card
- Card Reader
- Screwdriver
- Mounting Bracket



Image: The 3D Hologram Fan unit along with its power adapter, remote control, TF card, card reader, screwdriver, and mounting bracket.

Your browser does not support the video tag.

Video: An unboxing video showing the contents of the Missyou 3D Hologram Fan package.

4. SETUP

4.1 Mounting the Device

The 3D Hologram Fan can be mounted on a wall or other suitable surface using the provided mounting bracket. Ensure the mounting location provides sufficient clearance for the fan blades to rotate freely without obstruction. The device should be mounted securely to prevent it from falling during operation.



Image: The 3D Hologram Fan mounted, showing its operational state with a colorful display.

4.2 Power Connection

Connect the provided power adapter to the device's power port (Tep-c power port) and then to a standard electrical outlet. Ensure the cable is routed safely and does not interfere with the rotating blades.

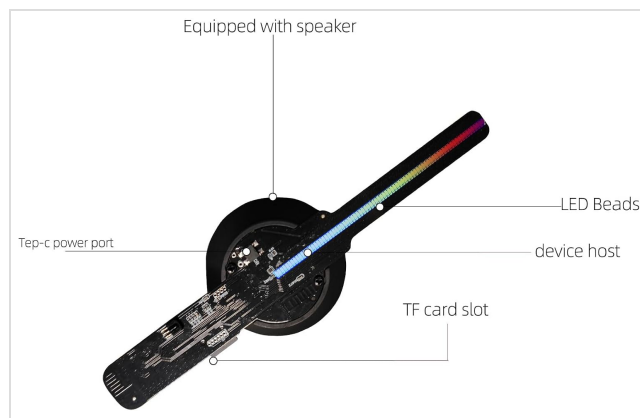


Image: Labeled diagram of the hologram fan highlighting the Tep-c power port, LED beads, and TF card slot.

4.3 Initial Power On

Once securely mounted and powered, the device will initiate. The blades will begin to spin, and a holographic display will appear. Avoid touching the device during operation.

Your browser does not support the video tag.

Video: Demonstration of mounting the 3D Hologram Fan and its initial power-on sequence, showing various holographic images.

5. OPERATING INSTRUCTIONS

5.1 Content Management

The Missyou 3D Hologram Fan supports multiple methods for uploading and managing content:

- **WiFi Connectivity:** Connect the device to your local WiFi network. Use the dedicated mobile application (compatible with Android and iOS devices) to seamlessly switch and customize video content directly from your smartphone.
- **SD Card:** Content can be loaded onto an SD card. Insert the SD card into the device's TF card slot. The device will play content directly from the card.
- **PC Software:** Utilize the provided PC software (e.g., "5DDisplayer") to convert various image and video files into the compatible .bin format for playback on the device. Connect the device's TF card to your computer via a card reader to transfer files.



Image: Screenshot of the PC software used for content conversion and management.

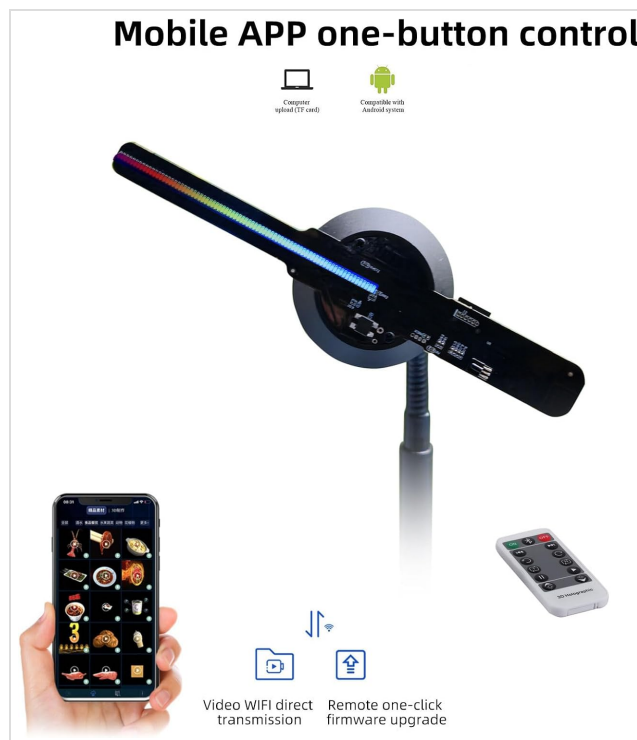


Image: Mobile application interface for remote control and content selection.

5.2 Remote Control

The included remote control allows for convenient operation, including switching between videos and adjusting settings. Point the remote directly at the device for optimal response.



Image: The remote control unit for the hologram fan.

Your browser does not support the video tag.

Video: A demonstration of using the remote control to change content and interact with the 3D Hologram Fan display.

5.3 Bluetooth Connectivity

The device features built-in Bluetooth capabilities. This allows you to connect the fan to external speakers for synchronized audio, enhancing the overall presentation experience.

6. SPECIFICATIONS

Brand:	Missyou
Model Number:	MS1
Item Weight:	3.52 ounces
Product Dimensions:	7.09 x 7.09 x 0.79 inches
Color:	Black
Special Feature:	Built-In 3D
Connectivity Technology:	Bluetooth, Wi-Fi
Display Resolution:	1024 x 768
Recommended Uses:	Business, Education

7. MAINTENANCE

To ensure the longevity and optimal performance of your 3D Hologram Fan, follow these maintenance guidelines:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to gently wipe the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Blade Care:** Avoid placing any objects near the blades when the device is off, as this could cause damage upon startup.

8. TROUBLESHOOTING

If you encounter issues with your Missyou 3D Hologram Fan, refer to the following common solutions:

- **Device Not Spinning/No Display:**
 - Ensure the power adapter is securely connected to both the device and a working power outlet.
 - Verify that the power button on the remote control has been pressed.
- **Content Not Displaying Correctly:**
 - Confirm that your video or image files are in the correct format (.bin) and resolution for the device. Use the PC software for conversion if necessary.
 - Ensure the SD card is properly inserted and not corrupted.
- **Remote Control Unresponsive:**
 - Check the remote control's battery.
 - Ensure there are no obstructions between the remote and the device's sensor.
- **App Connectivity Issues:**
 - Ensure the device and your smartphone are connected to the same Wi-Fi network.
 - Restart both the device and the mobile application.

9. WARRANTY AND SUPPORT

Missyou is committed to customer satisfaction. If you experience any issues not covered in this manual or require further assistance, please contact our responsive customer support team. Refer to your product packaging or the included warranty card for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question