

[Manuals.plus](#) /

› [AUNMAS](#) /

› User Manual: Large Butter Dish with Wooden Lid

AUNMAS AUNMAS7cybx2z956-11

User Manual: Large Butter Dish with Wooden Lid

Brand: AUNMAS | Model: AUNMAS7cybx2z956-11

1. INTRODUCTION

Thank you for choosing the AUNMAS Large Butter Dish with Wooden Lid. This product is designed to keep your bread and pastries fresh while offering a stylish and functional addition to your kitchen countertop. The versatile wooden lid also serves as a convenient cutting board.

2. PRODUCT OVERVIEW



Figure 2.1: The AUNMAS Large Butter Dish with its wooden lid securely placed on top. This image shows the overall modern and minimalist design of the product, suitable for any kitchen decor.

Key Features:

- **Sealed Design:** Helps maintain freshness and prevents moisture, keeping bread and pastries delicious.
- **Removable Wooden Lid:** Doubles as a convenient cutting board for slicing and serving.
- **Large Capacity:** Spacious interior accommodates various sizes of bread, buns, and pastries.
- **Modern Design:** A minimalist aesthetic that complements diverse kitchen decors.
- **Durable Construction:** Made from robust plastic material to prevent deformation and breakage, ensuring long-term use.



Figure 2.2: The butter dish with its wooden lid removed, showcasing the spacious plastic base and the separate lid. This illustrates the dual functionality of the lid as a cutting surface.

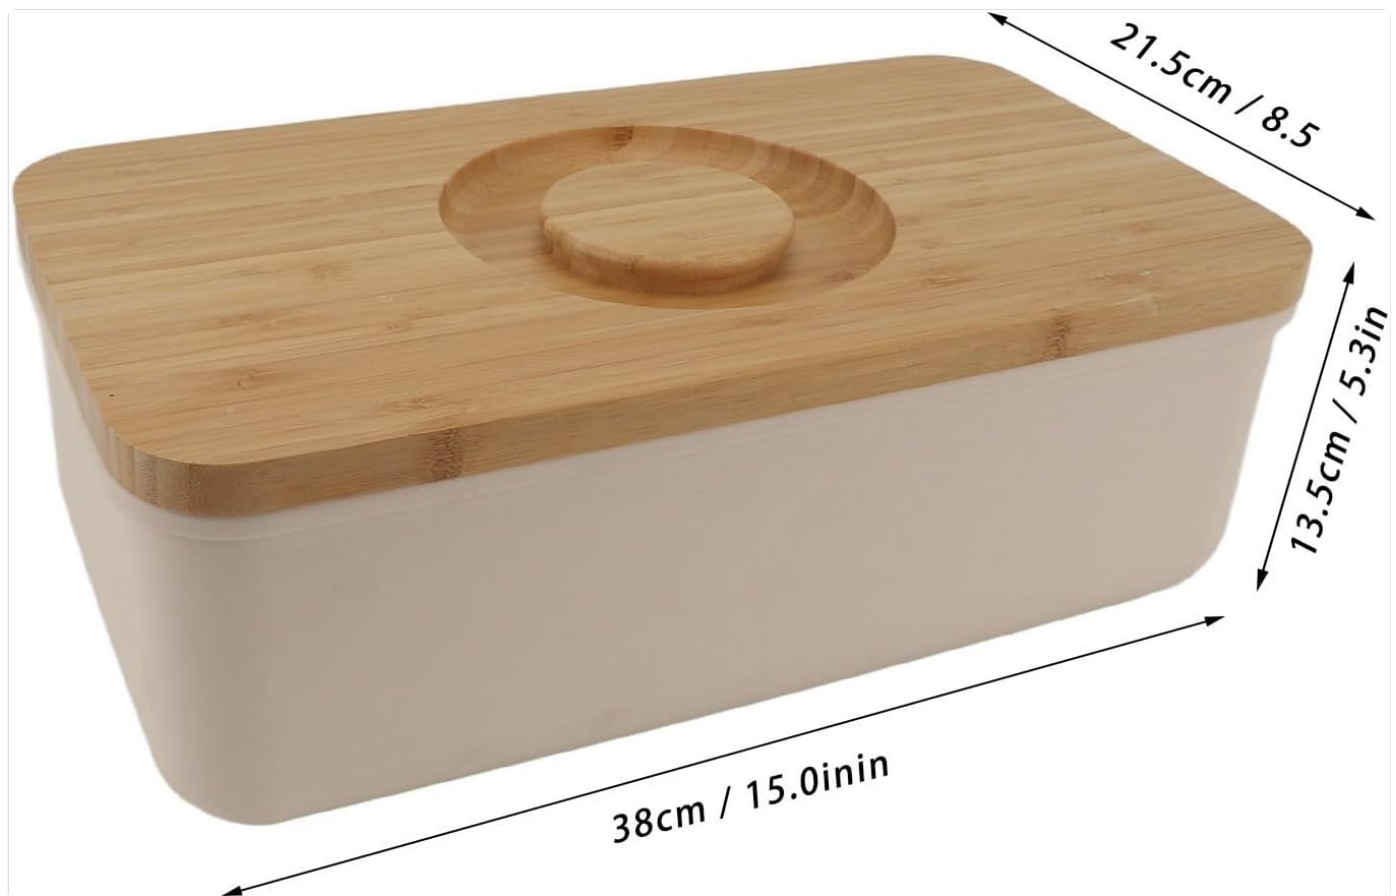


Figure 2.3: Detailed dimensions of the butter dish, indicating its length, width, and height. The measurements are approximately 38 cm (15.0 in) in length, 21.5 cm (8.5 in) in width, and 13.5 cm (5.3 in) in height.

3. SETUP

The AUNMAS Large Butter Dish requires minimal setup. Follow these steps before first use:

1. **Unpack:** Carefully remove all components from the packaging. The package includes one storage box (the base) and one top plate (the wooden lid).
2. **Inspect:** Check for any signs of damage during transit. If any damage is found, contact customer support.
3. **Clean:** Before initial use, wash both the plastic base and the wooden lid with warm, soapy water. Rinse thoroughly and dry completely. Refer to the "Maintenance and Care" section for detailed cleaning instructions.
4. **Assemble:** Place the wooden lid securely on top of the plastic base. Ensure it sits flush to maintain the sealed environment.

4. OPERATING INSTRUCTIONS

Using your AUNMAS Large Butter Dish is straightforward:

1. Storing Items:

- Lift the wooden lid from the plastic base.
- Place your bread, buns, pastries, or other items inside the spacious plastic base.
- Carefully replace the wooden lid, ensuring it forms a tight seal to keep contents fresh.



Butter dish
Large capacity
Spacious interior for bread, buns,
pastries, etc. of all sizes.

Large butter container
Sleek, modern design
Complements any kitchen decor



Figure 4.1: The butter dish effectively storing sliced bread, demonstrating its capacity and sealed design for freshness.



*Toast storage box
Sealed and moist proof
Keeps bread freshness and flavorful*

*Removable cutting board cover
Wooden lid doubles as a cutting board
For easy slicing and serving*



Figure 4.2: The butter dish shown with a variety of bread types, highlighting its versatility for different baked goods.

2. Using the Cutting Board Lid:

- Remove the wooden lid from the base.
- Place the lid on a stable, flat surface with the flat side facing up.
- Use it as a cutting board for slicing bread, cheese, or other small food items.
- After use, clean the lid as per the "Maintenance and Care" section.



Figure 4.3: The butter dish used to store pastries, demonstrating its suitability for various baked goods and its aesthetic appeal on a kitchen counter.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity and hygiene of your butter dish:

- **Cleaning the Plastic Base:**

- Wash with warm water and mild dish soap.
- Use a soft sponge or cloth to avoid scratching the surface.
- Rinse thoroughly with clean water.
- Dry completely with a clean towel or air dry before reassembling.
- *Do not* use abrasive cleaners or scourers.



Figure 5.1: A view of the clean interior of the plastic base, showing its smooth surface designed for easy cleaning.

- **Cleaning the Wooden Lid:**

- Wipe with a damp cloth and mild soap.
- *Do not* soak the wooden lid in water, as this can cause warping or cracking.
- Dry immediately and thoroughly after washing.
- To maintain the wood's condition, occasionally apply a food-grade mineral oil or beeswax.



Figure 5.2: A close-up view of the wooden lid, highlighting its natural grain and smooth finish, which also serves as a cutting surface.

- **Storage:** Store the butter dish in a cool, dry place away from direct sunlight and extreme temperature changes.

6. TROUBLESHOOTING

If you encounter any issues with your AUNMAS Large Butter Dish, please refer to the following common solutions:

Problem	Possible Cause	Solution
Lid does not sit flush/seal properly.	Debris on rim; lid or base warped.	Clean the rims of both the lid and base. Ensure the lid is aligned correctly. Avoid exposing the product to extreme temperatures.
Wooden lid appears dry or faded.	Lack of moisture/conditioning.	Apply a food-grade mineral oil or beeswax to the wooden lid to recondition it.

Problem	Possible Cause	Solution
Unpleasant odor inside the box.	Food residue; lack of ventilation.	Thoroughly clean the plastic base and lid. Ensure items stored are not overly moist or perishable. Allow to air out periodically.

If the problem persists after attempting these solutions, please contact AUNMAS customer support for further assistance.

7. SPECIFICATIONS

Attribute	Detail
Brand	AUNMAS
Model Number	AUNMAS7cybx2z956-11
Color	Beige
Material	Plastic (Base), Solid Wood (Lid)
Product Dimensions (L x W x H)	Approx. 38 x 21.5 x 13.5 cm (15.0 x 8.5 x 5.3 inches)
Item Weight	Approx. 1624 g (57.3 oz)
Package Contents	1 x Storage Box (Base), 1 x Top Plate (Wooden Lid)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer’s return policy or contact AUNMAS customer service directly. Please have your model number (AUNMAS7cybx2z956-11) and purchase details ready when contacting support.

For more information, you may visit the official AUNMAS store:[AUNMAS Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question