

[Manuals.plus](#) /

› [Lonyiabbi](#) /

› Lonyiabbi Spider Web Launcher User Manual

Lonyiabbi ZS-03

Lonyiabbi Spider Web Launcher User Manual

Model: ZS-03

1. INTRODUCTION

Thank you for purchasing the Lonyiabbi Spider Web Launcher. This automatic cord launcher is designed for superhero role-play, offering an engaging and interactive experience. This manual provides essential information for the safe and effective use of your new product. Please read it thoroughly before operation.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Please adhere to the following safety guidelines:

- **WARNING: Do not shoot at people or animals.** This product is a toy and should be used responsibly.
- Keep small parts away from children under 3 years of age to prevent choking hazards.
- Do not modify the product in any way. Unauthorized modifications may lead to malfunction or injury.
- Use only the provided accessories and charging cable.
- Supervise children during play to ensure safe usage.

3. WHAT'S IN THE BOX

Carefully unpack your Lonyiabbi Spider Web Launcher and ensure all components are present:

- 1 x Spider Web Launcher
- 1 x Suction Cup attachment
- 1 x Magnet attachment
- 1 x Type-C Charging Cable
- Additional accessories (e.g., target paper, extra suction cups/magnets, mitten if included in your specific package)

Product content list



Image: Contents of the product package, showing the launcher, suction cup, magnet, and charging cable.

4. PRODUCT OVERVIEW AND COMPONENTS

The Lonyiabbi Spider Web Launcher features a robust design and user-friendly components.

Non-jamming design

Openable cable management compartment



Image: The launcher's non-jamming design with the cable management compartment open, revealing the internal cord. The launcher is equipped with an openable cable management compartment, designed to prevent the cord from jamming. The wristband is made of soft faux leather for comfortable wear.

Soft faux leather wristband very comfortable to wear.



Image: The comfortable faux leather wristband.

The launcher supports various attachments, including a suction cup for smooth surfaces and a magnet for metallic surfaces. It features a convenient Type-C charging port.

**Suction cup
launcher**
Can adhere
to smooth
glass surfaces



**Type-C
charging port**
Convenient and
fast charging

Image: The suction cup attachment and the Type-C charging port.

5. SETUP

5.1 Charging the Launcher

Before first use, fully charge the launcher. Connect the provided Type-C charging cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., computer, wall adapter). The charging indicator will show the charging status (refer to product for specific indicator behavior). A full charge typically takes [X] hours (information not provided, so omit specific time).

5.2 Attaching Accessories

To attach the suction cup or magnet, simply align it with the end of the cord and secure it firmly. Ensure it is properly seated before use.

6. OPERATING INSTRUCTIONS

6.1 Firing the Web

To activate the launcher, simply press and hold the roller switch for approximately 4 seconds. Once activated, press the spring mechanism to launch the cord. The launcher can project the cord an impressive distance of up to 2.9

meters (approximately 9.5 feet).




Image: The Spider Web Launcher in action, demonstrating its firing capability.

6.2 Rewinding the Cord

After firing, use the designated button (or roller switch, depending on model variation) to automatically rewind the cord back into the launcher. Ensure the cord is fully retracted before storing the device.

6.3 Using the Target

The product includes a target paper for practice and accuracy training. Set up the target indoors or outdoors and aim for the different scoring zones to improve hand-eye coordination and observation skills.

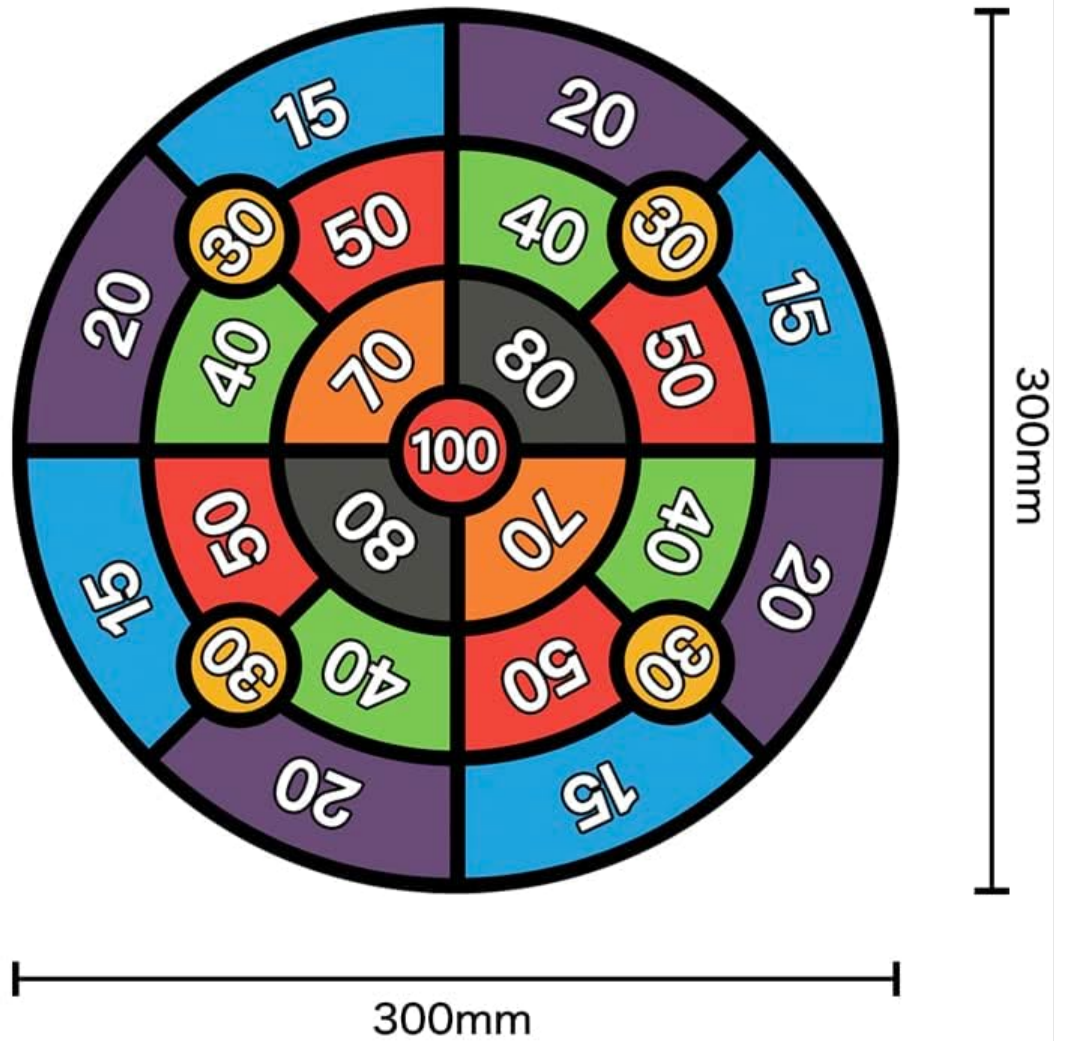

Comes with target paper !

Image: The included target paper for aiming practice.

7. MAINTENANCE

7.1 Addressing Cord Jams

This product operates similarly to a fishing reel, and occasionally the cord may get stuck. If this occurs, simply open the back cover of the launcher and carefully straighten the cord to resolve the jam. Close the cover securely before resuming use.

7.2 Cleaning

Wipe the launcher with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

7.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the device in a cool, dry place when not in use for extended periods.

8. TROUBLESHOOTING

If you encounter any issues with your Lonyiabbi Spider Web Launcher, please refer to the following common problems and solutions:

- **Launcher not firing:** Ensure the battery is charged. Check if the cord is properly loaded and not jammed (refer to Section 7.1).
- **Cord not rewinding:** Check for any obstructions in the cord path. If jammed, open the back cover and straighten the cord. Ensure the rewind mechanism is not obstructed.
- **Poor firing distance:** Ensure the battery is sufficiently charged. Check the cord for any damage or tangles.

If problems persist after attempting these solutions, please contact Lonyiabbi customer support for assistance.

9. SPECIFICATIONS

Product Dimensions (L x W x H)	17.02 x 7.87 x 6.1 cm (6.7 x 3.1 x 2.4 inches)
Weight	222 grams (0.49 lbs)
Manufacturer Recommended Age	36 months - 12 years
Educational Value(s)	Coordination capacity
Manufacturer Reference	ZS-03
Number of Players	1
Self-assembly Product	No
Batteries Included?	Yes
Battery Type	Lithium-ion
Main Material	Plastic
Color	Black

10. WARRANTY AND SUPPORT

For any questions, concerns, or issues not covered in this manual, please contact Lonyiabbi customer support. Refer to your purchase documentation for specific warranty details and contact information. We are committed to providing prompt assistance to ensure your satisfaction.

© 2024 Lonyiabbi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CP21P9HD>

More documents and user manuals: <https://manuals.plus/>