

[manuals.plus](#) /

› [MONODEAL](#) /  
› [MONODEAL MD706 Boombox CD Player Instruction Manual](#)

## MONODEAL MD706

# MONODEAL MD706 Boombox CD Player Instruction Manual

Model: MD706 | Brand: MONODEAL

## 1. PRODUCT OVERVIEW

The MONODEAL MD706 is a versatile and portable CD player that combines multiple audio functionalities into one compact device. It features Bluetooth 5.0 for both transmitting and receiving audio, an FM radio, and support for various playback modes including CD, USB, and AUX-in. Designed for ease of use, it includes a remote control and a built-in rechargeable battery for on-the-go enjoyment.



*Image: The MONODEAL MD706 Boombox CD Player with its charging cable, AUX cable, and remote control.*

Your browser does not support the video tag.

*Video: An overview of the MONODEAL MD706 Multifunction CD Player, highlighting its design and features.*

## 2. WHAT'S IN THE Box

- 1 x MONODEAL MD706 CD Player
- 1 x Type-C Charging Cable
- 1 x AUX Cable
- 1 x Remote Control
- 1 x Instruction Manual



*Image: All items included in the MONODEAL MD706 product package.*

### 3. KEY FEATURES

---

- **Bluetooth 5.0:** Supports both transmitting and receiving audio for versatile connectivity.
- **Multiple Playback Modes:** Enjoy music from CD, Bluetooth, FM radio, USB drive, and AUX-in.
- **Wide CD Compatibility:** Plays CD, CD-R, CD-RW, MP3, and WMA formats.
- **Built-in Dual Speakers:** Features 2\*3W high-power speakers for clear stereo sound.
- **Rechargeable Battery:** Integrated 2000 mAh battery provides up to 12 hours of FM radio playback (3-4 hours charging time).
- **Remote Control:** Conveniently operate the player from a distance of up to 10 meters.
- **Equalizer Settings:** Choose from 5 different equalizer presets to optimize sound.
- **Anti-Jump Protection:** Ensures stable playback even during movement, ideal for car use.
- **LED Display:** Clear screen for easy operation and mode indication.



*Image: The MD706 being used in various settings, including for language learning, leisure, and prenatal education.*

## 4. SETUP

### 4.1 Charging the Device

The MD706 comes with a built-in rechargeable battery. Before first use, fully charge the device.

1. Connect the provided Type-C charging cable to the DC Charging Port (14) on the back of the player.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED display will indicate charging status. A full charge typically takes 3-4 hours.



*Image: The MD706 offers up to 12 hours of playtime in FM Radio mode on a full charge.*

## 4.2 Power On/Off

- To power on, press and hold the Power On/Off button (15) located on the back.
- To power off, press and hold the Power On/Off button (15) again.

## 5. OPERATING MODES



*Image: The MD706 supports CD, Bluetooth Receiving, Bluetooth Transmitting, USB, and AUX-in modes.*

### 5.1 CD Mode

The MD706 supports CD, CD-R, CD-RW, MP3, and WMA formats.


1. Open the CD Dust Lid (12) by sliding the CD Cover Open button (13).
2. Insert a CD with the label side facing up.
3. Close the CD Dust Lid (12).
4. Press the MODE button (2) repeatedly until "CD" appears on the LED display.
5. The CD will begin playing automatically. Use the Play/Pause (10), Previous (9), and Next (8) buttons to control playback.

6. To adjust the volume, use VOL+ (6) and VOL- (5).

## Equalizer Settings

The player offers 5 equalizer presets (BBS, POP, JAZZ, ROCK, CLASSIC) to enhance your listening experience.

- Press the EQ button (3) repeatedly to cycle through the different equalizer modes.

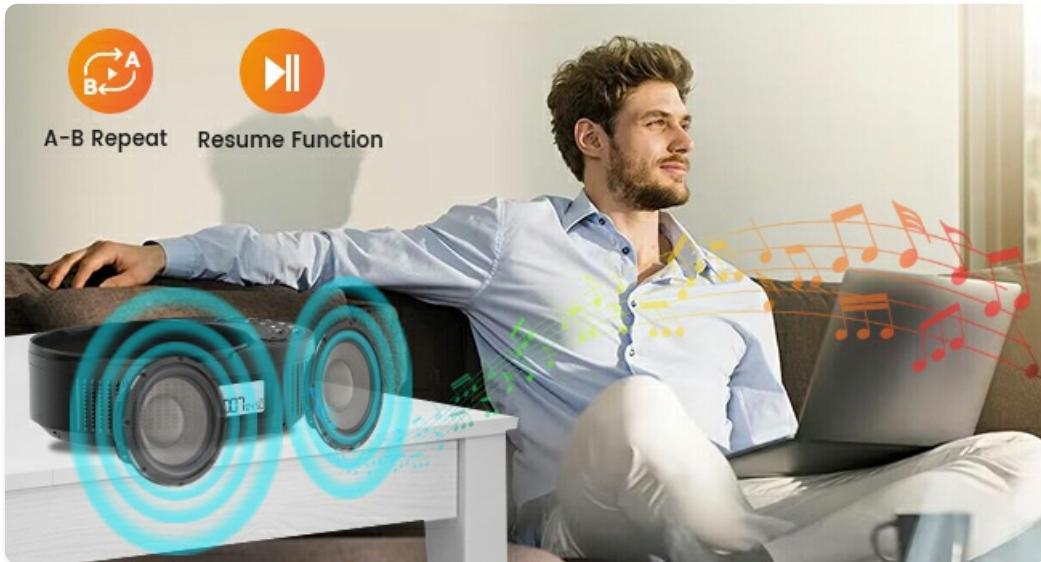

*Image: Visual representation of the different equalizer modes available.*

Your browser does not support the video tag.

*Video: Demonstrates the CD player's functionality and sound quality.*

## 5.2 Bluetooth Mode

The MD706 supports both Bluetooth transmission (TX) to external Bluetooth devices and Bluetooth reception (RX) from your smartphone or other devices.

### Bluetooth Transmit (TX) Mode

To connect the MD706 to Bluetooth headphones or speakers:

1. Press the BT TX button (7) to enter Bluetooth Transmit mode. The display will show "TX".
2. Ensure your Bluetooth headphones or speaker are in pairing mode.
3. The MD706 will automatically search for and connect to nearby Bluetooth devices. Once connected, the Bluetooth icon on the display will stop flashing.
4. Play audio from the MD706 (e.g., a CD) and it will transmit to your connected Bluetooth device.

## Enjoy Favorite CD with Your HIFI Devices




*Image: The MD706 transmitting audio to Bluetooth headphones and speakers.*

### Bluetooth Receive (RX) Mode

To use the MD706 as a Bluetooth speaker for your smartphone or other devices:

1. Press the MODE button (2) repeatedly until "BT" appears on the LED display.
2. On your smartphone or Bluetooth device, search for "MD-706" in the Bluetooth settings.
3. Select "MD-706" to pair. Once connected, the Bluetooth icon on the display will stop flashing.
4. Play audio from your smartphone, and it will play through the MD706's speakers.

# Enjoy Your Stream Music

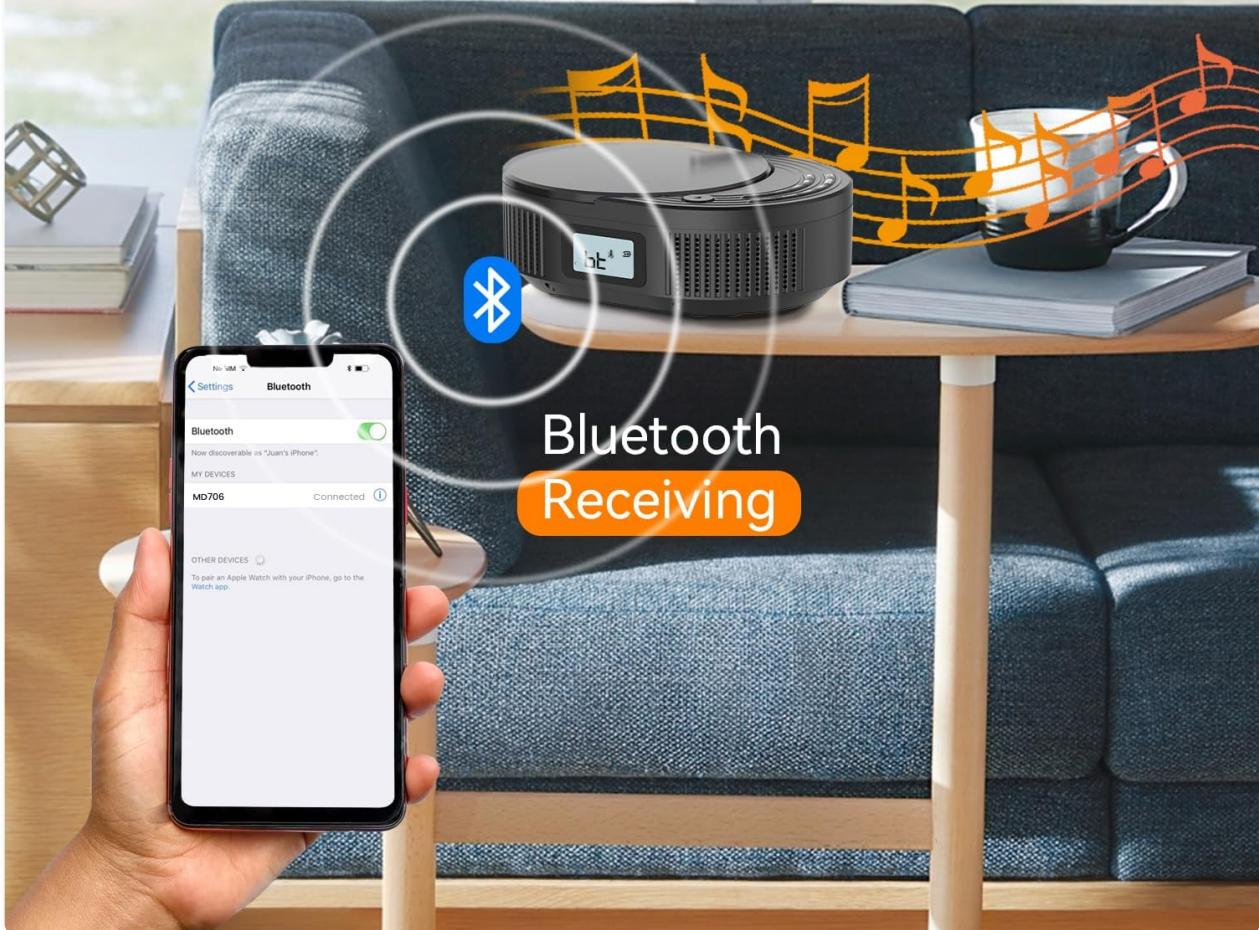

*Image: The MD706 receiving audio from a smartphone, acting as a Bluetooth speaker.*

## 5.3 FM Radio Mode

The MD706 has a built-in FM radio with a frequency range of 76MHz-108MHz.

1. Extend the telescopic antenna on the back of the device for better reception.
2. Press the MODE button (2) repeatedly until the FM frequency appears on the LED display.
3. To auto-scan and save stations, press and hold the Play/Pause button (10). The player will scan and store available FM stations.
4. Use the Previous (9) and Next (8) buttons to navigate through saved stations.



*Image: The MD706 tuned to an FM radio station, indicating its radio capabilities.*

## 5.4 USB Mode

The MD706 supports playing audio files from a USB drive (up to 32GB).

1. Insert a USB drive into the USB Port (17) on the back of the player.
2. Press the MODE button (2) repeatedly until "USB" appears on the LED display.
3. The player will automatically detect and play audio files from the USB drive.
4. Use the Play/Pause (10), Previous (9), and Next (8) buttons to control playback.

## 5.5 AUX-in Mode

Connect external audio devices to the MD706 using the AUX cable.

1. Connect one end of the provided AUX cable to the Earphone / AUX Out Port (16) on the back of the player.
2. Connect the other end of the AUX cable to the audio output of your external device (e.g., smartphone, MP3 player).
3. Press the MODE button (2) repeatedly until "AUX" appears on the LED display.
4. Play audio from your external device, and it will be output through the MD706's speakers.

## 5.6 Remote Control

The included remote control provides convenient access to all major functions.

- Ensure the remote control has a working battery (included).
- Point the remote control towards the front of the MD706 for optimal response.
- All functions available on the player's buttons are also accessible via the remote control.



*Image: The MD706 being controlled remotely from a sofa, emphasizing convenience.*

## 6. CONTROLS DIAGRAM



*Image: Numbered diagram of the MD706's buttons and ports for easy identification.*

1. Standby
2. MODUS (Mode)
3. EQ (Equalizer)
4. CD/FM
5. VOL- (Volume Down)
6. VOL+ (Volume Up)
7. BT TX (Bluetooth Transmit)
8. Previous
9. Next
10. Pause/Play
11. Stop
12. CD Dust Lid
13. CD Cover Open
14. DC Charging Port
15. Power On/Off
16. Earphone / AUX Out Port
17. USB Port

## 7. SPECIFICATIONS

| Feature                 | Detail                  |
|-------------------------|-------------------------|
| Model Number            | MD706                   |
| Product Dimensions      | 7 x 5.5 x 2.4 inches    |
| Item Weight             | 1.83 pounds             |
| Connectivity Technology | Bluetooth 5.0, AUX, USB |

|                       |                           |
|-----------------------|---------------------------|
| Supported CD Formats  | CD, CD-R, CD-RW, MP3, WMA |
| FM Radio Range        | 76MHz-108MHz              |
| Battery Capacity      | 2000 mAh                  |
| Playtime (FM Radio)   | Up to 12 hours            |
| Charging Time         | 3-4 hours                 |
| Max USB Drive Support | 32GB                      |

## 8. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or abrasive materials.
- CD Care:** Handle CDs by their edges. Keep them clean and free of scratches to ensure optimal playback.
- Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in constant use.

## 9. TROUBLESHOOTING

| Problem                      | Possible Solution  |
|------------------------------|--|
| Device does not power on     | Ensure the battery is charged. Connect to power adapter and try again.   |
| CD skipping or not playing   | Check if the CD is clean and free of scratches. Ensure the CD is inserted correctly.   |
| No sound from speakers       | Adjust volume. Ensure correct mode is selected (e.g., not in Bluetooth TX mode if expecting sound from internal speakers).   |
| Cannot pair Bluetooth device | Ensure the MD706 is in the correct Bluetooth mode (TX for transmitting, RX for receiving). Place devices closer together. Turn off and on Bluetooth on both devices. |
| Poor FM radio reception      | Fully extend the telescopic antenna. Try repositioning the device.   |

## 10. WARRANTY & SUPPORT

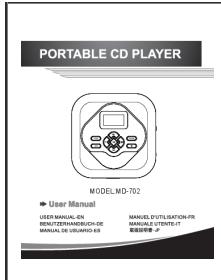
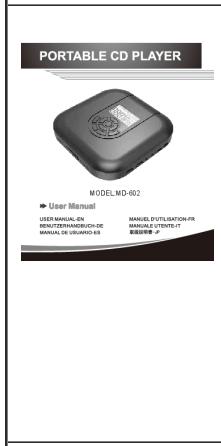
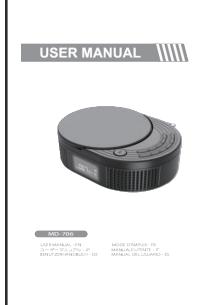
MONODEAL is committed to providing high-quality products and excellent customer service.

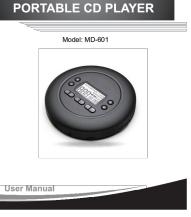
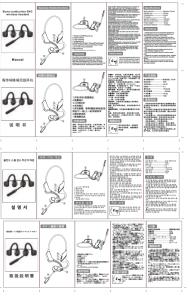
- **12-Month Replacement:** The product is covered by a 12-month replacement policy for manufacturing defects.
- **Lifetime Support:** MONODEAL offers lifetime technical support for the MD706.
- **24/7 Customer Service:** For any questions or problems, you can contact MONODEAL customer support via Amazon buyer-seller messaging 24/7.

For further assistance, please refer to the contact information provided with your purchase or visit the official MONODEAL store on Amazon.

© 2024 MONODEAL. All rights reserved.

### Related Documents - MD706

|  |   |
|--|---|
|   | <p><a href="#">MONODEAL Portable CD Player User Manual - Model MD-702</a></p> <p>User manual for the MONODEAL Portable CD Player (Model MD-702), providing safety instructions, operating procedures, troubleshooting tips, and feature explanations for this consumer electronic device.</p>                     |
|  | <p><a href="#">Portable CD Player MD-602 User Manual</a></p> <p>User manual for the MD-602 Portable CD Player, covering setup, operation, troubleshooting, and safety instructions in multiple languages.</p>   |
|  | <p><a href="#">MONODEAL MD-706 Portable CD Player User Manual</a></p> <p>Explore the MONODEAL MD-706 portable CD player with this user manual. Learn about its features, Bluetooth connectivity, USB playback, FM radio, AUX input, BT TX function, and troubleshooting tips for a complete audio experience.</p> |

|   |  |
|---|--|
| <br><b>PORTABLE CD PLAYER</b><br>Model: MD-601<br><br>User Manual | <p><a href="#"><u>MonoDeal MD-601 Portable CD Player User Manual</u></a></p> <p>User manual for the MonoDeal MD-601 portable CD player, detailing safety, operation, features, and troubleshooting for this audio device.</p>  |
| <b>CD Player Manual</b><br>Monodeal CW604-FM<br><br>www.monodeal.net   | <p><a href="#"><u>Monodeal CW604-FM CD Player User Manual</u></a></p> <p>This manual provides detailed instructions for operating the Monodeal CW604-FM CD Player, including function descriptions, FM transmitter usage, FAQs, and specifications. Learn how to play CDs, use the FM transmitter, and troubleshoot common issues.</p>               |
|   | <p><a href="#"><u>MONODEAL DG10 Pro Bone Conduction Wireless Headset User Manual</u></a></p> <p>User manual for the MONODEAL DG10 Pro bone conduction wireless headset with Bluetooth 5.3 and ENC noise-canceling microphone. Features include IPX5 water resistance, long battery life, and comfortable open-ear design for work and daily use.</p> |