

[Manuals.plus](#) /

› [Bukumo](#) /

› Bukumo 5.0 Cub Large Home Safe User Manual

Bukumo home safe

Bukumo 5.0 Cub Large Home Safe User Manual

Model: home safe

1. INTRODUCTION

Thank you for choosing the Bukumo 5.0 Cub Large Home Safe. This digital security safe is designed to provide robust protection for your valuables, including important documents, money, firearms, and other sensitive items. It features a durable alloy steel construction, a programmable digital keypad, and an anti-theft alarm system. Please read this manual carefully to ensure proper setup, operation, and maintenance of your safe.



Image: The Bukumo 5.0 Cub Large Home Safe with its door open, revealing a spacious interior with a removable shelf. Various items like gold bars, jewelry, documents, and stacks of cash are neatly stored inside, demonstrating the safe's capacity and organizational features.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury or damage.

- Keep emergency keys in a secure location away from the safe and out of reach of children.
- Do not store the emergency keys inside the safe.
- Ensure the safe is placed on a stable, level surface.
- For maximum security, anchor the safe to a wall or floor as instructed in this manual.
- Do not attempt to force the safe open if the digital keypad fails or keys are lost. Contact customer support.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Safe Box
- 2 x Emergency Keys
- 4 x Expansion Screws
- 1 x User Manual (this document)
- 1 x External Battery Box

4. SETUP

4.1 Initial Opening and Battery Installation

Upon receiving your safe, you will need to open it using the emergency key to install the batteries for the digital keypad.

1. Locate the emergency keyhole, usually concealed behind the keypad cover or a small panel.
2. Insert one of the emergency keys into the keyhole and turn it counter-clockwise.
3. Simultaneously turn the knob clockwise to open the safe door.
4. Inside the safe, locate the battery compartment, typically on the back of the door or inside the main compartment.
5. Insert 4 AA batteries (not included) into the compartment, ensuring correct polarity.
6. Close the battery compartment cover.

2 WAYS TO OPEN THE SAFE



Image: A visual guide illustrating the two primary methods for opening the safe: using a personal password in conjunction with the knob, and using the emergency key with the knob. It highlights the location of the keyhole and the digital keypad.

4.2 Setting Your Personal Password

After installing batteries, you can set your personal password for digital access.

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinges). You will hear a beep.
2. On the digital keypad, enter your desired 3-8 digit password.
3. Press the '#' button to confirm your new password. You will hear a confirmation beep.
4. Test the new password with the door open to ensure it works correctly before closing the safe.

4.3 Anchoring the Safe

For enhanced security, it is highly recommended to anchor the safe to a wall or floor.

1. Choose a suitable location for the safe, preferably in a discreet area.
2. Mark the drilling points through the pre-drilled holes at the back or bottom of the safe.

3. Drill holes into the wall or floor using an appropriate drill bit for your surface type.
4. Align the safe with the drilled holes.
5. Insert the expansion screws through the safe's holes and into the wall/floor.
6. Tighten the screws securely to fix the safe in place.

WALL OR FLOOR-MOUNTED INSTALLATION



Image: A three-step diagram illustrating the process of wall or floor mounting the safe. Step 1 shows marking the wall, Step 2 shows drilling and inserting anchors, and Step 3 shows securing the safe to the wall, with the safe appearing flush against the surface.

5. OPERATING INSTRUCTIONS

5.1 Opening the Safe with Digital Keypad

1. Enter your personal 3-8 digit password on the digital keypad.
2. Press the '#' button. The green light will illuminate.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

5.2 Opening the Safe with Emergency Key

This method is used if you forget your password or if the batteries are depleted.

1. Locate the emergency keyhole (refer to Section 4.1).
2. Insert the emergency key and turn it counter-clockwise.
3. Simultaneously turn the knob clockwise to open the safe door.

5.3 Using the External Battery Box

If the internal batteries are completely drained and you cannot open the safe with the digital keypad, use the external battery box.

1. Insert 4 AA batteries into the external battery box.
2. Plug the external battery box into the port located on the digital keypad.
3. Enter your personal password on the keypad and press '#'.
4. Turn the knob clockwise to open the safe door.

5.4 Closing and Locking the Safe

1. Ensure no obstructions are preventing the door from closing fully.
2. Close the safe door firmly.
3. Turn the knob counter-clockwise to engage the locking bolts.

5.5 Using the Removable Shelf

The safe includes a removable shelf to help organize items of different sizes.

SAFE BOX WITH REMOVABLE SHELF



Cash



Jewelry



Document



Firearms



Passport

Without Shelf



With Removable Shelf



Image: A side-by-side comparison of the safe's interior, illustrating its versatility. One side shows the safe without the removable shelf, accommodating taller items like a rifle and a trophy. The other side shows the safe with the shelf installed, allowing for organized storage of smaller items such as medicines, passports, and jewelry.

- To install: Align the shelf with the support brackets inside the safe and slide it into place.
- To remove: Lift the shelf slightly and pull it out from the support brackets.

6. MAINTENANCE

6.1 Battery Replacement

Replace batteries when the low battery indicator light appears or if the keypad becomes unresponsive. Always use 4 new AA alkaline batteries.

6.2 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

6.3 General Care

Regularly check the locking bolts and hinges for any signs of wear or obstruction. Keep the safe in a dry environment to prevent rust.

7. TROUBLESHOOTING

7.1 Anti-Theft Alarm System

The safe is equipped with a dual alarm system. If an incorrect password is entered 3 times consecutively, the alarm will activate, and the safe will lock for 20 seconds.



Image: This image depicts the safe's anti-theft alarm system. It shows the safe's interior with various valuables, and an overlay indicating that the alarm is triggered by either external vibration or three failed passcode attempts, with a red alarm light flashing.

- **Alarm Activation:** The alarm will sound if the wrong password is entered 3 times in a row, or if the safe experiences significant external vibration.
- **Alarm Deactivation:** Enter the correct password to silence the alarm and unlock the safe.

7.2 Forgotten Password

If you forget your personal password, use the emergency key to open the safe (refer to Section 5.2). Once open, you can reset the password (refer to Section 4.2).

7.3 Lost Emergency Key

Each emergency key has a unique serial number. If both keys are lost, contact Bukumo customer support with the serial number (usually found on the keyhole or a tag attached to the keys) to request a replacement.

7.4 Door Not Opening/Closing Smoothly

Check for any obstructions around the door frame or locking bolts. Ensure the safe is on a level surface. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Bukumo
Model Number	home safe
Product Dimensions	12.2"D x 14.57"W x 23.6"H
Capacity	5 Cubic Feet
Material	Alloy Steel
Lock Type	Electronic Combination Lock, Key
Mounting Type	Floor Mount
Special Features	Alarm System, Sensor Light, Combination Lock, Anti-Theft, Removable Shelf
Item Weight	40 Pounds
Water Resistance Level	Water Resistant
Batteries Required?	Yes (4 AA)

9. WARRANTY AND SUPPORT

Bukumo provides a **Lifetime Warranty** for this product. We are committed to your satisfaction and offer comprehensive support.

- **Warranty Coverage:** You will receive one safe box, two emergency keys, and four expansion screws.
- **Service:** We provide 24-hour online service and a 120-day return or exchange service.
- **Contact:** For any quality issues, repair services, or spare parts, please contact our customer support team. Your satisfaction is our primary goal.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CP24NFK6>

More documents and user manuals: <https://manuals.plus/>