

[Manuals.plus](#) /

› [Bosch Hausgeräte](#) /

› Bosch MUMS6EW13D Series 6 Food Processor User Manual

Bosch Hausgeräte MUMS6EW13D

Bosch MUMS6EW13D Series 6 Food Processor User Manual

Model: MUMS6EW13D | Brand: Bosch Hausgeräte

INTRODUCTION

Welcome to the user manual for your new Bosch MUMS6EW13D Series 6 Food Processor. This appliance is designed to assist you in preparing a wide variety of dishes with its powerful 1600 W motor and versatile attachments. Please read this manual carefully before first use to ensure safe and optimal operation of your appliance.

SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent personal injury and damage to the appliance:

- Before connecting the appliance, check that the voltage indicated on the rating plate matches your mains voltage.
- Never immerse the motor unit in water or other liquids.
- Keep hands, hair, clothing, and utensils away from moving parts during operation.
- Always unplug the appliance from the power supply before assembling, disassembling, cleaning, or when not in use.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW

The Bosch MUMS6EW13D food processor comes with several components designed for various kitchen tasks. Below is an overview of the main unit and its key accessories.



Main Unit and Accessories: This image displays the Bosch MUMS6EW13D food processor, featuring the main motor unit in white, a large stainless steel mixing bowl, and various attachments. On the left, a black food processor attachment with a clear lid and pusher is visible, along with three different slicing/shredding discs. On the right, the kneading hook, whisk, and stirring paddle attachments are shown, ready for use with the main unit.

Key Components:

- **Motor Unit:** The core of the appliance, housing the powerful 1600 W motor and control dial.
- **Stainless Steel Mixing Bowl (5.5 L):** Large capacity bowl, ideal for preparing significant quantities of dough or batter.
- **3D Planetary Mixing System:** Ensures thorough mixing by moving the attachments in three dimensions, mimicking hand-kneading.
- **Kneading Hook:** For heavy doughs like bread or pizza dough.
- **Whisk:** For whipping cream, egg whites, or light batters.
- **Stirring Paddle (Silicone):** For mixing cakes, cookies, and other medium consistency batters.
- **Slicer/Shredder Attachment:** Includes various discs for slicing, grating, and shredding vegetables, cheese, and other ingredients.
- **Splash Guard:** Prevents ingredients from splashing out of the bowl during operation.

SETUP

Before first use, ensure all packaging materials are removed and clean all removable parts as described in the "Maintenance and Cleaning" section.

1. **Placement:** Place the motor unit on a clean, stable, and dry surface. Ensure the suction feet are firmly attached to the countertop for stability.
2. **Attaching the Mixing Bowl:** Place the stainless steel mixing bowl onto the base of the motor unit. Turn it clockwise

until it locks securely into place.

3. Installing Attachments:

- Lift the multi-function arm by pressing the release button.
- Select the desired attachment (kneading hook, whisk, or stirring paddle).
- Insert the attachment into the drive shaft and turn it slightly until it clicks into place.
- Lower the multi-function arm until it locks.

4. Installing Slicer/Shredder Attachment:

- Attach the main body of the slicer/shredder to the designated port on the appliance.
- Insert the desired slicing or shredding disc onto the drive shaft within the attachment.
- Secure the lid with the food pusher.

5. **Power Connection:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The Bosch MUMS6EW13D features 7 speed settings for precise control over your mixing and processing tasks.

1. **Adding Ingredients:** Add your ingredients to the mixing bowl or the respective attachment. For the mixing bowl, ensure the splash guard is in place.
2. **Selecting Speed:** Turn the speed control dial to the desired setting (1-7).
 - **Speed 1-2:** For gentle mixing, folding, or kneading light doughs.
 - **Speed 3-4:** For mixing batters, mashing potatoes, or preparing medium consistency doughs.
 - **Speed 5-7:** For whipping cream, egg whites, or processing harder ingredients with the slicer/shredder.
 - **Pulse (P):** For short bursts of maximum power, useful for chopping or quick mixing.
3. **Operation:** The appliance will start operating at the selected speed. Monitor the process and adjust speed as needed.
4. **Stopping Operation:** Turn the speed control dial back to '0' to stop the appliance.
5. **Removing Attachments:** Unplug the appliance. Lift the multi-function arm and carefully remove the attachment.

Recommended Usage:

- **Kneading:** The 3D PlanetaryMixing system is highly effective for kneading heavy doughs. For best results, use the kneading hook for up to 3.5 kg of cake dough.
- **Whipping:** Use the whisk attachment for whipping egg whites or cream to stiff peaks.
- **Slicing/Shredding:** Utilize the various discs for precise slicing, grating, or shredding of vegetables, fruits, or cheese. Always use the food pusher when processing ingredients through the feed tube.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Bosch food processor. Always unplug the appliance before cleaning.

- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or other liquids.
- **Mixing Bowl and Attachments:** The stainless steel mixing bowl, kneading hook, whisk, stirring paddle, and slicer/shredder discs are dishwasher safe. For manual cleaning, wash them in warm, soapy water and rinse thoroughly.

- **Splash Guard:** The plastic splash guard is also dishwasher safe. Handle with care as it may appear delicate.
- **Drying:** Ensure all parts are completely dry before reassembling or storing the appliance.

TROUBLESHOOTING

If you encounter any issues with your Bosch MUMS6EW13D food processor, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; multi-function arm not locked.	Check power cord connection; try a different outlet; ensure multi-function arm is securely locked.
Motor stops during operation.	Overload protection activated; ingredients too tough.	Turn off and unplug; reduce quantity of ingredients; allow motor to cool down for 30 minutes before restarting.
Attachments not mixing thoroughly.	Too little ingredients for the bowl size; incorrect attachment used.	Increase ingredient quantity or use a smaller bowl if available; ensure correct attachment is used for the task.
Appliance vibrates excessively.	Unstable surface; uneven distribution of ingredients.	Place on a stable, flat surface; redistribute ingredients evenly in the bowl.

SPECIFICATIONS

Detailed technical specifications for the Bosch MUMS6EW13D Food Processor:

- **Model Number:** MUMS6EW13D
- **Brand:** Bosch Hausgeräte
- **Power:** 1600 Watts
- **Voltage:** 230 Volts (AC)
- **Bowl Capacity:** 5.5 Liters (Stainless Steel)
- **Dimensions (L x W x H):** 33 x 32 x 38 cm
- **Weight:** 9.9 Kilograms
- **Number of Speeds:** 7 + Pulse function
- **Material:** Stainless Steel, Plastic
- **Special Features:** 3D Planetary Mixing System, Kneading hook, Silicone stirring paddle, Whisk, Slicer/Shredder with 3 discs.
- **Care Instructions:** Dishwasher safe parts.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Bosch Hausgeräte website or contact their customer service directly.

- **Official Website:** www.bosch-home.com
- **Customer Service:** Please check the Bosch website for local contact information and service centers.

- **Spare Parts:** Information regarding spare parts availability is not provided in the product details. Please contact Bosch customer service for inquiries.

© 2024 Bosch Hausgeräte. All rights reserved.

This manual is for informational purposes only. Bosch reserves the right to make changes to products without prior notice.