

[Manuals.plus](#) /

› [Dear Morning](#) /

› Dear Morning Smart Toaster Digital Touch Screen User Manual

Dear Morning 1710

Dear Morning Smart Toaster Digital Touch Screen User Manual

Model: 1710

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster after use.

PRODUCT OVERVIEW

The Dear Morning Smart Toaster Model 1710 features a digital touch screen, 7 shade settings, and specialized functions for various bread types. Its sleek stainless steel design includes a removable crumb tray for easy cleaning.



Image: The Dear Morning Smart Toaster, showcasing its digital display and two slots with toasted bread.

Key Features:

- **7 Shade Settings:** Provides a range from light yellow to deep dark, including a specially developed medium setting (level 4) for optimal toast.
- **ONE SLICE FUNCTION:** Ensures both slots heat simultaneously even when toasting a single slice, preventing uneven heating and achieving faster results.
- **LCD Touch Screen & Digital Timer:** Intuitive interface for selecting bread type and settings, with a colorful screen displaying remaining baking time.
- **Multiple Functions:** Features 1.5-inch wide slots suitable for various bread types, including Bagel, White, Waffle, English Muffin, Gluten-Free, and Grain, alongside Cancel, Defrost, and Reheat functions.
- **Quick Toasting:** Equipped with high-efficiency 900W heating elements for 50% faster toasting and even heat distribution.
- **Easy to Clean & Storage:** Includes a removable crumb tray for convenient cleaning and integrated cord wrap storage.

Slice Toaster with Digital Touch Screen

4 Basic+2 Upgraded Functions



**Countdown
Timer Display**
(7 Brown Settings)



Single Slice function
Only toasts both sides of
one slice of bread)



**Bread type
Selections**
Bread, Bagel
Waffle, Muffin



**Defrost
Gluten Free Button**
(Toasts frozen bread)



Reheat Button
heats up toast



Cancel Button
stop at anytime

Image: An overview of the toaster's digital touch screen functions, highlighting the countdown timer, single slice option, various bread type selections, defrost, reheat, and cancel buttons.

SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials from the box. Retain packaging for future storage or transport if needed.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or drapes. Ensure adequate ventilation around the appliance.
3. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. The LCD touch screen will illuminate, indicating the toaster is ready for use.
4. **First Use (Burn-in):** Before first use, operate the toaster without bread on the highest shade setting (7) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Allow the toaster to cool completely before subsequent use.



Image: The Dear Morning Smart Toaster positioned on a kitchen countertop, illustrating its compact design and readiness for operation.

OPERATING INSTRUCTIONS

Follow these steps to achieve perfectly toasted bread with your Smart Toaster:

1. **Insert Bread:** Place up to two slices of bread, bagels, waffles, or other items into the 1.5-inch wide toasting slots.
2. **Select Bread Type:** On the LCD touch screen, press the "Bread Selection" button to cycle through available options (Bagel, White, Waffle, Eng. Muffin, Gluten-Free, Grain) until your desired type is highlighted.
3. **Choose Shade Setting:** Press the "Toast Shade" button (labeled 1-7) to adjust the browning level. Level 1 is the lightest, and Level 7 is the darkest. Level 4 is recommended for a golden brown toast.
4. **Activate Special Functions (Optional):**
 - **Defrost:** For frozen items, press the "Defrost/Gluten Free" button. This function thaws and then toasts the item.
 - **Reheat:** To warm up already toasted items without further browning, press the "Reheat" button.
 - **Single Slice:** If toasting only one slice, press the "Single Slice" button. This ensures both heating elements activate for even toasting.

5. **Start Toasting:** Push down the toast lever until it locks into place. The digital timer on the LCD screen will begin counting down.
6. **Cancel Toasting:** To stop the toasting cycle at any time, press the "Power On/Off and Cancel" button. The toast will automatically pop up.
7. **Retrieve Toast:** Once the cycle is complete, the toast will automatically pop up. Use the high-lift lever to safely retrieve smaller items without burning your fingers.

Four Steps to Baking Bread



1

Select bread type



2

Select shade setting



3

Select the desired function



4

Press the lever to baking

Image: A visual guide demonstrating the four simple steps to operate the toaster: selecting bread type, choosing shade setting, activating desired functions, and pressing the lever to start.



Image: A chart illustrating the 7 browning levels, from lightly toasted (1) to very dark (7), allowing users to select their preferred shade.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Remove Crumb Tray:** Pull out the removable crumb tray located at the back of the toaster. Dispose of accumulated crumbs.
3. **Clean Crumb Tray:** Wash the crumb tray with warm, soapy water. Rinse thoroughly and dry completely before reinserting. Do not immerse the main unit in water.
4. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, a mild non-abrasive cleaner can be used. Dry thoroughly with a soft, dry cloth.
5. **Internal Cleaning:** Never insert any object into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully invert it to shake out the debris.
6. **Storage:** When not in use, store the toaster in a clean, dry place. Utilize the integrated cord wrap storage on the bottom of the unit to keep the cord tidy.



Image: Visual representation of the toaster's convenient features: the removable crumb tray for easy cleaning, the cord wrap storage for neat organization, and the high-lift lever for safe toast retrieval.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; toaster not reset.	Ensure the toaster is securely plugged into a working outlet. Try a different outlet. Press the "Power On/Off and Cancel" button to reset.
Toast is unevenly browned.	Uneven bread thickness; single slice function not used for one slice.	Ensure bread slices are of uniform thickness. If toasting one slice, activate the "Single Slice" function.
Smoke or burning smell.	Crumbs in crumb tray; food lodged in slots; first use burn-off.	Unplug and allow to cool. Empty and clean the crumb tray. Carefully remove any lodged food. Initial smoke/odor is normal for first use.
Toast does not pop up.	Lever not fully depressed; internal mechanism issue.	Ensure the toast lever is pushed down until it locks. If the problem persists, contact customer support.
Touch screen unresponsive.	Temporary software glitch; power cycle needed.	Unplug the toaster for 1-2 minutes, then plug it back in. If the issue continues, contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand	Dear Morning
Model Number	1710
Color	Silver

Attribute	Detail
Material	Stainless Steel
Product Dimensions	11"D x 7"W x 6.6"H
Wattage	900 watts
Number of Slices	2
Shade Settings	7
Display Type	LCD Touch Screen
Special Features	Built-In Timer, High Lift Carriage, LED Indicator, Removable Crumb Tray, Touchscreen
Voltage	120V
Item Weight	3.96 pounds
UPC	789049830723, 789049830440

WARRANTY AND SUPPORT

The Dear Morning Smart Toaster comes with a **12-month Guarantee**. If you receive a defective product or are not satisfied with your purchase, please contact us directly for assistance.

For customer support, please refer to the contact information provided in your product packaging or visit the official Dear Morning store on Amazon: [Dear Morning Store](#).

