

Bosch MUZS6HA

Bosch MUZS6HA Hunting Adventure Accessory Kit User Manual

For Bosch Series 6 Food Processors

INTRODUCTION

This manual provides instructions for the safe and efficient use of your Bosch MUZS6HA Hunting Adventure Accessory Kit. This kit is designed to expand the capabilities of your Bosch Series 6 food processor, enabling you to prepare various meat and vegetable dishes, including minced meat, sausages, and kebbe.

Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the food processor is switched off and unplugged before attaching or detaching accessories.
- Keep hands and utensils away from moving parts during operation.
- Do not operate the appliance with a damaged cord or plug.
- This accessory is intended for household use only.
- Supervise children to ensure they do not play with the appliance.
- Clean all parts thoroughly before first use and after each use.
- Refer to your main food processor manual for additional safety guidelines.

KIT COMPONENTS

The Bosch MUZS6HA Hunting Adventure Accessory Kit includes the following parts:

- Meat Grinder Attachment
- Sausage Stuffer Attachment
- Kebbe Attachment
- Various grinding discs (fine, medium, coarse)
- Filling tray
- Pusher



Image: All components of the Bosch MUZS6HA Hunting Adventure Accessory Kit, including the meat grinder, sausage stuffer, kebbe attachment, various grinding discs, filling tray, and pusher.

SETUP AND ASSEMBLY

Before assembly, ensure all parts are clean and dry. This accessory kit is compatible with Bosch Series 6 food processors (MUMS6 models).

1. Attaching the Meat Grinder

1. Ensure your Bosch Series 6 food processor is unplugged and switched off.
2. Locate the accessory drive on the front of the food processor.
3. Insert the meat grinder attachment into the drive, aligning the connection points.
4. Rotate the attachment clockwise until it locks securely into place.
5. Attach the desired grinding disc (fine, medium, or coarse) and the cutting blade.
6. Secure the retaining ring by screwing it on firmly.
7. Place the filling tray on top of the grinder.



Image: A Bosch food processor with the meat grinder attachment in use, processing green ingredients. This illustrates the grinder attached to the main unit.



Image: A close-up view of the meat grinder attachment, showing the internal components and how they fit together.

2. Attaching the Sausage Stuffer

1. Assemble the meat grinder as described above, but without a grinding disc or cutting blade.
2. Instead of the grinding disc, attach the sausage stuffer nozzle to the end of the grinder.
3. Secure it with the retaining ring.



Image: A close-up of the sausage stuffer attachment, showing its conical shape for filling casings.

3. Attaching the Kebbe Attachment

1. Assemble the meat grinder without a grinding disc or cutting blade.
2. Attach the kebbe forming attachment to the end of the grinder.
3. Secure it with the retaining ring.



Image: A close-up of the kebbe attachment, designed to form hollow tubes for kebbe preparation.

OPERATING INSTRUCTIONS

1. Meat Grinding

1. Prepare meat or vegetables by cutting them into pieces that fit easily into the feeding tube. Remove any bones, gristle, or tough skin from meat.
2. Ensure the meat grinder is correctly assembled with the desired grinding disc.
3. Place a bowl or container under the grinder outlet to collect the processed food.
4. Plug in the food processor and select a suitable speed setting (refer to your food processor manual for recommended speeds for grinding).
5. Feed the prepared ingredients into the feeding tray and gently push them down the feeding tube using the pusher.
Never use your fingers or other utensils.
6. Once grinding is complete, switch off and unplug the food processor.



Image: A person using the provided pusher to guide ingredients into the meat grinder, demonstrating safe operation.

2. Sausage Stuffing

1. Prepare your sausage mixture and ensure the sausage stuffer is correctly assembled.
2. Soak natural casings in warm water according to their instructions, then rinse thoroughly.
3. Slide a prepared casing onto the sausage stuffer nozzle, leaving a small overhang at the end.
4. Place the sausage mixture into the filling tray.
5. Plug in the food processor and select a low speed setting.
6. Gently feed the mixture into the grinder, guiding the casing as it fills. Avoid overfilling to prevent bursting.
7. Twist or tie the filled casing at desired intervals to form individual sausages.
8. Once complete, switch off and unplug the food processor.

3. Kebbe Preparation

1. Prepare your kebbe mixture and ensure the kebbe attachment is correctly assembled.
2. Place the kebbe mixture into the filling tray.
3. Plug in the food processor and select a low speed setting.
4. Feed the mixture into the grinder. The kebbe attachment will form hollow tubes.
5. Cut the tubes to the desired length and fill them as per your recipe.
6. Once complete, switch off and unplug the food processor.



Image: A collage of various dishes, including burgers, falafel, and other prepared foods, showcasing the versatility of the Bosch accessory kit.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your accessory kit.

Cleaning

- Always unplug the food processor before cleaning.
- Disassemble all parts of the accessory kit.
- Most parts are dishwasher-safe (refer to the specifications section). For hand washing, use warm soapy water and a soft brush to remove any food residue.
- Rinse thoroughly and dry all parts immediately to prevent rust, especially metal components.
- Do not use abrasive cleaners or scouring pads, as these can damage the surfaces.

Storage

- Store all components in a clean, dry place.
- Ensure all parts are completely dry before storage to prevent mold or rust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder is not operating.	Food processor not plugged in or switched on. Attachment not correctly assembled or locked.	Check power supply. Ensure attachment is securely locked into the drive.
Food is not grinding properly or is jamming.	Ingredients are too large or tough. Grinding disc is clogged. Speed setting is too low.	Cut ingredients into smaller pieces. Disassemble and clean the grinding disc. Increase speed if appropriate for the food processor.
Sausage casing bursts during stuffing.	Casing is overfilled. Speed setting is too high.	Reduce the amount of mixture. Use a lower speed setting.

If the problem persists, please refer to your Bosch food processor's main instruction manual or contact Bosch customer support.

SPECIFICATIONS

- **Model Number:** MUZS6HA
- **Brand:** Bosch
- **Compatibility:** Bosch Series 6 Food Processors (MUMS6ZM00G and similar models)
- **Material:** Die-cast aluminum meat grinder, stainless steel filling bowl
- **Dimensions (L x W x H):** 38 x 19.5 x 19 cm
- **Weight:** 1.5 kg
- **Special Features:** Dishwasher-safe parts (refer to specific component instructions)



Image: Two Bosch Series 6 food processors, one black and one white, demonstrating the compatible main units for this accessory kit.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your Bosch Series 6 food processor or visit the official Bosch website. Keep your proof of purchase for warranty claims.


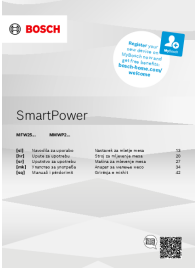
Online Resources: www.bosch-home.com



© 2024 Bosch. All rights reserved.

Related Documents - MUZS6HA

	<p>Bosch MUZ6MM Universal Mixer Attachment - Instruction Manual</p> <p>User manual and guide for the Bosch MUZ6MM Universal Mixer Attachment, detailing its intended use, safety instructions, operation, and cleaning for Bosch MUM6N.. kitchen machines.</p>
	<p>Bosch ProPower MFW6 Meat Mincer User Manual</p> <p>Discover the capabilities of the Bosch ProPower MFW6 meat mincer. This user manual provides essential information for safe and effective operation, covering assembly, usage, maintenance, and troubleshooting.</p>
	<p>Bosch CompactPower Meat Mincer MFW3X User Manual</p> <p>Comprehensive user manual for the Bosch CompactPower Meat Mincer (MFW3X series), detailing features, operation, safety instructions, and maintenance for optimal performance.</p>

	<p>Bosch VeggieLove MUZ5VL1: User Manual for Slicing, Shredding, and Grating</p> <p>Explore the Bosch VeggieLove MUZ5VL1 user manual for detailed instructions on using this versatile kitchen machine accessory. Learn about assembly, operation, safety, cleaning, and troubleshooting for slicing, shredding, and grating food with your Bosch appliance.</p>
	<p>Bosch SmartPower MFW25... MMWP2... Navodila za uporabo</p> <p>Ta uporabniški priročnik vsebuje navodila za uporabo, varnostne napotke in informacije o vzdrževanju za nastavke za mlin za meso Bosch SmartPower, modeli MFW25... in MMWP2....</p>
	<p>Bosch Serie 16 MUMS6... Manual de Usuario</p> <p>Manual de usuario para la máquina de cocina Bosch Serie 16, modelo MUMS6.... Incluye instrucciones de seguridad, operación, limpieza y solución de problemas.</p>