

ZHIMIFU NO

ZHIMIFU Countertop Dishwasher User Manual

Model: TYPE E

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your ZHIMIFU Countertop Dishwasher. Please read this manual thoroughly before using the appliance and retain it for future reference.

The ZHIMIFU Countertop Dishwasher is designed for compact spaces, offering 5 washing programs, 360° dual spray cleaning, and a 7L built-in water tank. It features drying and storage functions, making it a versatile addition to apartments, RVs, and small homes.

2. SAFETY INSTRUCTIONS

- Always read all instructions before operating the appliance.
- Ensure the power supply voltage matches the specifications of the dishwasher (110V, 60Hz).
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the dishwasher from the power outlet when not in use and before cleaning.
- Keep children and pets away from the appliance during operation.
- Use only dishwasher-safe detergents.
- Do not open or touch the door when the dishwasher is working to avoid scalding.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Dishwasher
- 1 x G1/4 Inlet Pipe
- 1 x G1/2 Drainage Pipe
- 1 x G1/2 to G1/4 Water Connection
- 1 x Pipe Clamp

- 1 x Filter Tank
- 1 x Plastic Water Tank
- 1 x English Instruction Manual
- 1 x Water Tank Cover
- All Accessories for Assembly

4. PRODUCT OVERVIEW

Your ZHIMIFU Countertop Dishwasher combines washing, drying, and cabinet functions for convenience and efficiency.



Figure 4.1: Front view of the ZHIMIFU Countertop Dishwasher.



Figure 4.2: Dishwasher dimensions (44cm/17.32in width, 43cm/16.92in depth, 52cm/22.47in height).



Standard

Up to 131°F
60 minutes



Quick

Up to 122°F
29 minutes



Eco

Up to 140°F
89 minutes



Strong

Up to 131°F
59 minutes



Fruit

Cold water
19 minutes



Five Washing Programs

& Air Drying Function

Meet a variety of cleaning needs

Figure 4.3: Control panel displaying the five washing programs: Standard (up to 131°F, 60 min), Quick (up to 122°F, 29 min), Eco (up to 140°F, 89 min), Strong (up to 131°F, 59 min), and Fruit (cold water, 19 min).

Key features include:

- **3-in-1 Function:** Dishwasher, dryer, and cabinet functions for comprehensive utility.
- **Durable Construction:** Made of high-quality stainless steel and ABS materials for rust resistance and longevity.
- **Efficient Cleaning:** 900W power with 5 cleaning modes, featuring 6-hole upper spray and 11-hole lower spray for 360° deep cleaning.
- **High Temperature Sterilization:** 161°F (72°C) high temperature and PTC heating to prevent odors and ensure hygiene.
- **User-Friendly Interface:** Touch screen control for mode selection and a wide screen displaying remaining time.
- **Easy Loading:** Flip-up door design for convenient placement and retrieval of cookware.
- **Installation-Free Design:** Simply plug in the drain and power to operate, no drilling or complex plumbing required.

5. SETUP

The ZHIMIFU Countertop Dishwasher features an installation-free design, allowing for quick setup.

1. **Placement:** Place the dishwasher on a stable, level countertop near a power outlet and a drain.
2. **Water Filling:** Open the water tank cover on top of the unit. Add an appropriate amount of clean water into the built-in 7L water tank. Fasten the filter tank and screw on the water tank cover securely.
3. **Drainage Connection:** Connect the G1/2 Drainage Pipe to the designated outlet on the dishwasher and direct the other end into a sink or suitable drain.
4. **Power Connection:** Plug the power cord into a 110V, 60Hz electrical outlet.

For a visual guide on setup, please refer to the official product video below:

Your browser does not support the video tag.

Video 5.1: Demonstration of the dishwasher's features, including water filling, dish loading, washing cycles, and drying.

6. OPERATING INSTRUCTIONS

Follow these steps to operate your dishwasher:

1. **Load Dishes:** Open the front door and arrange dishes, bowls, and utensils in the racks. Ensure items do not obstruct the spray arms. The large capacity is suitable for cleaning dishes for the whole family.
2. **Add Detergent:** Place the recommended amount of dishwasher detergent into the dispenser.
3. **Close Door:** Securely close the dishwasher door.
4. **Select Program:** Use the touch screen control panel to select your desired washing program (Standard, Quick, Eco, Strong, or Fruit). The display will show the remaining time.
5. **Start Cycle:** Press the 'On/Off' button to start the washing cycle. The dishwasher will begin its 360-degree dual spray rotation to wash the surface of tableware with oil and stains without dead corners.
6. **Drying and Disinfection:** After the wash cycle, the dishwasher will automatically activate its drying function to prevent bacterial growth. It also features independent ozone disinfection.
7. **Unload Dishes:** Once the cycle is complete and the drying function has finished, carefully open the door and unload your clean, dry dishes.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

- **Clean Filters:** Regularly check and clean the filter tank to remove food particles and debris.
- **Wipe Interior:** Periodically wipe down the interior of the dishwasher with a damp cloth to prevent residue buildup.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Descaling:** Depending on water hardness, perform descaling periodically using a dishwasher cleaner or vinegar solution.

8. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dishwasher does not start	No power, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent.	Reload dishes correctly, clean spray arm nozzles, add more detergent.
Error Code E4	Temperature sensor failure.	Unplug the unit, wait a few minutes, then plug it back in. If the error persists, contact customer support.
Water leakage	Drain hose not properly connected, door seal damaged.	Check drain hose connection, inspect door seal for damage.

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

Technical specifications for your ZHIMIFU Countertop Dishwasher:

Specification	Value
Brand	ZHIMIFU
Model	TYPE E
Color	White
Material	Stainless Steel, ABS
Noise Level	50-55 dB
Number of Tableware Sets	8 Sets
Voltage	110V
Frequency	60Hz
Power	900W
Water Consumption	7L / 6.35qt
Water Tank Capacity	7L / 6.35qt
Washing Time	30-50 minutes (depending on program)
Installation Type	Countertop
Sterilization Temperature	72°C / 161°F
Spraying System	Upper and Lower Double Spraying
Drying Method	PTC Thermal Drying
Net Weight	10.5kg / 23.1 lbs
Product Dimensions (L*W*H)	44*43*52cm / 17.3*16.9*20.4in

10. WARRANTY AND SUPPORT

Your ZHIMIFU Countertop Dishwasher is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or contact the seller directly.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact ZHIMIFU customer service through the contact information provided with your purchase or on the official ZHIMIFU website.