

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Impecca](#) /

> [Impecca CM-2200ST 2.2 Cu. Ft. Countertop Microwave Oven User Manual](#)

Impecca CM-2200ST

Impecca CM-2200ST 2.2 Cu. Ft. Countertop Microwave Oven

USER MANUAL

Important Safeguards

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using the appliance.
2. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
3. Do not heat liquids or other foods in sealed containers as they are liable to explode.
4. Do not use corrosive chemicals or vapors in this appliance.
5. This appliance is intended for household use only.
6. Do not immerse the cord or plug in water.
7. Close supervision is necessary when the appliance is used by or near children.
8. Always ensure the turntable and roller ring are correctly positioned before operation.

Product Overview

The Impecca CM-2200ST is a 2.2 cubic feet countertop microwave oven designed for efficient food preparation. It features 1200 watts of power, a 16.5-inch glass turntable, an LED display, and a touchpad control panel. Key functions include defrosting, express cooking, and a child safety lock.

Components Included:

- Microwave Oven Unit
- Glass Turntable
- Roller Ring
- User Manual



Front view of the Impecca CM-2200ST Countertop Microwave Oven, showing the control panel and door.



Angled view of the Impecca CM-2200ST Countertop Microwave Oven, highlighting its stainless steel finish.

Setup and Installation

Unpacking and Placement:

- Remove all packing materials from inside and outside the microwave oven.
- Place the microwave oven on a flat, stable surface strong enough to hold its weight and the heaviest food likely to be cooked in it.
- Ensure adequate ventilation. Leave a minimum of 3 inches (7.5 cm) of space on the top, sides, and rear for proper airflow.
- Do not block air vents.

Turntable Assembly:

1. Place the roller ring in the center of the microwave oven cavity.
2. Place the glass turntable on top of the roller ring, ensuring it sits securely in the center support.



The Impecca CM-2200ST Microwave Oven placed on a kitchen countertop, demonstrating typical installation.

Operating Instructions

Setting the Clock:

1. Press the **CLOCK** button once.
2. Use the number pads to enter the current time (e.g., 1-2-3-0 for 12:30).
3. Press the **CLOCK** button again to confirm.

Basic Microwave Cooking:

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Enter the desired cooking time using the number pads.
4. Press **POWER LEVEL** and then a number (1-10) for the desired power level (10 is full power). Skip this step for full power.
5. Press **START/ENTER** to begin cooking.

Express Cooking:

For quick cooking at full power, simply press a number pad (1-6) to cook for that many minutes. Press **START/ENTER** for 30 seconds of cooking at full power.

Defrost Function:

- **Defrost by Weight:** Press **WEIGHT DEFROST**. Enter the weight of the food in pounds (e.g., 1.5 for 1.5 lbs). Press **START/ENTER**.
- **Defrost by Time:** Press **TIME DEFROST**. Enter the desired defrosting time. Press **START/ENTER**.

Child Safety Lock:

- **To Activate:** Press and hold the **STOP/CANCEL** button for 3 seconds. A lock indicator will appear on the display.
- **To Deactivate:** Press and hold the **STOP/CANCEL** button for 3 seconds again. The lock indicator will disappear.

Shortcut Buttons:

The microwave includes pre-programmed settings for common food items:

- **POPCORN:** For popping popcorn.
- **PIZZA PLATE:** For reheating pizza.
- **FROZEN ENTREE:** For cooking frozen meals.
- **BEVERAGE:** For heating drinks.
- **FRESH VEGETABLE:** For cooking fresh vegetables.
- **POTATO:** For baking potatoes.
- **SOUP:** For heating soup.

Simply press the desired shortcut button once, then press **START/ENTER** to begin cooking with the pre-set time and power level.

Care and Maintenance

Cleaning the Microwave Oven:

- **Interior:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent or microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Seal:** Wipe the door, door seals, and control panel with a soft, damp cloth to remove any spills or splatters.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be washed in warm soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

General Tips:

- Always unplug the microwave oven before cleaning.
- Do not use steam cleaners.
- Regular cleaning helps maintain performance and prevents odors.

Troubleshooting

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse or reset circuit breaker.
Food not heating.	Door not closed properly; Cooking time or power level set incorrectly; Food container not microwave-safe.	Close door firmly; Adjust cooking time/power; Use microwave-safe cookware.

Problem	Possible Cause	Solution
---------	----------------	----------

Turntable not rotating.	Turntable or roller ring not positioned correctly; Debris under turntable.	Re-position turntable and roller ring; Clean under the turntable.
Oven light not working.	Light bulb needs replacement.	Contact customer support for bulb replacement.

Specifications



Diagram showing the dimensions of the Impecca CM-2200ST Microwave Oven: 24.41 inches (Width) x 19.6 inches (Depth) x 13.62 inches (Height).

- **Model:** CM-2200ST
- **Capacity:** 2.2 Cubic Feet
- **Power Output:** 1200 Watts
- **Voltage:** 120 Volts
- **Product Dimensions (WxDxH):** 24.41" x 19.6" x 13.62"
- **Turntable Diameter:** 16.5 inches
- **Installation Type:** Countertop
- **Material:** Stainless Steel, Glass
- **Special Features:** Child Safety Lock, Defrost, Express Cook, One Touch Button, LED Display

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Impecca website. Do not attempt to repair the microwave oven yourself. Unauthorized repairs may void your warranty and pose safety risks.

