

Beetel G10_BLK

Beetel G10 Corded Landline User Manual

Model: G10_BLK

1. INTRODUCTION

Thank you for choosing the Beetel G10 Corded Landline. This manual provides detailed instructions for setting up, operating, and maintaining your new telephone. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

2. SAFETY INFORMATION

- Do not expose the telephone to direct sunlight, heat sources, or excessive moisture.
- Avoid dropping the telephone or subjecting it to strong impacts.
- Do not attempt to open or repair the telephone yourself. Refer all servicing to qualified personnel.
- Use only the provided accessories and cables.
- Keep the telephone away from medical devices such as pacemakers, as it may cause interference.
- Unplug the telephone from the wall outlet during lightning storms or when unused for long periods.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Beetel G10 Corded Landline Unit
- Handset
- Coiled Handset Cord
- Line Cord
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Beetel G10 landline phone.



Figure 4.1: Overall view of the Beetel G10 Corded Landline Phone. This image displays the complete phone unit, including the base, handset, and coiled cord, providing a general understanding of its design and components.

Ring LED Indication



Figure 4.2: Front view of the Beetel G10 phone, specifically highlighting the Ring LED Indication. This LED illuminates when there is an incoming call, providing a visual alert.



Figure 4.3: Side view of the Beetel G10 phone, demonstrating its compact design suitable for desktop placement. This view illustrates the phone's profile and how it sits on a flat surface.

1-3-Step Ringer Volume Control



Figure 4.4: Back view of the Beitel G10 phone, illustrating the ports for connecting the line cord and handset cord. This view is essential for understanding how to properly connect the phone.

5. SETUP

5.1 Connecting the Telephone

1. Connect one end of the coiled handset cord to the handset and the other end to the handset jack on the telephone base.
2. Connect one end of the line cord to the LINE jack on the telephone base.
3. Connect the other end of the line cord to your telephone wall outlet.

5.2 Desktop and Wall Mounting

The Beitel G10 is designed for both desktop placement and wall mounting, offering flexibility in installation.



Tone/Pulse Switchable

G10

Figure 5.1: The Beetel G10 phone positioned for desktop use. The design allows it to sit stably on any flat surface, making it convenient for office or home desk setups.

For Desktop Use: Simply place the telephone on a flat, stable surface.

For Wall Mounting:

1. Locate the wall mounting holes on the back of the telephone base.
2. Install two screws (not provided) into the wall, spaced appropriately to match the mounting holes. Ensure the screws are securely anchored.
3. Align the telephone's mounting holes with the screws and slide the phone downwards to secure it.
4. Rotate the receiver holding clip on the wall mount piece upwards to securely hold the handset when mounted vertically. This prevents the handset from falling.

6. OPERATING INSTRUCTIONS

6.1 Making a Call

1. Lift the handset.
2. Listen for a dial tone.
3. Dial the desired telephone number using the alphanumeric keypad.
4. Wait for the call to connect.

6.2 Receiving a Call

When the telephone rings, lift the handset to answer the call.

6.3 Ringer LED Indication

The Beutel G10 features a Ringer LED Indication light that flashes when there is an incoming call, providing a visual alert in addition to the audible ring.



Figure 6.1: Close-up view of the Beutel G10 keypad, clearly showing the "RING" LED indicator. This light flashes to signal an incoming call, useful in noisy environments or for those with hearing impairments.

6.4 3-Step Ringer Volume Control

Adjust the ringer volume to your preference using the 3-step control switch located on the side or bottom of the telephone base. Options typically include High, Medium, and Low.



Figure 6.2: The Beitel G10 phone illustrating the 3-Step Ringer Volume Control feature. This allows users to adjust the loudness of the incoming call ring to suit their environment.

6.5 Alphanumeric Keypad

The telephone is equipped with a standard alphanumeric keypad for dialing numbers and entering characters if supported by network services.

Alphanumeric Keypad



Figure 6.3: A clear view of the Alphanumeric Keypad on the Beetel G10 phone. The large, easy-to-read buttons ensure comfortable and accurate dialing.

6.6 Flash Function (300 msec)

The Flash button allows you to access network features such as call waiting or conference calls. Pressing the Flash button sends a brief signal to the telephone exchange, typically 300 milliseconds, to activate these services.

6.7 Tone/Pulse Dialing Mode Switchable

The telephone supports both Tone (DTMF) and Pulse dialing modes. A switch, usually located on the bottom or side of the phone, allows you to select the appropriate mode for your telephone line. Ensure the correct mode is selected for proper operation.

6.8 Pause / Redial Function

- **Redial:** To redial the last number called, lift the handset and press the **REDIAL** button.
- **Pause:** The **PAUSE** button can be used when dialing numbers that require a pause, such as accessing an external

line through a PABX system. Press the PAUSE button at the required point in the dialing sequence.

7. MAINTENANCE

- Clean the telephone surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Keep the telephone free from dust and dirt.
- Ensure cords are not tangled or pinched, which can cause damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Line cord not connected properly; telephone line issue.	Check all cable connections. Test with another phone if available. Contact your service provider.
Cannot make or receive calls	Incorrect dialing mode (Tone/Pulse); line cord issue.	Ensure the Tone/Pulse switch is set correctly. Verify line cord connection.
Ringer not working	Ringer volume set to low or off.	Adjust the 3-step ringer volume control to a higher setting.
Handset falls off wall mount	Receiver holding clip not rotated upwards.	Ensure the small plastic clip on the wall mount piece is rotated upwards to secure the handset.

9. SPECIFICATIONS

Feature	Detail
Brand	Beetel
Model	G10
Colour	Black
Telephone Type	Corded Landline
Material	Plastic
Power Source	Corded Electric
Ringer Indication	LED
Ringer Volume Control	3-Step
Keypad	Alphanumeric
Flash Function	300 msec
Dialing Mode	Tone/Pulse Switchable
Functions	Pause, Redial

Feature	Detail
Mounting Options	Desktop / Wall Mountable
Certification	TEC Certified

10. WARRANTY AND SUPPORT

Beetel products are manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included with your product or visit the official Beetel website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact Beetel customer service through their official channels.

© 2024 Beetel. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question