

Nerf F8962

Nerf Zombie Corrupter Dart Blaster User Manual

Model: F8962

INTRODUCTION

The Nerf Zombie Corrupter Dart Blaster is designed for exciting, active play, featuring a unique graffiti motif that gives the impression of battle gear crafted by imaginative zombie fighters. This bolt-action blaster is equipped with an 18-dart removable clip magazine and an integrated holder for 6 additional darts, ensuring you're always ready for action. It comes with 22 Nerf Elite darts, providing ample ammunition for your adventures. The blaster's design, with its fascinating details, makes it an ideal accessory for zombie-themed games and events, offering an engaging experience for children aged 8 and up.

SAFETY INFORMATION

WARNING: To avoid eye injuries, do not aim at eyes or face. For players and people who are within the area, wearing glasses is recommended. Only use official Nerf darts. Other darts may not meet safety standards. Do not change darts or blasters.

WARNING: Choking hazard - small parts can be produced. Not suitable for children under 3 years.

This product is suitable for ages 8 and above.

WHAT'S IN THE BOX

- Nerf Zombie Corrupter Dart Blaster
- 18-Dart Removable Clip Magazine
- 2 Blaster Bolts (Ambidextrous)
- 22 Nerf Elite Darts
- Instructions Manual



Figure 1: Contents of the Nerf Zombie Corrupter Dart Blaster package, including the blaster, magazine, and 22 Nerf Elite darts.

SETUP

1. **Attach the Bolts:** The blaster features an ambidextrous design. Attach one bolt to either side of the blaster, depending on user preference (right-handed or left-handed operation). Ensure it clicks securely into place.
2. **Load the Magazine:** Insert the 22 Nerf Elite darts into the 18-dart removable clip magazine. Push each dart firmly until it is fully seated.
3. **Insert the Magazine:** Align the loaded magazine with the magazine well on the underside of the blaster and push it firmly upwards until it locks into position.
4. **Store Extra Darts:** The blaster has an integrated holder in the shoulder rest for 6 darts. Store any remaining darts here for quick access during play.



Figure 2: Side view of the Nerf Zombie Corrupter Blaster, illustrating the magazine insertion point and the bolt mechanism.

OPERATING THE BLASTER

1. **Prime the Blaster:** Pull the bolt handle all the way back until it clicks, then push it all the way forward. This action primes the blaster and loads a dart into the firing chamber.
2. **Aim:** Point the blaster safely away from eyes and faces, towards your intended target.
3. **Fire:** Squeeze the trigger to launch the dart.
4. **Reload and Repeat:** After firing, pull the bolt handle back and push it forward again to load the next dart from the magazine. Continue this process until the magazine is empty.
5. **Magazine Removal:** To remove the magazine, locate the magazine release button (usually near the magazine well) and press it while pulling the magazine downwards.



Figure 3: The Nerf Zombie Corrupter Blaster ready for action, demonstrating the dart firing mechanism.

MAINTENANCE

- **Cleaning:** Wipe the blaster with a clean, damp cloth to remove dirt and dust. Do not submerge the blaster in water or use harsh chemicals.
- **Dart Care:** Keep darts clean and dry. Avoid bending or crushing darts, as this can affect performance. Replace worn or damaged darts with official Nerf Elite darts.
- **Storage:** Store the blaster and darts in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster not firing darts.	Blaster not fully primed; magazine empty or improperly inserted; dart jammed.	Ensure the bolt is pulled back and pushed forward completely until it clicks. Check if the magazine is loaded and securely inserted. Inspect the barrel and firing mechanism for jammed darts and carefully remove them.
Darts not flying far or accurately.	Darts are old, damaged, or not official Nerf darts; blaster mechanism worn.	Use only new, official Nerf Elite darts. Ensure darts are not bent or crushed. If the problem persists with new darts, contact customer support.
Magazine not inserting or removing easily.	Magazine misaligned; debris in magazine well; release button not fully pressed.	Ensure the magazine is aligned correctly with the well. Check for any obstructions in the magazine well. Press the magazine release button firmly while inserting or removing.

SPECIFICATIONS

Model Number: F8962

Product Dimensions: 2.64 x 24.02 x 9.76 inches (6.7 x 61 x 24.8 cm)

Item Weight: 1.98 pounds (0.9 kg)

Recommended Age: 8 years and up

Dart Type: Nerf Elite Darts

Magazine Capacity: 18 Darts

Integrated Dart Storage: 6 Darts

Manufacturer: Hasbro

Release Date: June 17, 2024







WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts and darts, please contact Hasbro customer service. Refer to the packaging or the official Hasbro website for the most current contact details.

Manufacturer: Hasbro

Website: www.hasbro.com (Please check for regional variations)

Related Documents - F8962

	<p>Nerf Rough Cut 2X4 Elite Blaster User Manual</p> <p>User manual for the Nerf Rough Cut 2X4 Elite Blaster, detailing its features, operation, and safety precautions. Includes instructions for loading, single fire, and slam fire modes.</p>
	<p>Nerf Roblox Arsenal Pulse Laser Blaster Instructions</p> <p>Comprehensive guide on how to operate, load, fire, and clear jams for the Nerf Roblox Arsenal Pulse Laser motorized dart blaster. Includes safety warnings and battery information.</p>
	<p>NERF Modulus ECS-10 Blaster: Instructions and Safety Guide</p> <p>Official instructions and safety information for the NERF Modulus ECS-10 blaster by Hasbro. Learn how to load, fire, maintain, and safely use your NERF blaster.</p>
	<p>Nerf Ultra One Blaster: Assembly, Loading, and Firing Instructions</p> <p>A comprehensive guide to assembling, loading, and operating the Nerf Ultra One Motorized Blaster, including important safety information and troubleshooting tips.</p>
	<p>Nerf Fortnite AR-L Blaster: Instructions and Features</p> <p>This document provides instructions and details for the Nerf Fortnite AR-L Blaster, including how to clear jams, insert batteries, load and fire darts, and store the blaster. It features multilingual support and highlights key components like the trigger, flip-up sight, tactical rail, and acceleration button.</p>
	<p>Nerf N-Strike Elite Strongarm Blaster: User Guide</p> <p>Official instructions for the Nerf N-Strike Elite Strongarm toy blaster. Learn how to load darts, fire single shots, and use the slam-fire feature for rapid firing. Includes safety warnings and product details.</p>