

## Nerf FLEX

# NERF N Series Flex Blaster: Official Instruction Manual

## 1. INTRODUCTION

---

The NERF N Series Flex dart blaster is designed for compact, stealthy play, offering extreme accuracy, speed, and distance with its revolutionary N1 darts. This manual provides essential information for the safe and effective use of your blaster.

The blaster is lightweight and easy to handle, making it suitable for various play scenarios. It features a single dart capacity and pull-back priming mechanism.

## 2. PACKAGE CONTENTS

---

- 1 x NERF N Series Flex Blaster
- 2 x NERF N Series N1 Foam Darts

**Note:** Eyewear is recommended (not included) for all NERF dart blasting activities.

## 3. SETUP AND DART LOADING

---

Before first use, ensure all packaging materials are removed. The NERF N Series Flex blaster is designed for immediate play with minimal assembly.

### 3.1 Loading Darts

1. Ensure the blaster is not primed.
2. Insert one (1) NERF N Series N1 foam dart into the barrel opening at the front of the blaster. Push the dart in until it is seated firmly.

**Important:** Only use official NERF N Series N1 darts with this blaster. Other darts may not function correctly or could damage the blaster.



Figure 1: Front view of the NERF N Series Flex Blaster, showing the dart insertion point.

## 4. OPERATING INSTRUCTIONS

### 4.1 Priming the Blaster

1. With a dart loaded, firmly grasp the pull-back priming handle located at the rear of the blaster.
2. Pull the handle all the way back until you hear a click. This indicates the blaster is primed and ready to fire.

### 4.2 Firing the Blaster

1. Aim the blaster at your target, ensuring no one is in the line of fire.
2. Press the trigger to launch the dart.



Figure 2: Side view of the Nerf N Series Flex Blaster, highlighting the pull-back priming handle.

Your browser does not support the video tag.

Video 1: Demonstration of loading and firing the Nerf N Series Flex Dart Blaster.

Your browser does not support the video tag.

Video 2: Overview of the Nerf N Series Flex Blaster, demonstrating its compact size and ease of use.

Your browser does not support the video tag.

Video 3: Review highlighting the Nerf N Series Flex Blaster as a great option for smaller hands.

## 5. MAINTENANCE

### 5.1 Cleaning

- Wipe the blaster with a damp cloth to remove dust and dirt. Do not submerge the blaster in water.
- Ensure darts are clean and dry before use. Dirty or wet darts can affect performance.

### 5.2 Dart Care

- Avoid bending or crushing darts, as this can lead to poor performance or jamming.
- Store darts in a clean, dry place away from direct sunlight or extreme temperatures.

## 6. TROUBLESHOOTING

---

### 6.1 Dart Not Firing

- Ensure the blaster is fully primed by pulling the priming handle all the way back until it clicks.
- Verify that a dart is correctly loaded into the barrel.

### 6.2 Darts Jamming

- Check if the darts are damaged (bent, torn, or excessively worn). Replace damaged darts with new official NERF N Series N1 darts.
- Ensure darts are inserted correctly and not forced into the barrel.

## 7. SPECIFICATIONS

---

Feature	Specification
Product Dimensions	1.73 x 5.98 x 6.5 inches
Item Weight	3.87 ounces
Model Number	F8623EU5
Manufacturer Recommended Age	8 years and up
Dart Compatibility	NERF N Series N1 Darts ONLY
Dart Capacity	1 dart
Priming Mechanism	Pull-back

## 8. SAFETY INFORMATION

---

- **WARNING:** Do not aim at eyes or face. Use of eyewear is recommended for players and people within range.
- Use only official NERF N Series N1 darts. Other darts may not meet safety standards.
- Do not modify darts or blaster.
- Keep out of reach of small children due to small parts.



Figure 3: NERF N Series Flex Blaster packaging, indicating age recommendation and safety warnings.

## 9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for proof of purchase.