

## Furby G0397

# Furby Furblets Fierce & Fabulous 2 Pack (Greenie-Meanie & May-May) Instruction Manual

Model: G0397 | Brand: Furby

### INTRODUCTION

Welcome to the world of Furby Furblets! This instruction manual provides essential information for setting up, operating, and maintaining your new Fierce & Fabulous 2 Pack, featuring Greenie-Meanie and May-May. These mini electronic plush toys offer over 45 unique sounds and interactive features to enhance playtime.

### PACKAGE CONTENTS

- 1x Greenie-Meanie Furblet
- 1x May-May Furblet
- 2x Keychain Clips
- 6x LR44 Button Cell Batteries (pre-installed)



Image: The Furby Furblets Fierce & Fabulous 2 Pack, Greenie-Meanie and May-May, shown in their retail packaging.

## SETUP

### Battery Installation

Your Furblets come with batteries pre-installed. If replacement is needed, follow these steps:

1. Locate the battery compartment on the underside of the Furblet.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Remove the old LR44 button cell batteries.
4. Insert 3 new LR44 button cell batteries, ensuring correct polarity (+/-).
5. Replace the battery compartment cover and secure it with the screw.



Image: The May-May Furbles highlighting the power button on its head and other interaction points.

## OPERATING INSTRUCTIONS

### Basic Interactions

- **Power On/Off & Babbling:** Press the top of the Furbles's head to power it on or off. Pressing it also makes the Furbles babble in Furbish.
- **Feeding Noises:** Press the Furbles's beak to hear fun feeding noises.





Image: A child interacting with Greenie-Meanie by pressing its beak, indicating feeding action.

- **Music Activation:** Tap the heart gem on the Furblet's forehead to activate music. Each Furblet plays its own tunes.
- **Peekaboo Ears:** Fold one or both ears down. Press the top of the head to make them pop back up.
- **Harmonizing:** To make two Furblets sing a song together, press and hold their mouths at the same time.



Image: Greenie-Meanie and May-May Furbles positioned together, indicating their harmonizing feature.

- **Furdar Mode (with Furby, sold separately):** If you own the latest Furby, activate its Furdar mode to hear what Furby has to say about your "dee noo-lahs" (little friends).



Image: A Furblet positioned next to a larger Furby, demonstrating the Furdar mode interaction.

### **Attaching the Keychain Clip**

Each Furblet comes with a removable keychain clip. Attach the clip to the loop on the Furblet's head to easily carry it on backpacks or other travel bags.





Image: The Greenie-Meanie and May-May Furblets displayed with their respective keychain clips.

## FEATURES

- **Unique Personalities:** Greenie-Meanie and May-May each have distinct personalities and sound effects.
- **45+ Sound Effects:** Each Furblet features over 45 different sound effects, including music and Furbish phrases.
- **Portable Fun:** The included keychain clips allow for easy attachment to bags, making them ideal travel companions.
- **Interactive Play:** Engage with your Furblets through feeding, music activation, and ear-popping actions.
- **Harmonizing Duo:** When placed together, Greenie-Meanie and May-May can sing songs in harmony.
- **Furby Compatibility:** Enhance play by connecting with the latest Furby (sold separately) using Furdar mode.

Your browser does not support the video tag.

Video: An official product video showcasing various Furblets and their interactive features, including sounds and movements.

## MAINTENANCE

### Care and Cleaning

- **Surface Clean Only:** To clean your Furblets, use a damp cloth to gently wipe the surface. Do not immerse in water.
- Avoid using harsh chemicals or abrasive cleaners.

### Battery Replacement

Refer to the "Battery Installation" section under Setup for detailed instructions on replacing batteries.

## TROUBLESHOOTING

- **No Sound/Not Responding:**
  - Ensure the Furblet is powered on by pressing the top of its head.
  - Check if the batteries are correctly installed and not depleted. Replace if necessary.
- **Ears Not Popping Up:**
  - Ensure the ears are fully folded down before pressing the head.
  - Check for any obstructions preventing the ears from moving freely.
- **Difficulty Harmonizing:**
  - Ensure both Furblets are powered on and placed close to each other.
  - Press and hold both mouths simultaneously for the harmonizing feature to activate.

## IMPORTANT SAFETY GUIDELINES

- **WARNING:** Small parts may be generated. Not for children under 3 years.
- Adult supervision is recommended during play.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the toy is not used for an extended period.






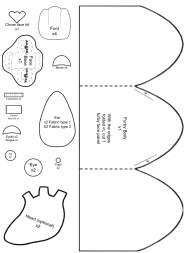
## PRODUCT SPECIFICATIONS

Product Dimensions	6 x 2.19 x 4 inches
Item Weight	6 ounces
Item Model Number	G0397
Manufacturer Recommended Age	6 years and up
Batteries	6 LR44 batteries required (included)
Release Date	April 6, 2024
Language	English
Manufacturer	Hasbro

## WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support regarding your Furby Furblets, please contact Hasbro directly or visit their official website. Keep your proof of purchase for any warranty claims. You can find more information and other Furby products at the [Furby Store](#).



	<p><a href="#">Furby Party Rockers - Interactive Toy Guide &amp; Information</a></p> <p>Discover the fun of Furby Party Rockers! This guide provides information on features, app integration, care, troubleshooting, battery replacement, and compliance for the interactive toy.</p>
	<p><a href="#">Furby Babies Instruction Manual: Setup, Play, and Care Guide</a></p> <p>Official instruction manual for Furby Babies by Tiger Electronics. Learn setup, interaction, games, troubleshooting, and care for your interactive toy. Includes information on Furbish language and communication.</p>
	<p><a href="#">DJ Furby User Manual and Interactive Toy Guide</a></p> <p>Comprehensive user manual and guide for the DJ Furby interactive toy, detailing modes, features, and instructions for operation. Learn how to unlock games, play music, and interact with your Furby.</p>
	<p><a href="#">Furby Freundschaftsfibel: Interaktiver Spielspaß und Anleitung</a></p> <p>Entdecken Sie die Furby Freundschaftsfibel von Hasbro. Diese Anleitung erklärt, wie Sie Ihren Furby starten, mit ihm spielen, ihn stylen und mit Freunden verbinden. Erfahren Sie mehr über die verschiedenen Spielmodi, Furby's Sprache und erhalten Sie Tipps zur Fehlerbehebung für stundenlangen interaktiven Spaß.</p>
	<p><a href="#">Furby Quick Start Guide: Easy Setup for Your Interactive Toy</a></p> <p>Get your Furby toy up and running quickly with this simple, step-by-step quick start guide. Learn how to install batteries and activate your Furby for immediate play.</p>
	<p><a href="#">Furby Sewing Pattern - Craft Your Own Toy</a></p> <p>Detailed sewing pattern pieces and instructions for creating a handmade Furby toy. Includes all necessary components for body, face, ears, feet, and optional heart.</p>